

 
Quick Reference Guide

Portable handset

KX-FKN550


- This guide explains some basic features and operations, but not all of them. For further details, see the Japanese operating instructions.
- This product is designed for use in Japan. Panasonic cannot provide service for this product if used outside Japan.
- Any details given in this guide are subject to change without notice.

Finding the controls

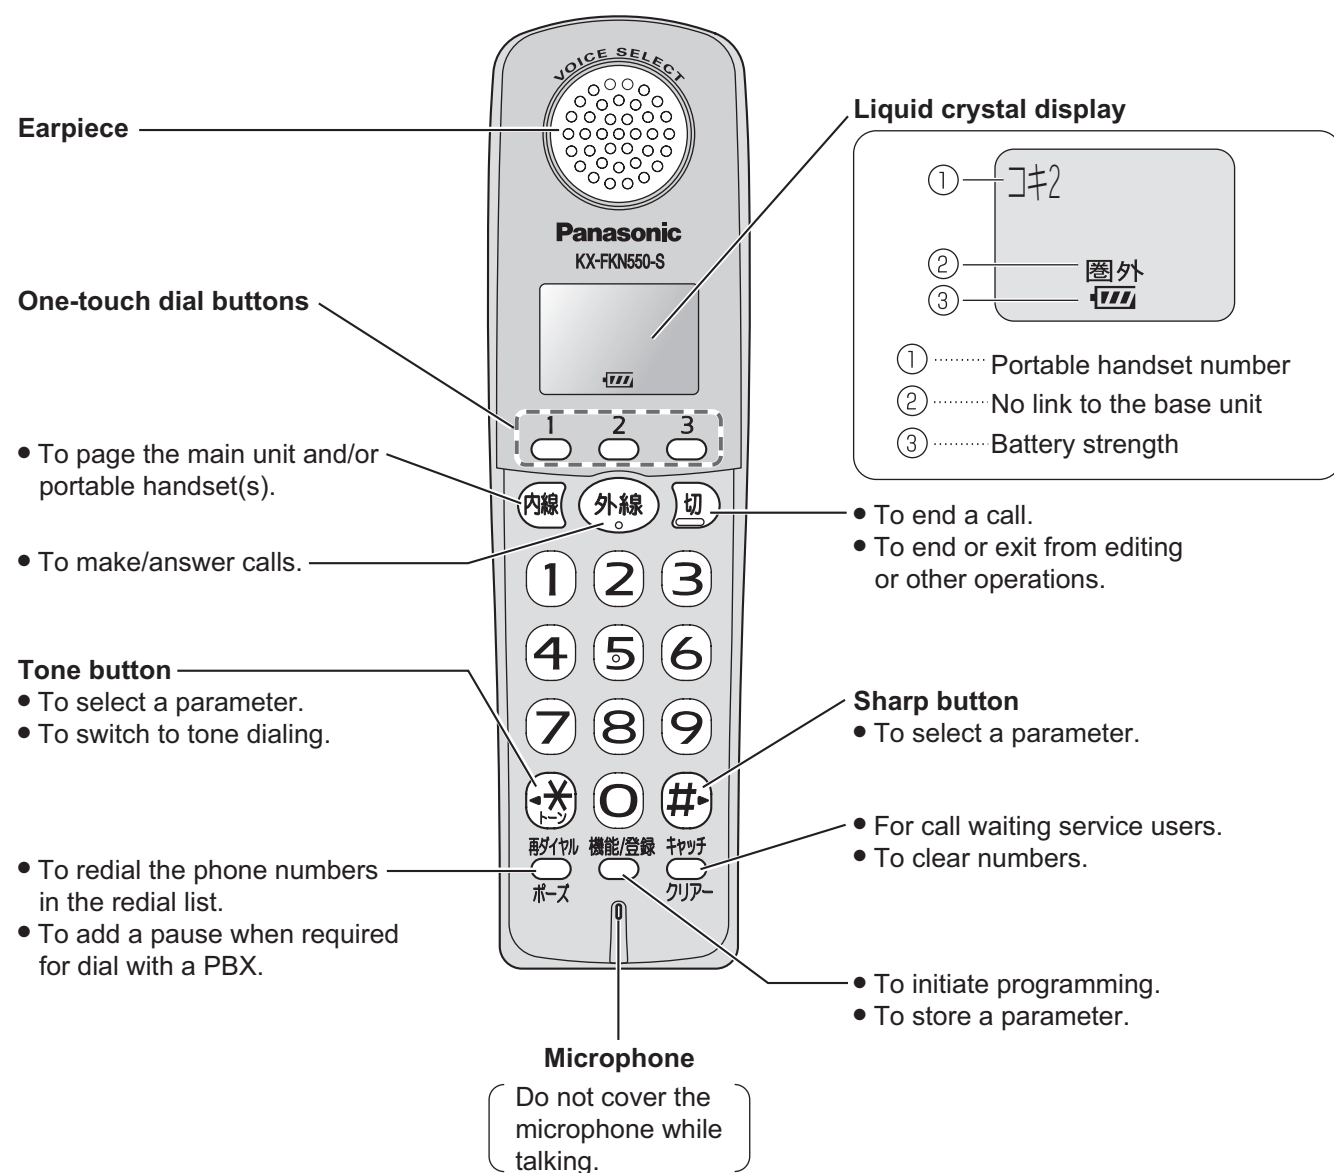


Setting up the portable handset

 
Back view

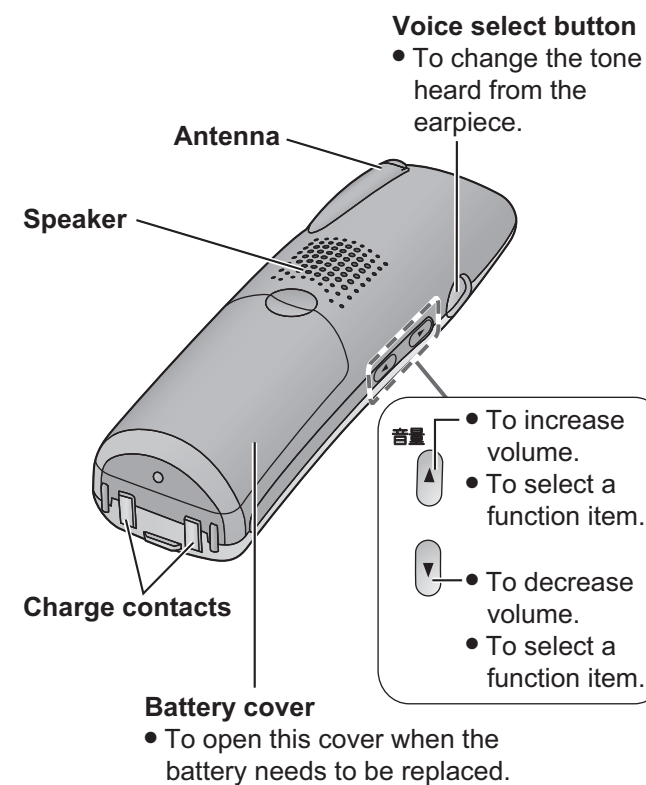

1

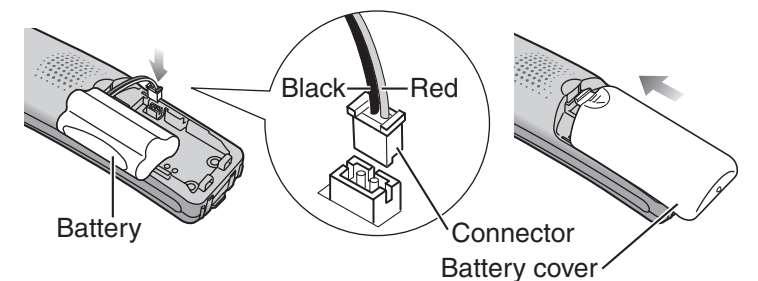 

2

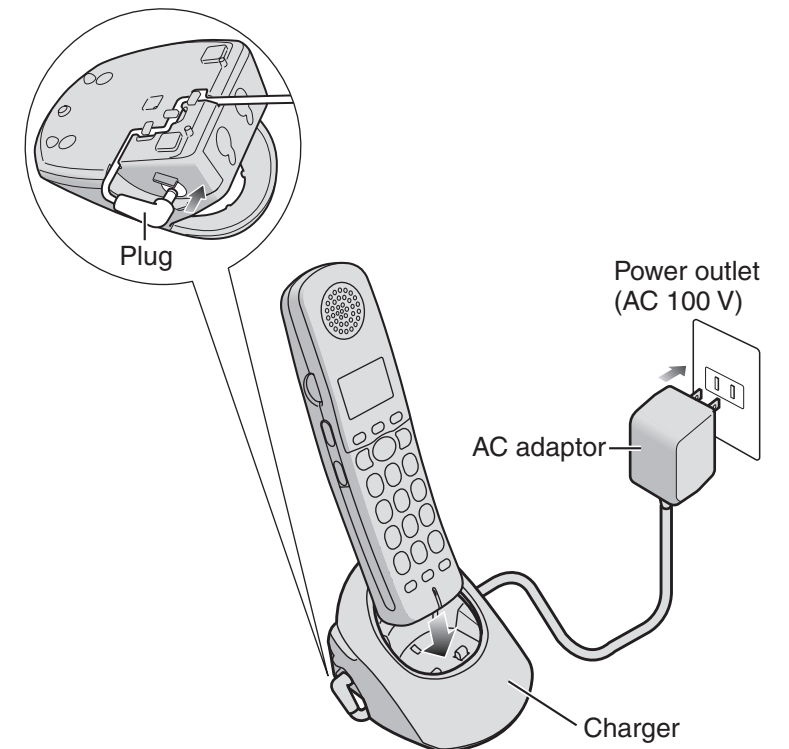 


3

- Charge the battery in the charger for 10 hours.
- After your Panasonic battery is fully charged, it will last up to about 7 hours of conversation.

Battery charger



 Using the one-touch dial

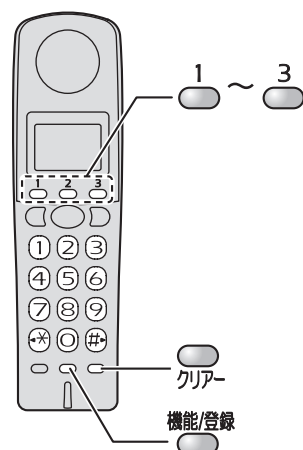

Storing telephone numbers in the one-touch dial

- 1 Press **機能/登録** (Function/Store).
- 2 Press the desired one-touch dial button (1 to 3).
- 3 Enter the telephone number, up to 24 digits.
 - To correct a mistake, press **クリア** (Clear).
- 4 Press **機能/登録** (Function/Store).

Making a voice call using the one-touch dial

- 1 Press the desired one-touch dial button (1 to 3).
 - The unit will start dialing.
- 2 When the other party answers, start talking.

Changing a stored number in the one-touch dial

 
- 1 Press **機能/登録** (Function/Store).
- 2 Press the desired one-touch dial button.
- 3 Enter the new telephone number.
- 4 Press **機能/登録** (Function/Store).

Erasing a stored number in the one-touch dial

- 1 Press **機能/登録** (Function/Store).
- 2 Press the desired one-touch dial button.
- 3 Press **クリア** (Clear).
- 4 Press **機能/登録** (Function/Store).

Intercom

An intercom is available between the portable handsets or between the main unit and portable handset(s).

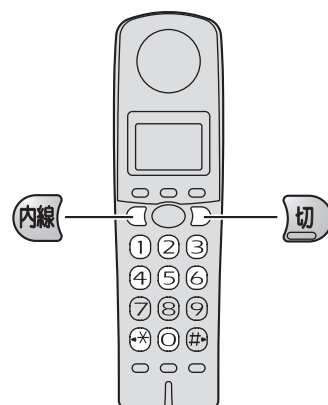

1 ■ For single portable handset users

Press **内線** (Intercom).

■ For multiple portable handset users

 
- ① Press **内線** (Intercom).
- ② Call the main unit and/or portable handset(s) in the following ways:
 - To call a specific portable handset, press the portable handset number (1 to 6) which you want to call.
 - To call the main unit, press **〇**.
 - To call the main unit and all the portable handsets, press ***〇**.

2 Start talking.

3 Press **切** (Off) to end the intercom call.

Receiving faxes

If your main unit is a facsimile machine, you can receive faxes using the portable handset.

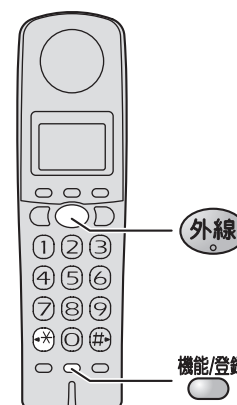

1 When you hear a ring, lift the portable handset from the charger to answer the call.

- If the portable handset is not set on the charger, press **外線** (Talk).

2 When:

- document reception is required,
- a fax calling tone (slow beep) is heard, or
- no sound is heard,

Press **機能/登録** (Function/Store), then press ***〇**.

Specifications

Portable handset

Power supply	Ni-MH battery (Part no. KX-FAN50) DC 3.6 V, 600 mAh
Dimensions	Approx. 171 x 48 x 38 mm
Mass (Weight)	Approx. 160 g (Battery installed)
Operating environment	5 °C–35 °C, 45 %–85 % RH (Relative Humidity)
Battery life	While in use (talking): Approx. 7 hours While not in use (standby): Approx. 150 hours
Battery charge	Approx. 10 hours

Battery charger

Power supply	AC adaptor (Part no. PFAP1009) AC 100 V (50 Hz/60 Hz) DC 7.5 V, 100 mA
Power consumption	Charging: Approx. 1.5 W Stand by: Approx. 0.6 W
Dimensions	Approx. 65 x 86 x 96 mm
Mass (Weight)	Approx. 75 g
Operating environment	5 °C–35 °C, 45 %–85 % RH (Relative Humidity)