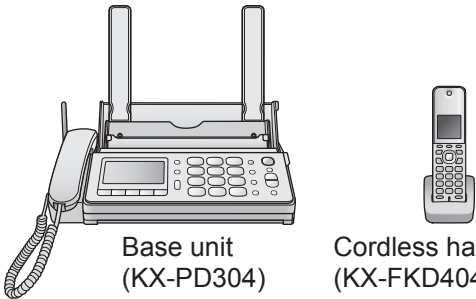 
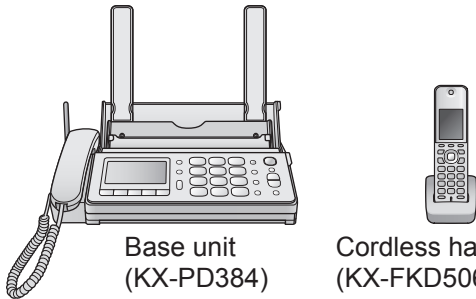 


Quick Reference Guide

Facsimile

Model No. **KX-PD304DL** **KX-PD384DLE2**
KX-PD304DW **KX-PD384DWE2**

<p>KX-PD304DL/KX-PD304DW</p>  <p>Base unit (KX-PD304)</p> <p>Cordless handset (KX-FKD404)</p>	<p>KX-PD384DLE2/KX-PD384DWE2</p>  <p>Base unit (KX-PD384)</p> <p>Cordless handset (KX-FKD506)</p>
---	--

- KX-PD304DL/KX-PD384DLE2 includes 1 cordless handset and 1 base unit.
- KX-PD304DW/KX-PD384DWE2 includes 2 cordless handsets and 1 base unit.

Table of Contents


Parts Descriptions	2
Basic Operations	3

Thank you for purchasing a Panasonic product.

- This guide explains some basic features and operations, but not all of them. For further details, see the Japanese operating instructions.
- This product is designed for use in Japan.
Panasonic cannot provide service for this product if used outside Japan.
- Any details given in this guide are subject to change without notice.


Parts Descriptions

 Base unit

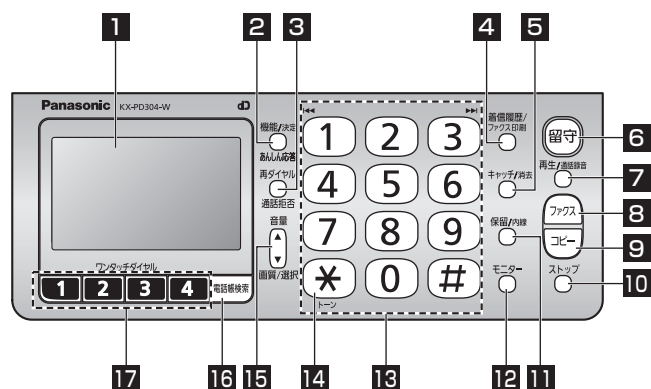


- 1 Liquid crystal display
- 2 Function/Set/Secure button
- 3 Redial/Block button
- 4 Caller ID Log/Fax Print button & indicator
- 5 Flash/Clear button
- 6 Auto Answer button & indicator
- 7 Playback/Call Record button
- 8 Fax button
- 9 Copy button
- 10 Stop button
- 11 Hold/Intercom button
- 12 Monitor button
- 13 Numeral/Character buttons
- 14 Tone button (to switch to DTMF tone)
- 15 Volume control/Resolution/Select button
- 16 Search phonebook button
- 17 One-touch Dial buttons

 Cordless handset

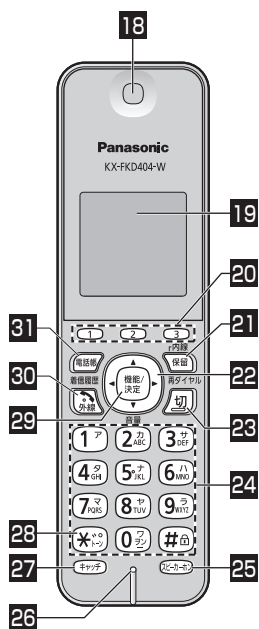

Backside View

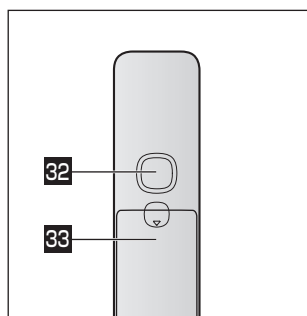 

- 18 Earpiece
- 19 Liquid crystal display
- 20 Multi-operation/One-touch Dial buttons
- 21 Hold/Intercom button
- 22 Caller ID button (着信履歴)
- Redial button (再ダイヤル)
- Volume control button (音量)
- 23 Off button
- 24 Numeral/Character buttons
- 25 Speakerphone button
- 26 Microphone
- 27 Flash button
- 28 Tone button (to switch to DTMF tone)
- 29 Function/Set button
- 30 Talk button
- 31 Phone book button
- 32 Speaker
- 33 Battery cover

Basic Operations

- The number after the button shows the location of the button described in the previous page.

Base unit

■ To make a call

Lift the handset. → Dial the phone number **[13]**.
→ Talk.

■ To receive a call

When the phone rings, lift the handset. → Talk.

- When:

- document reception is required,
 - a fax calling tone (slow beep) is heard, or
 - no sound is heard,
- press **[ファクス]** (Fax: **[8]**).

■ To place the current call on hold

Press **[保留]** (Hold: **[11]**) during a call. (You can place the handset on the base unit.)

■ To retrieve the held call

- If you have returned the handset on the base unit, lift the handset.
- If you have not returned the handset on the base unit, press **[保留]**.

■ To transfer the held call to the cordless handset

Press **[保留]** → **[#]** during a call. (→ When you use multiple cordless handsets, press **[1] - [6]** (Intercom No.).) → Place the handset on the base unit when the other party answers.

■ To use TAM (Telephone Answering Machine)

When you leave home, press **[留守]** (Auto answer: **[6]**) to turn on the indicator. (To deactivate, press **[留守]** again to turn off the indicator.)

→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages. Then, the **[留守]** indicator starts flashing.

→ When you return home, press **[留守]** to play back the messages. The **[留守]** indicator turns off and the answering mode is deactivated.

After playing back the messages, press **[✕]** (**[14]**) twice to erase the messages or press **[#]** to keep the messages.

To play back all messages while TAM is deactivated, press **[再生]** (Playback: **[7]**).

After playing back the messages, press **[✕]** twice to erase the messages or press **[#]** to keep the messages.

*Up to 50 messages can be recorded for approx. 12 minutes in total.

■ To hear recorded messages while away from home (Remote control)

Preparation before you leave home

Store a remote control number.

With the handset placed on the base unit, press

[機能] (Function: **[2]**) → **[#]** **[0]** **[0]** **[6]** → **[決定]** (Set: **[2]**). → Enter the desired 4-digit number.

→ Press **[決定]**, then press **[ストップ]** (Stop: **[10]**).

When you leave home, press **[留守]** to turn on the indicator.

To hear messages

Dial your home phone number. → While the outgoing message is played back, enter your remote control number. → Announcement. → Press **[4]**. → You will hear recorded messages if any.

NOTE

- This operation can be made only from telephones which can send DTMF signals.

Cordless handset

■ To make a call

Lift the cordless handset from the charger and press **[外線]** (Talk: **[30]**). → Dial the phone number **[24]**. → Talk. → To end the call, place the cordless handset on the charger or press **[切]** (Off: **[23]**).

■ To receive a call

When the phone rings, lift the cordless handset from the charger and press **[外線]**. → Talk. → To end the call, place the cordless handset on the charger or press **[切]**.

- When:

- document reception is required,
- a fax calling tone (slow beep) is heard, or
- no sound is heard,

press **[機能]** (Function: **[29]**) → **[▼]** **[▲]** (**[22]**) to select “ファクス ジュシン” or “ファクス受信”
→ **[決定]** (Set: **[29]**) → **[はい]** (Yes: **[20]**).

■ To make a call using the speakerphone (Hands-free talk)

Press **[スピーカーホン]** (Speakerphone: **[25]**).

→ Dial the phone number. → Talk to the microphone (**[26]**). → To end the call, place the cordless handset on the charger or press **[切]**.

- Speak clearly about 50 cm away from the microphone.
- Speak alternately with the other party. The sound may cut in and out if you both speak at the same time.

■ To receive a call with the speakerphone (Hands-free talk)

When the phone rings, press **[スピーカーホン]**. → Talk to the microphone. → To end the call, place the cordless handset on the charger or press **[切]**.

 
■ **To place the current call on hold**
Press **【保留】** (Hold: **21**) during a call.

■ **To retrieve the held call**
Press **【保留】** .

■ **To transfer the held call to the base unit**
Press **【保留】** → **【#】** during a call. (→ When you use multiple cordless handsets, press **【0】**.)
→ Press **【切】** when the other party answers.

■ **To transfer the held call to another cordless handset**
Press **【保留】** → **【#】** during a call. → Press **【1】 - 【6】** (Intercom No.). → Press **【切】** when the other party answers.

■ Installing recording paper

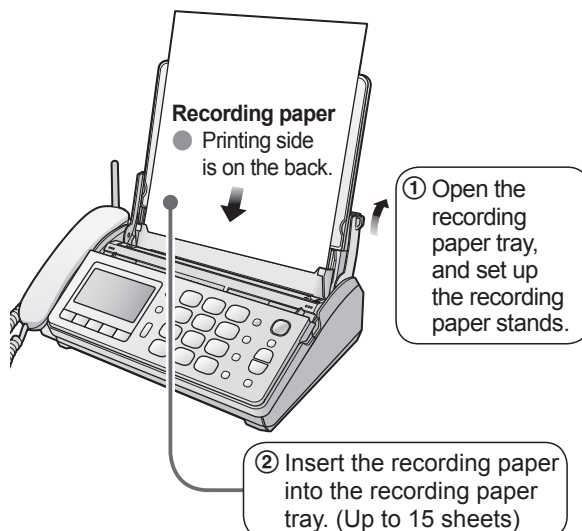

Sending faxes/Copying documents

■ **Sending faxes**
Press **【ファクス】** (Fax: **8**). → Insert the document. → Dial the fax number. → Press **【ファクス】** .

■ **Copying documents**
Insert the recording paper. → Insert the document. → Press **【コピー】** (Copy: **9**).

■ Installing document

