 


Quick Reference Guide

Facsimile

Model No. **KX-PD503DL**
KX-PD503DW

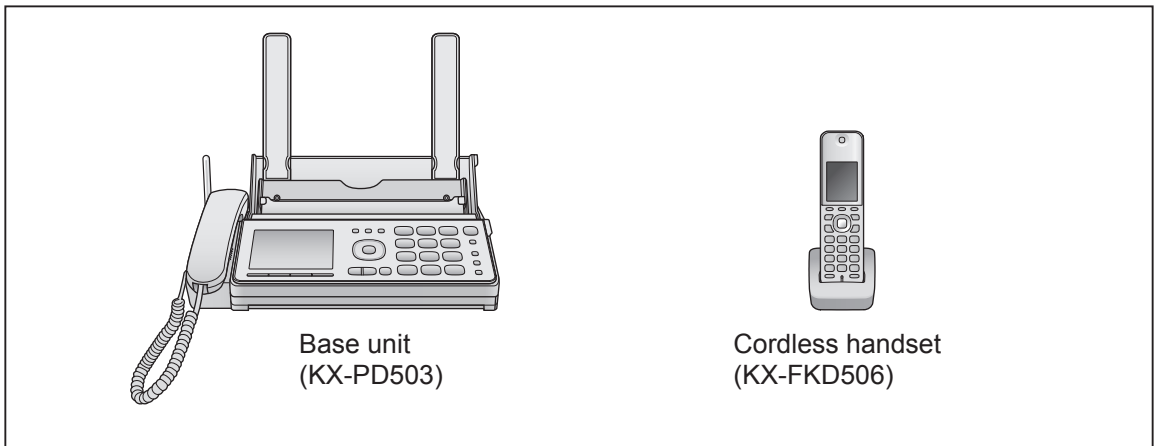

- KX-PD503DL includes 1 cordless handset and 1 base unit.
- KX-PD503DW includes 2 cordless handsets and 1 base unit.

Table of Contents


Parts Descriptions	2
Basic Operations	3

Thank you for purchasing a Panasonic product.

- This guide explains some basic features and operations, but not all of them. For further details, see the Japanese operating instructions.
- This product is designed for use in Japan.
Panasonic cannot provide service for this product if used outside Japan.
- Any details given in this guide are subject to change without notice.


Parts Descriptions

 Base unit

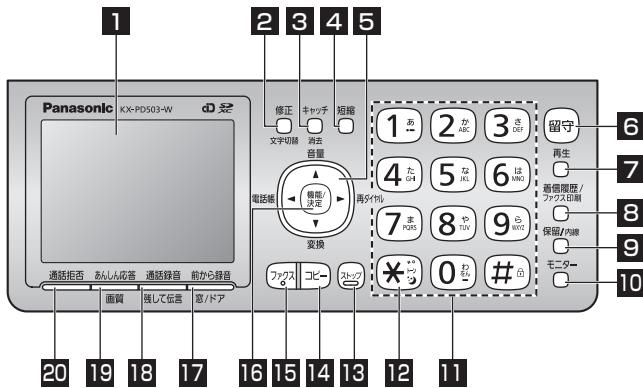

- 1** Liquid crystal display
- 2** Edit/Character entry mode button
- 3** Flash/Clear button
- 4** Speed Dialer button
- 5** Phone book button (電話帳)
- 6** Redial button (再ダイヤル)
- 7** Volume control button (音量)
- 8** Auto Answer button & indicator
- 9** Playback button
- 10** Caller ID Log/Fax Print button & indicator
- 11** Hold/Intercom button
- 12** Monitor button
- 13** Numeral/Character buttons
- 14** Tone button (to switch to DTMF tone)
- 15** Stop button
- 16** Copy button
- 17** Fax button
- 18** Function/Set button
- 19** Enhanced Record/Window/Door sensor button
- 20** Call Record/Voice Memo button
- 21** Secure/Resolution button
- 22** Block button

 Cordless handset

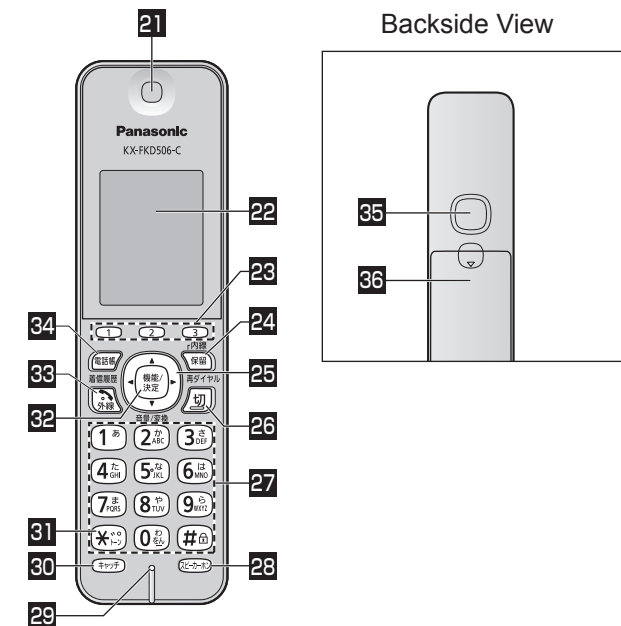

- 21** Earpiece
- 22** Liquid crystal display
- 23** Multi-operation/One-touch Dial buttons
- 24** Hold/Intercom button
- 25** Caller ID button (着信履歴)
- 26** Redial button (再ダイヤル)
- 27** Volume control button (音量/変換)
- 28** Off button
- 29** Numeral/Character buttons
- 30** Speakerphone button
- 31** Microphone
- 32** Flash button
- 33** Tone button (to switch to DTMF tone)
- 34** Function/Set button
- 35** Talk button
- 36** Phone book button
- 37** Speaker
- 38** Battery cover

Basic Operations

- The number after the button shows the location of the button described in the previous page.

Base unit

■ To make a call

Lift the handset. → Dial the phone number (11).
→ Talk.

■ To receive a call

When the phone rings, lift the handset. → Talk.

- When:

- document reception is required,
- a fax calling tone (slow beep) is heard, or
- no sound is heard, press 【ファクス】 (Fax: 15).

■ To place the current call on hold

Press 【保留】 (Hold: 9) during a call. (You can place the handset on the base unit.)

■ To retrieve the held call

- If you have returned the handset on the base unit, lift the handset.
- If you have not returned the handset on the base unit, press 【保留】.

■ To transfer the held call to the cordless handset

Press 【保留】 → # during a call. (→ When you use multiple cordless handsets, press 1 - 6 (Intercom No.) → Place the handset on the base unit when the other party answers.

■ To use TAM (Telephone Answering Machine)

When you leave home, press 【留守】 (Auto answer: 6) to turn on the indicator. (To deactivate, press 【留守】 again to turn off the indicator.)

→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages. Then, the 【留守】 indicator starts flashing.

→ When you return home, press 【留守】 to play back the messages. The 【留守】 indicator turns off and the answering mode is deactivated.

After playing back the messages, press ✕ (12) twice to erase the messages or press # to keep the messages.

To play back all messages while TAM is deactivated, press 【再生】 (Playback: 7) → 【▼】 【▲】 (5) to select “すべて再生” → 【決定】 (Set: 16).

After playing back the messages, press ✕ twice to erase the messages or press # to keep the messages.

*Up to 50 messages can be recorded for approx. 12 minutes in total.

■ To hear recorded messages while away from home (Remote control)

Preparation before you leave home

Store a remote control number.

With the handset placed on the base unit, press 【機能】 (Function: 16) → # 0 0 0 6 → 【決定】. → Enter the desired 4-digit number. → Press 【決定】, then press 【ストップ】 (Stop: 13).

When you leave home, press 【留守】 to turn on the indicator.

To hear messages

Dial your home phone number. → While the outgoing message is played back, enter your remote control number. → Announcement. → Press 4. → You will hear recorded messages if any.

NOTE

- This operation can be made only from telephones which can send DTMF signals.

Cordless handset

■ To make a call

Lift the cordless handset from the charger and press 【外線】 (Talk: 33). → Dial the phone number (27). → Talk. → To end the call, place the cordless handset on the charger or press 【切】 (Off: 26).

■ To receive a call

When the phone rings, lift the cordless handset from the charger and press 【外線】. → Talk. → To end the call, place the cordless handset on the charger or press 【切】.

- When:

- document reception is required,
- a fax calling tone (slow beep) is heard, or
- no sound is heard, press 【機能】 (Function: 32) → 【▼】 【▲】 (25) to select “ファクス受信” → 【決定】 (Set: 32) → 【はい】 (Yes: 23).

■ To make a call using the speakerphone (Hands-free talk)

Press 【スピーカーホン】 (Speakerphone: 28).

→ Dial the phone number. → Talk to the microphone (29). → To end the call, place the cordless handset on the charger or press 【切】.

- Speak clearly about 50 cm away from the microphone.
- Speak alternately with the other party. The sound may cut in and out if you both speak at the same time.

■ To receive a call with the speakerphone (Hands-free talk)

When the phone rings, press 【スピーカーホン】. → Talk to the microphone. → To end the call, place the cordless handset on the charger or press 【切】.

■ To place the current call on hold

Press 【保留】 (Hold: 24) during a call.

■ To retrieve the held call

Press 【保留】 .

 
■ To transfer the held call to the base unit

Press 【保留】 → 【#】 during a call. (→ When you use multiple cordless handsets, press 【0】.)
→ Press 【切】 when the other party answers.

■ To transfer the held call to another cordless handset

Press 【保留】 → 【#】 during a call. → Press 【1】 - 【6】 (Intercom No.). → Press 【切】 when the other party answers.

■ Installing recording paper

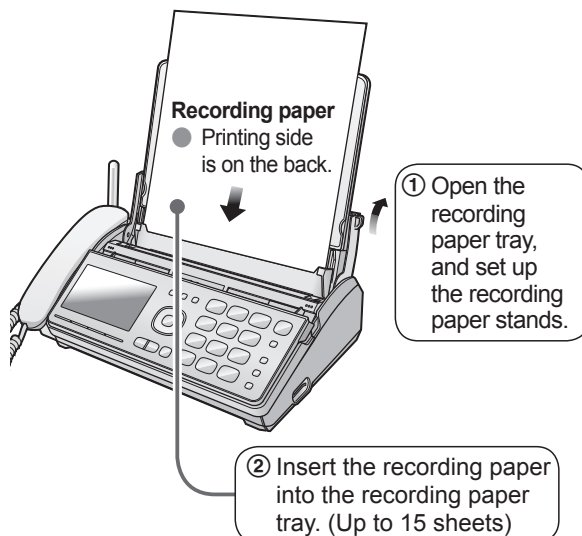

Sending faxes/Copying documents

■ Sending faxes

Press 【ファクス】 (Fax: 15). → Insert the document. → Dial the fax number. → Press 【ファクス】 .

■ Copying documents

Insert the recording paper. → Insert the document. → Press 【コピー】 (Copy: 14).

■ Installing document

