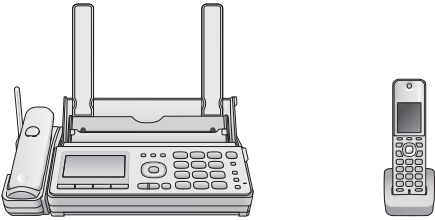 
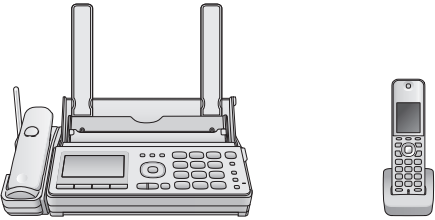 


Quick Reference Guide

Facsimile

Model No. **KX-PD552DL** **KX-PD583DLE2**
KX-PD552DW **KX-PD583DE2**
KX-PD552D

KX-PD552DL/KX-PD552DW/KX-PD552D	KX-PD583DLE2/KX-PD583DE2
 <p data-bbox="150 971 294 1029">Base unit (KX-PD552)</p> <p data-bbox="150 1045 418 1103">Main cordless handset (KX-FKD353)</p> <p data-bbox="450 971 662 1064">Personal cordless handset (KX-FKD506)</p>	 <p data-bbox="724 971 868 1029">Base unit (KX-PD583)</p> <p data-bbox="724 1045 991 1103">Main cordless handset (KX-FKD354)</p> <p data-bbox="1023 971 1236 1064">Personal cordless handset (KX-FKD507)</p>

- KX-PD552DL/KX-PD583DLE2 includes 1 main cordless handset, 1 personal cordless handset and 1 base unit.
- KX-PD552DW includes 1 main cordless handset, 2 personal cordless handsets and 1 base unit.
- KX-PD552D/KX-PD583DE2 includes 1 main cordless handset and 1 base unit.

Table of Contents


Parts Descriptions	2
Basic Operations	3

Thank you for purchasing a Panasonic product.

- This guide explains some basic features and operations, but not all of them. For further details, see the Japanese operating instructions.
- This product is designed for use in Japan.
Panasonic cannot provide service for this product if used outside Japan.
- Any details given in this guide are subject to change without notice.


Parts Descriptions

 Base unit

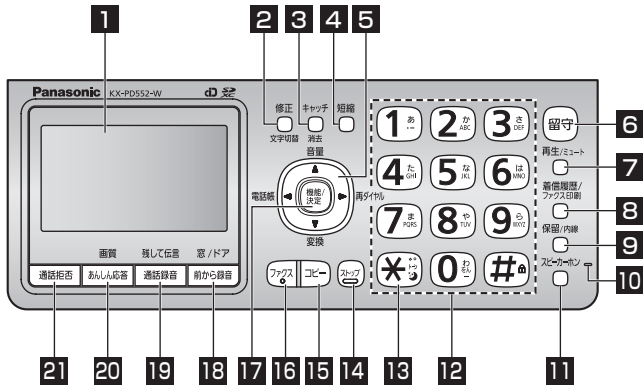

- 1** Liquid crystal display
- 2** Edit/Character entry mode button
- 3** Flash/Clear button
- 4** Speed Dialer button
- 5** Phone book button (電話帳)
- 6** Redial button (再ダイヤル)
- 7** Volume control button (音量)
- 8** Auto Answer button & indicator
- 9** Playback/Mute button
- 10** Caller ID Log/Fax Print button & indicator
- 11** Hold/Intercom button
- 12** Microphone
- 13** Speakerphone button
- 14** Numeral/Character buttons
- 15** Tone button (to switch to DTMF tone)
- 16** Stop button
- 17** Copy button
- 18** Fax button
- 19** Function/Set button
- 18** Window/Door sensor/Enhanced Record button
- 19** Voice Memo/Call Record button
- 20** Resolution/Secure button
- 21** Block button

 Main cordless handset/Personal cordless handset

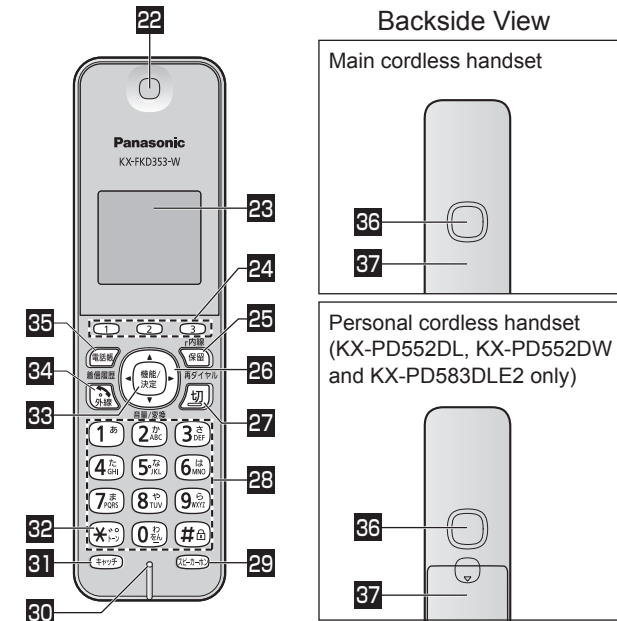

- 22** Earpiece
- 23** Liquid crystal display
- 24** Multi-operation/One-touch Dial buttons
- 25** Hold/Intercom button
- 26** Caller ID button (着信履歴)
- 27** Redial button (再ダイヤル)
- 28** Volume control button (音量/変換)
- 29** Off button
- 30** Numeral/Character buttons
- 31** Speakerphone button
- 32** Microphone
- 33** Flash button
- 34** Tone button (to switch to DTMF tone)
- 35** Function/Set button
- 36** Talk button
- 37** Phone book button
- 38** Speaker
- 39** Battery cover

Basic Operations

- The number after the button shows the location of the button described in the previous page.
- Main cordless handset can be used in the distance like a personal cordless handset.
- Operate the base unit to use the main cordless handset.

Base unit

■ To make a call

Lift the main cordless handset. → Dial the phone number (12). → Talk. → To end the call, place the main cordless handset on the base unit or press 【切】 (Off: 27).

■ To receive a call

When the phone rings, lift the main cordless handset. → Talk. → To end the call, place the main cordless handset on the base unit or press 【切】.

- When:
 - document reception is required,
 - a fax calling tone (slow beep) is heard, or
 - no sound is heard,Press 【ファクス】 (Fax: 16).

■ To place the current call on hold

Press 【保留】 (Hold: 25) during a call with the main cordless handset. (You can place the main cordless handset on the base unit.)

■ To retrieve the held call

- If you have returned the main cordless handset on the base unit, lift the main cordless handset.
- If you have not returned the main cordless handset on the base unit, press 【保留】.

■ To transfer the held call to the personal cordless handset

Press 【保留】 → 【#】 during a call. → Press 【1】 - 【5】 (Intercom No.). → Press 【切】 when the other party answers.

■ To use TAM (Telephone Answering Machine)

When you leave home, press 【留守】 (Auto answer: 6) to turn on the indicator. (To deactivate, press 【留守】 again to turn off the indicator.)
→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages. Then, the 【留守】 indicator starts flashing.
→ When you return home, press 【留守】 to play back the messages. The 【留守】 indicator turns off and the answering mode is deactivated.

After playing back the messages, press 【✕】 (13) twice to erase the messages or press 【#】 to keep the messages.

To play back all messages while TAM is deactivated, press 【再生】 (Playback: 7) → 【▼】 【▲】 (5) to select “すべて再生” → 【決定】 (Set: 17).

After playing back the messages, press 【✕】 twice to erase the messages or press 【#】 to keep the messages.

*Up to 50 messages can be recorded for approx. 12 minutes in total.

■ To hear recorded messages while away from home (Remote control)

Preparation before you leave home

Store a remote control number.

With the main cordless handset placed on the base unit, press 【機能】 (Function: 17) → 【#】 【0】 【0】 【6】 → 【決定】. → Enter the desired 4-digit number. → Press 【決定】, then press 【ストップ】 (Stop: 14).

When you leave home, press 【留守】 to turn on the indicator.

To hear messages

Dial your home phone number. → While the outgoing message is played back, enter your remote control number. → Announcement. → Press 【4】. → You will hear recorded messages if any.

NOTE

- This operation can be made only from telephones which can send DTMF signals.

Personal cordless handset

(KX-PD552DL, KX-PD552DW and KX-PD583DLE2 only)

■ To make a call

Lift the personal cordless handset from the charger and press 【外線】 (Talk: 34). → Dial the phone number (28). → Talk. → To end the call, place the personal cordless handset on the charger or press 【切】.

■ To receive a call

When the phone rings, lift the personal cordless handset from the charger and press 【外線】. → Talk. → To end the call, place the personal cordless handset on the charger or press 【切】.

- When:
 - document reception is required,
 - a fax calling tone (slow beep) is heard, or
 - no sound is heard,Press 【機能】 (Function: 33) → 【▼】 【▲】 (26) to select “ファクス受信” → 【決定】 (Set: 33) → 【はい】 (Yes: 24).

■ **To make a call using the speakerphone (Hands-free talk)**

Press **【スピーカーホン】** (Speakerphone: **29**).
→ Dial the phone number. → Talk to the microphone (**30**). → To end the call, place the personal cordless handset on the charger or press **【切】**.

■ **To receive a call with the speakerphone (Hands-free talk)**

When the phone rings, press **【スピーカーホン】**.
→ Talk to the microphone. → To end the call, place the personal cordless handset on the charger or press **【切】**.

■ **To place the current call on hold**

Press **【保留】** (Hold: **25**) during a call.

■ **To retrieve the held call**

Press **【保留】**.

 
■ **To transfer the held call to the base unit**

Press **【保留】** → **【#】** during a call. → Press **【0】**.
→ Press **【切】** when the other party answers.

■ **To transfer the held call to the main cordless handset or another personal cordless handset**

Press **【保留】** → **【#】** during a call. → Press **【1】 - 【6】** (Intercom No.). → Press **【切】** when the other party answers.

■ **Installing recording paper**

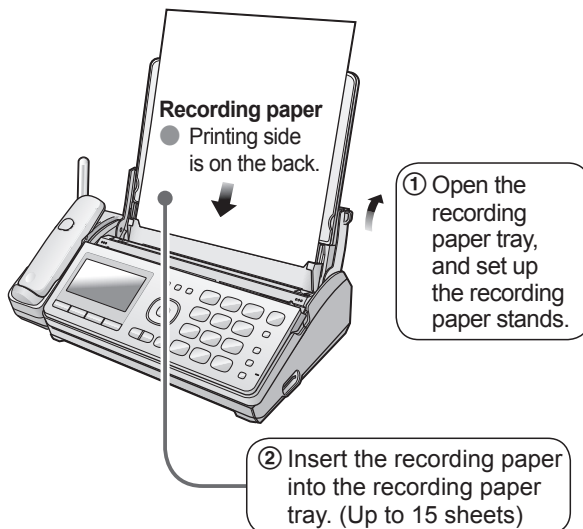

Sending faxes/Copying documents

■ **Sending faxes**

Press **【ファクス】** (Fax: **16**). → Insert the document. → Dial the fax number. → Press **【ファクス】**.

■ **Copying documents**

Insert the recording paper. → Insert the document. → Press **【コピー】** (Copy: **15**).

■ **Installing document**

