 


Quick Reference Guide

Facsimile

Model No. **KX-PD703UD** **KX-PD703SL**
KX-PD703UW **KX-PD703SW**

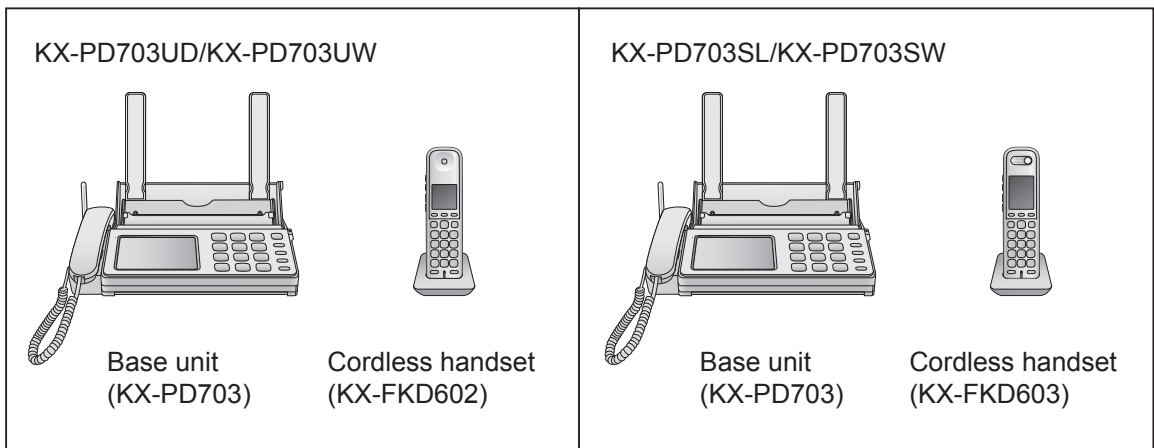

- KX-PD703UD/KX-PD703SL includes 1 cordless handset and 1 base unit.
- KX-PD703UW/KX-PD703SW includes 2 cordless handsets and 1 base unit.

Table of Contents


Parts Descriptions	2
Basic Operations	3

Thank you for purchasing a Panasonic product.

- This guide explains some basic features and operations, but not all of them. For further details, see the Japanese operating instructions.
- This product is designed for use in Japan.
Panasonic cannot provide service for this product if used outside Japan.
- Any details given in this guide are subject to change without notice.


Parts Descriptions

 Base unit

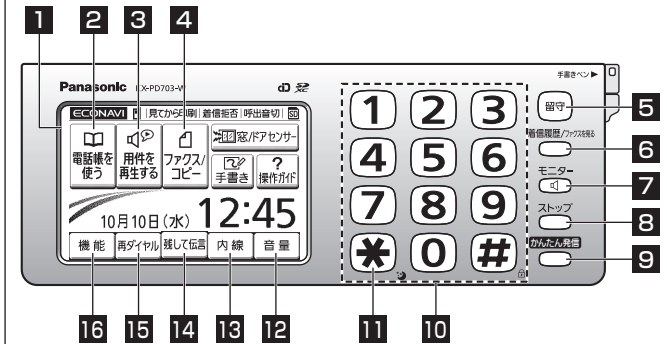

- 1** Touch panel
- 2** Phone book
- 3** Playback
- 4** Fax/Copy
- 5** Auto Answer button & indicator
- 6** Caller ID Log/Fax Print button & indicator
- 7** Monitor button
- 8** Stop button
- 9** Speed Dialer button
- 10** Numeral/Character buttons
- 11** Tone button (to switch to DTMF tone)
- 12** Volume control
- 13** Intercom
- 14** Voice Memo
- 15** Redial
- 16** Function

 Cordless handset

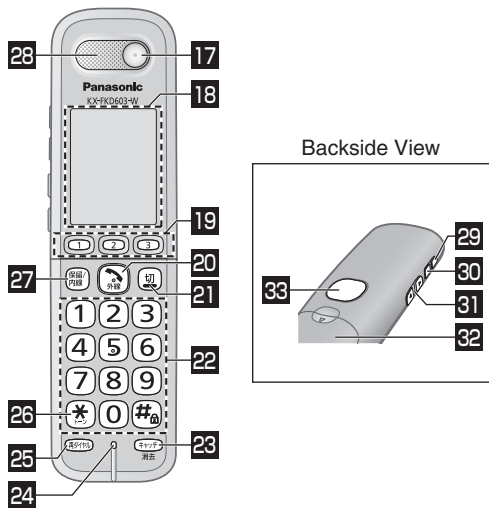

- 17** Heat sensor
(KX-PD703SL, KX-PD703SW only)
- 18** Liquid crystal display
- 19** One-touch Dial buttons
- 20** Talk button
- 21** Off button
- 22** Numeral buttons
- 23** Flash/Clear button
- 24** Microphone
- 25** Redial button
- 26** Tone button (to switch to DTMF tone)
- 27** Hold/Intercom button
- 28** Earpiece
- 29** Function/Set button
- 30** Search phonebook button
- 31** Volume control button
Select button
- 32** Battery cover
- 33** Speaker

- The number after the button shows the location of the button described in the previous page.

Base unit

■ To make a call

Lift the handset. → Dial the phone number (10).
→ Talk.

■ To receive a call

When the phone rings, lift the handset. → Talk.

- When:

- document reception is required,
- a fax calling tone (slow beep) is heard, or
- no sound is heard,

Touch **キャッチ・ファクスなど** (Flash/Fax: 16)

→ **ファクス** (Fax).

■ To place the current call on hold

Touch **保留 / 内線** (Hold/Intercom: 12) during a call.

(You can place the handset on the base unit.)

■ To retrieve the held call

- If you have returned the handset on the base unit, lift the handset.
- If you have not returned the handset on the base unit, touch **保留** (Hold: 12).

■ To transfer the held call to the cordless handset

Touch **保留 / 内線** (Hold/Intercom: 12) →

内線 (Intercom: 13) during a call. → When you use multiple cordless handsets, press

1 - 6 (Intercom No.). → Place the handset on the base unit when the other party answers.

■ To use TAM (Telephone Answering Machine)

When you leave home, press **留守** (Auto answer: 5) to turn on the indicator.

(To deactivate, press **留守** again to turn off the indicator.)

→ When receiving a call while TAM is activated, it answers the call automatically in Japanese, and records the incoming messages.

Then, the **留守** indicator starts flashing.

→ When you return home, press **留守** to play back the messages.

The **留守** indicator turns off and the answering mode is deactivated.

After playing back the messages, touch **はい** (Yes: 14) twice to erase the messages or touch

いいえ (No: 12) to keep the messages.

To play back all messages while TAM is

deactivated, touch **用件を再生する** (Playback:

3) → **すべて再生する** (Playback all).

After playing back the messages, touch **はい** (Yes: 14) twice to erase the messages or touch **いいえ** (No: 12) to keep the messages.

*Up to 50 messages can be recorded for approx. 12 minutes in total.

■ To hear recorded messages while away from home (Remote control)

Preparation before you leave home

Store a remote control number.

With the handset placed on the base unit, touch

機能 (Function: 16) → press **#0006**.

→ Enter the desired 4-digit number. → Touch

決定 (Set: 14), then press **ストップ**

(Stop: 3). When you leave home, press **留守**

to turn on the indicator.

To hear messages

Dial your home phone number. → While the outgoing message is played back, enter your remote control number.

→ Announcement. → Press **4**. → You will hear recorded messages if any.

NOTE

- This operation can be made only from telephones which can send DTMF signals.

Cordless handset

■ To make a call

Lift the cordless handset from the charger. →

Dial the phone number (22). → Talk. → To end the call, place the cordless handset on the charger or press **切** (Off: 21).

■ To receive a call

When the phone rings, lift the cordless handset from the charger. → Talk. → To end the call, place the cordless handset on the charger or press **切**.

- When:

- document reception is required,
- a fax calling tone (slow beep) is heard, or
- no sound is heard,

Press **機能** (Function: 29) → **▼** **▲** (31)

to select “**ファクス受信**” → **決定** (Set: 29)

→ *****.

■ To place the current call on hold

Press **保留** (Hold: 27) during a call.

■ To retrieve the held call

Press **保留**.

■ To transfer the held call to the base unit

Press **【保留】** → **【#】** during a call. (→ When you use multiple cordless handsets, press **【0】**.)

→ Place the cordless handset on the charger, or press **【切】** when the other party answers.

■ To transfer the held call to another cordless handset

Press **【保留】** → **【#】** during a call. → Press **【1】** - **【6】**

(Intercom No.). → Place the cordless handset on the charger, or press **【切】** when the other party answers.

Sending faxes/Copying documents

■ Sending faxes

Touch **ファクス / コピー** (Fax/Copy: **4**), then touch

ファクスを送る (Fax). → Insert the document. →

Dial the fax number. → Touch **ファクス** (Fax: **13**).

 
■ Copying documents

Insert the recording paper. → Touch **ファクス / コピー**

(Fax/Copy: **4**), then touch **コピーをする** (Copy). →

Insert the document. → Touch **コピー** (Copy: **13**).

■ Installing document

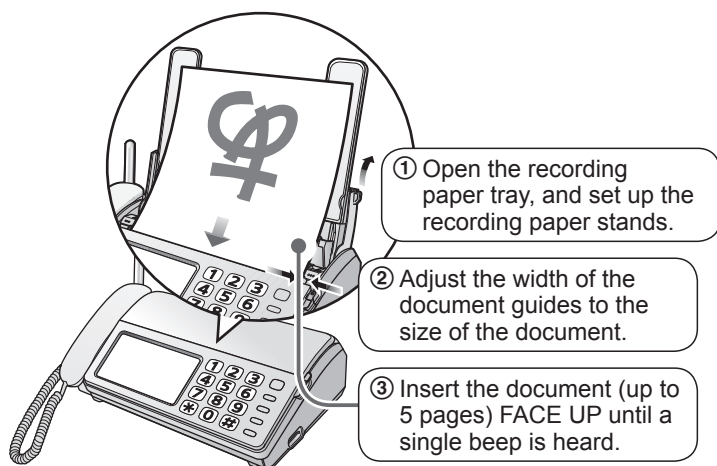

■ Installing recording paper

