

Panasonic

Facsimile with Cordless Phone

Quick Reference Guide



KX-PW36CL

Model No.

KX-PW36CLW

KX-PW36CL has one portable handset.
KX-PW36CLW has two portable handsets.

Thank you for purchasing a Panasonic facsimile.


Table of Contents

Finding the controls	2
Installations and connections	4
Setting the date and time	6
Setting your facsimile telephone number	6
Setting your logo	7
Automatic dialing on the main unit	8
Automatic dialing on the portable handset	9
Sending faxes	10
Receiving faxes	11
Operating the built-in answering device	13
Operating the hand scanner	14
Individual e-mail services	16
Specifications	Back cover

- This guide explains some basic features and operations, but not all of them. For further details, see the Japanese operating instructions.
- This product is designed for use in Japan only.
Use of this product in some other countries may violate local laws.
Panasonic does not provide service for this product if it is used in any foreign country.
- Any details given in this guide are subject to change without notice.

Finding the controls


Main unit (control panel)

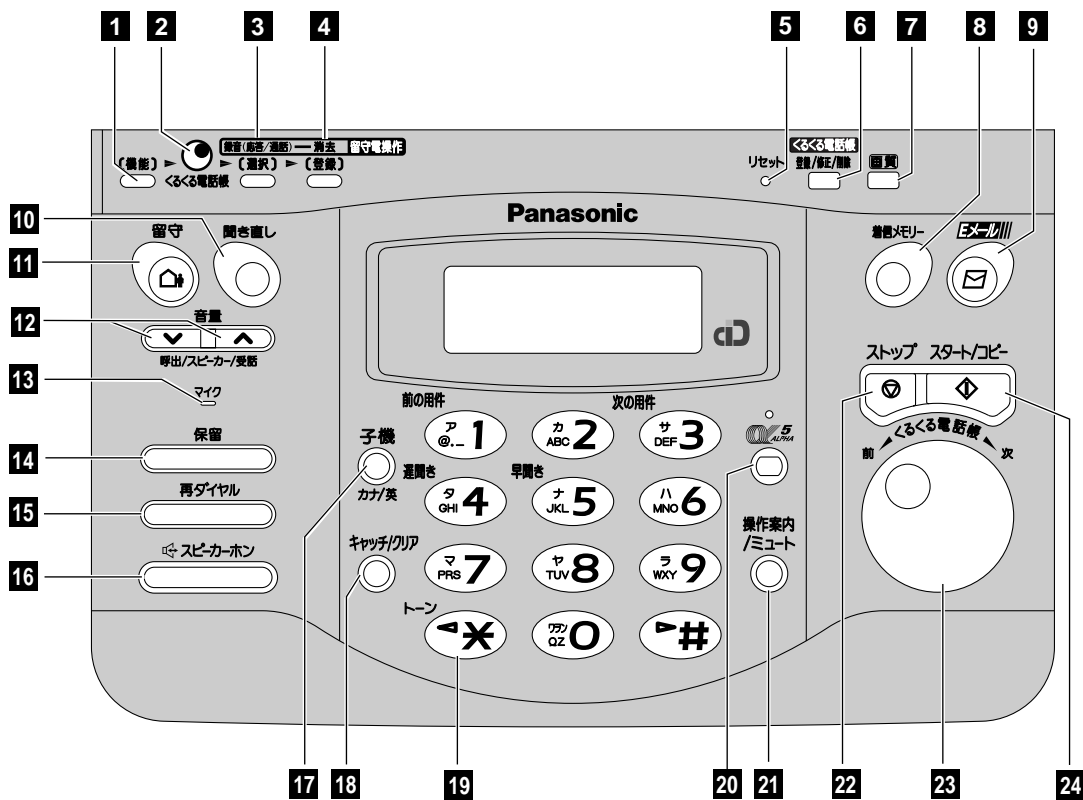

- 1** **Function** button initiates programming.
- 2** Indicates to rotate the search dial.
- 3** **Select** button selects feature settings.
Record button records greeting message.
- 4** **Register** button stores a parameter.
Erase button erases a recorded message.
- 5** **Reset** key
- 6** **Store/Edit/Delete** button for search dial.
- 7** **Resolution** button selects the resolution when faxing or copying.
- 8** **Call memory** button & indicator store the caller ID of an incoming call.
- 9** **E-mail** button
- 10** **Replay** button listens to recorded messages.
- 11** **Auto answer** button
—light on: answering device activated.
—light off: used as a telephone.
- 12** **Volume** buttons adjust ringer, speaker and handset volume.
- 13** **Microphone**
- 14** **Hold** button
- 15** **Redial/Pause** button
- 16** **Speakerphone** button
- 17** **Intercom** button/**Character input mode** button
- 18** **Flash/Clear** button
- 19** **Tone** button switches to tone dialing.
- 20** **α-ALPHA5** button accesses α5 services.
- 21** **Operation guide/Mute** button
- 22** **Stop** button
- 23** **Search dial** searches in the directory or displays programming features.
- 24** **Start/Copy** button starts faxing or copying.

Finding the controls

Portable handset

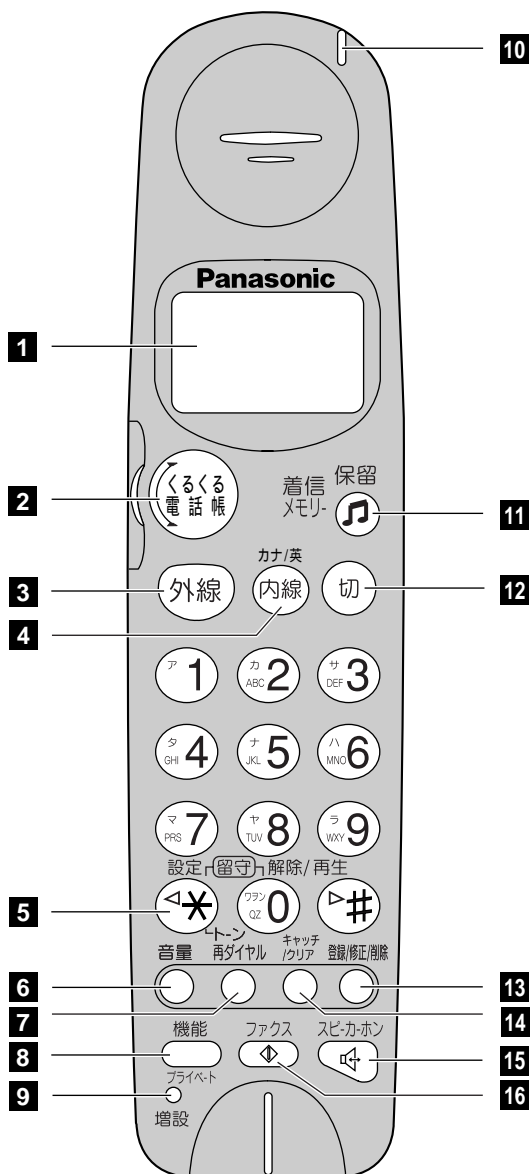

- 1** LC display with back light
- 2** Search dial searches in the directory.
- 3** Talk button
- 4** Intercom button/Character input mode button
- 5** Tone button switches to tone dialing.
- 6** Volume button adjusts ringer, speaker and portable handset volume.
- 7** Redial/Pause button
- 8** Function button initiates programming.
- 9** Additional portable handset installation key
- 10** Call/Charge indicator
- 11** Hold button/Call memory indicator
- 12** Off button
- 13** Store/Edit/Delete button for search dial.
- 14** Flash/Clear button
- 15** Speakerphone button
- 16** Fax reception button


Installations and connections

Installing the recording paper sub-tray




Installing the film cassette


- 1** Press down the control panel open lever (①) and pull up the control panel. Press down the inner cover open lever (green) in the direction shown by the arrow (②).

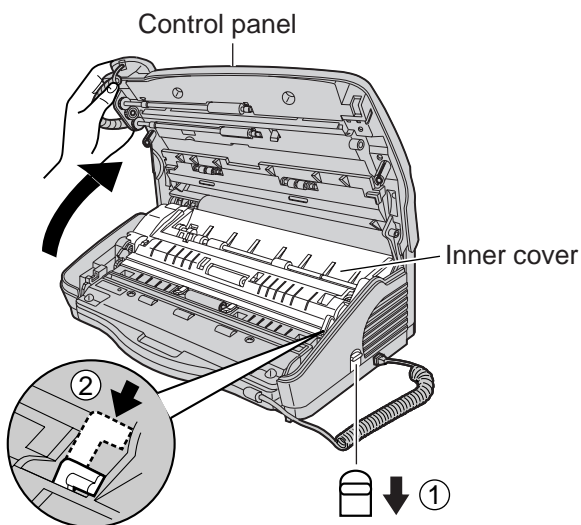


- 2** Open the inner cover.

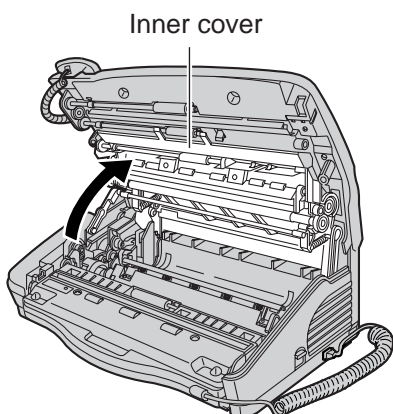


- 3** Prepare the film cassette.
- Remove the film cassette from the protection bag.
 - If there is any slack in the ink film, tighten the film by rotating the gear.

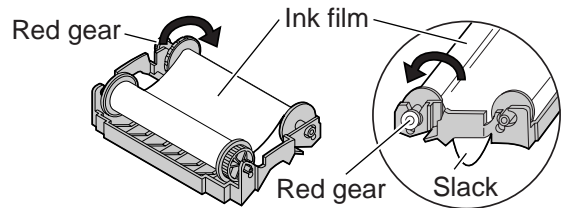


- Turn over the film cassette.

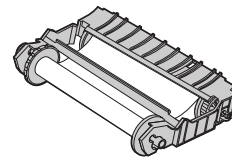


- 4** Put the film cassette into the main unit.

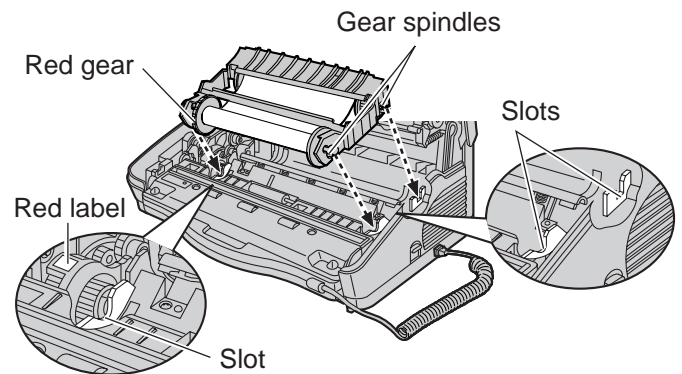

- 5** Close the inner cover by pressing down the parts firmly on both sides of the inner cover.

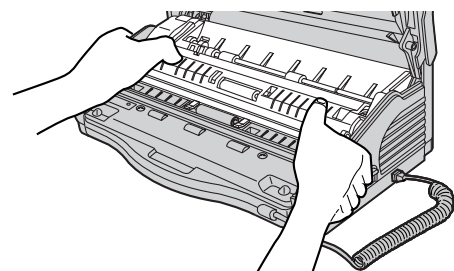


- 6** Close the control panel by pressing down both sides.

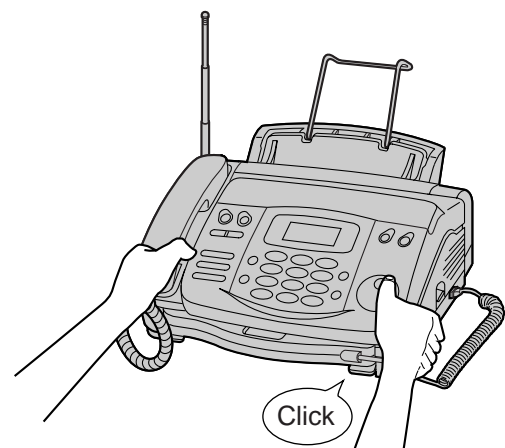


Installations and connections

Installing plain paper


- 1 Open the recording paper cover by pulling it toward you.

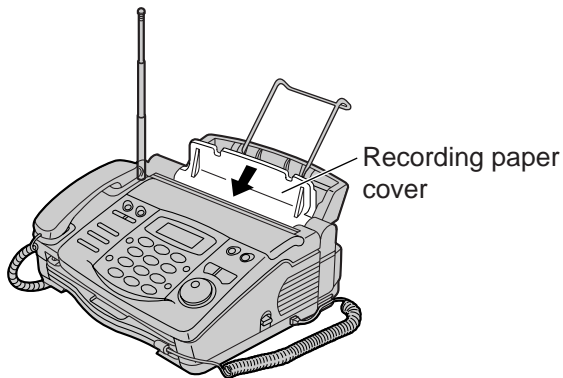

- 2 Fan the stack of paper and insert it into the recording paper tray.

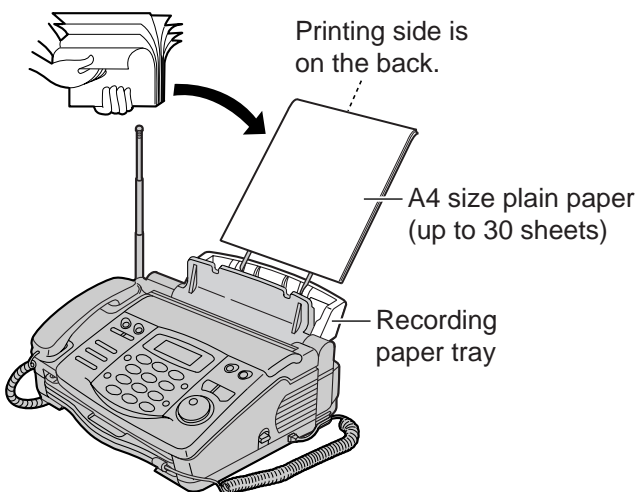

- 3 Close the recording paper cover by leaning it back.

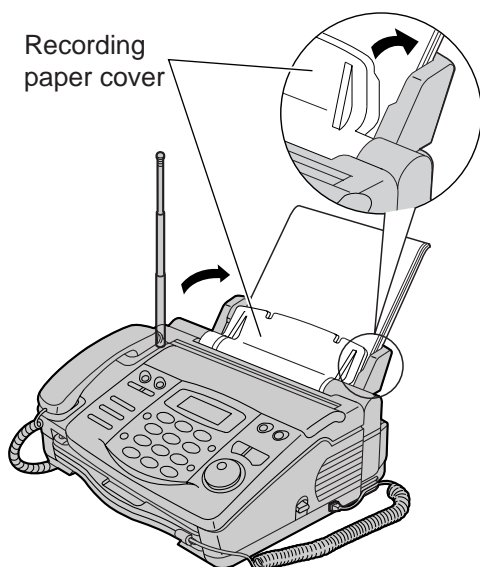


Connecting the main unit

- 1 Extend the antenna and raise it vertically.
 - 2
 - 3
 - 4
-
- Click
- Click
- Click
- Telephone line jack
- Power outlet (AC 100 V)

Setting up the portable handset


- 1
 - 2
 - 3 Charge the battery in the charger for 10 hours.
-
- Power outlet (AC 100 V)
- Charger
- AC adaptor
- Plug
- Battery
- Connector
- Battery cover
- Black - Red

Charge indicator
-lights red: while charging.
-lights green: charging completed.

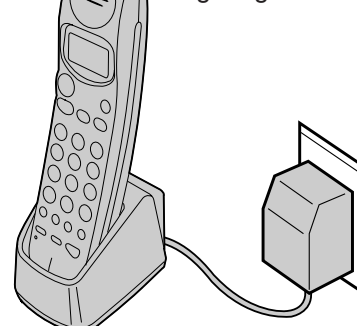

- After your Panasonic battery is fully charged, it will last up to about 7 hours of conversation.

Setting the date and time

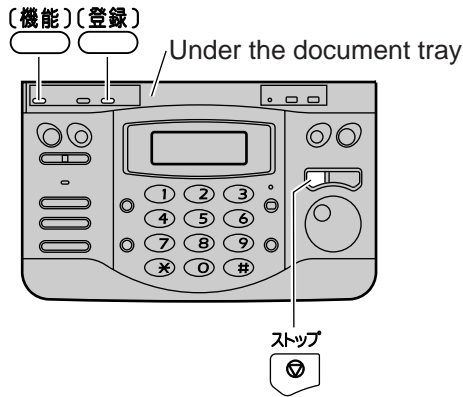

1 Press **機能** (Function).

キノウ トウロク モード'

2 Press **#0001**.

Example : 2000年 01月 01日
[トウロク]
Cursor

3 Enter the correct year/month/day.

Example: Sept. 10, 2000

Press **2000 09 10**

2000年 09月 10日
[トウロク]

4 Press **登録** (Register).

シ'コク 00:00
[トウロク]

5 Enter the correct hour/minute in a 24-hour clock entry.

Example: 15:45 (3:45 PM)

Press **15 45**

シ'コク 15:45
[トウロク]

6 Press **登録** (Register).

トウロク シマシタ




2000年 09月 10日
[トウロク]

7 Press **ストップ** (Stop).

9月 10日 15:45
ヨウケン ロクオン 00ケン

Setting your facsimile telephone number

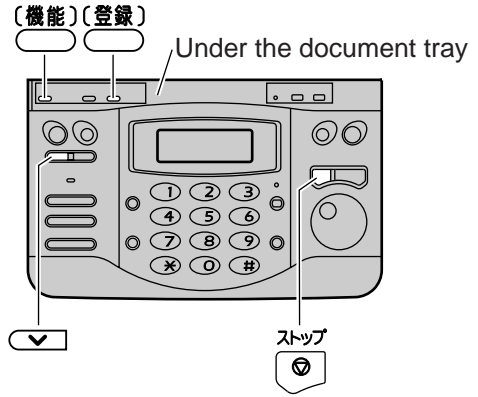

1 Press **機能** (Function).

キノウ トウロク モード'

2 Press **#0004**.

TEL=.....
Cursor

3 Enter your facsimile telephone number, up to 20 digits.

Example: 098 765 4321

TEL=8 765 4321

The **☐** (Space) button replaces the digit with a space.

4 Press **登録** (Register).


トウロク シマシタ



TEL=098 765 432

5 Press **ストップ** (Stop).

Setting your logo

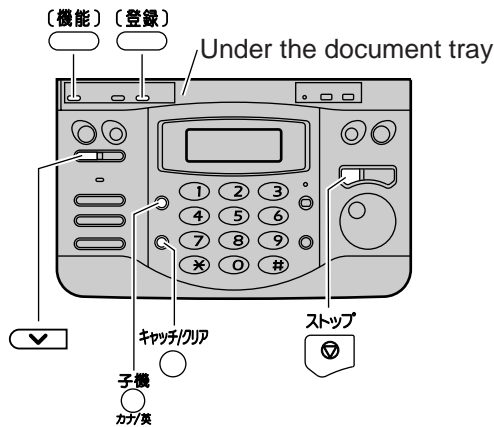

1 Press **[機能]** (Function).

キノウ トウロク モード'

2 Press **ⓂⓂⓂⓂ**.

ナマエ =

3 Enter your logo, up to 30 characters, using the dial keypad.

- To enter English characters easily, press **子機** (Character input mode) repeatedly and select “英” (English input mode).
- For details, see below.

Example: Micah

1. Press **⑥** once.

ナマエ = M
Cursor

2. Press **④** six times.

ナマエ = Mi

3. Press **②** six times.

ナマエ = Mic

4. Press **Ⓜ** to move the cursor to the next space and press **②** four times.

ナマエ = Mica

5. Press **④** five times

ナマエ = Micah

4 Press **[登録]** (Register).

トウロク シマシタ



ナマエ = Micah


5 Press **ストップ** (Stop).

Character input and command key table

Character	Pressing the dial keys will select a character as shown below.			
	“カナ” Katakana	“英” English	Numbers	Symbols
Dial key ①	アイウエオアイウエオ		1	@ . - _ \$ % & = ~ ^
②	カキクケコ	A B C a b c	2	
③	サシスセソ	D E F d e f	3	
④	タチツテトッ	G H I g h i	4	
⑤	ナニヌネノ	J K L j k l	5	
⑥	ハヒフヘホ	M N O m n o	6	
⑦	マミムメモ	P R S p r s	7	
⑧	ヤユヨヤユヨ	T U V t u v	8	
⑨	ラリルレロ	W X Y w x y	9	
⑩	ワラン` °	Q Z q z	0	() , ¥ ; : • * # / [] { } “ ’ ? ! 「 」
Command keys	子機 (Main unit), 内線 (Portable handset)		Used to change the character input mode.	
	Ⓜ (Both main unit and portable handset)		Used to move the cursor to the right.	
	Ⓜ (Both main unit and portable handset)		Used to move the cursor to the left.	
	キャッチ/クリア (Main unit), キヤッチ/クリア (Portable handset)		Used to delete a character.	
	音量 (Main unit), 音量 (Portable handset)		Used to insert a space.	

Automatic dialing on the main unit

Storing names and telephone numbers in the search dial

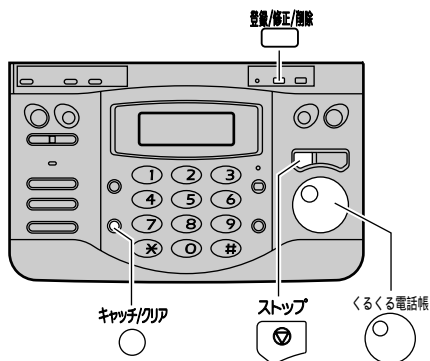


- 1 Press (Store).
 - “XX” shows the remaining station numbers you can store.
 - You can program up to 99 stations, including the pre-programmed items.
- | | | | | | | | | | | |
|---|---|---|---|---|---|---|---|----|---|---|
| テ | ソ | ワ | チ | ヨ | ウ | ア | キ | XX | ケ | ン |
|---|---|---|---|---|---|---|---|----|---|---|

↓

ナ	マ	エ	=
---	---	---	---
- 2 Enter the name, up to 12 characters (see the table on page 7 for instructions).
 - 3 Press (Store).
 - 4 Enter the telephone number, up to 30 digits.
 - To correct a mistake, press (Clear).
 - 5 Press (Store).
 - To store a second or third number, repeat steps 4–5.
 - 6 Press (Store).
 - 7 If necessary, enter the group number (1–4).
 - 8 Press (Store).
 - To program other items, repeat steps 2–8.
 - 9 Press (Stop) to exit the program.

Making a voice call using the search dial

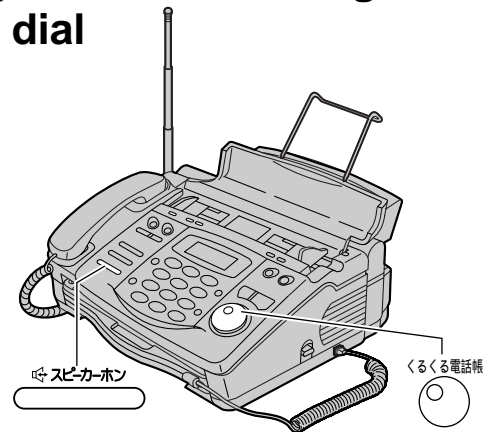

- 1 Rotate the (Search dial) until the desired name is displayed.
- 2 Lift the handset or press (Speakerphone).


Editing a stored name or number

- 1 Rotate the (Search dial) until the desired name is displayed.
 - 2 Press (Edit).
 - 3 Press .
 - If you do not need to edit the name, skip to step 5.
 - 4 Edit the name (see the table on page 7 for instructions).
 - 5 Press (Store).
 - If you do not need to edit the telephone number, skip to step 7.
 - 6 Enter the correct telephone number.
 - 7 Press (Store).
 - If you want to edit the second or third telephone number, repeat steps 6–7.
 - 8 Press (Store) repeatedly until the following is displayed.
 - If you do not need to change the group number, skip to step 10.
- Example :**

ケ	ル	フ	°	=	1
[1 - 4、トウロク]					
- 9 If necessary, enter the correct group number.
 - 10 Press (Store).


Automatic dialing on the portable handset

Storing names and telephone numbers in the search dial

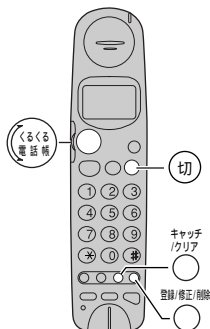

- 1 Press (Store).
 - “XX” shows the remaining station numbers you can store.
 - You can program up to 99 stations, including the pre-programmed items.
- | | | | | | | | | | |
|---|---|---|---|---|---|---|---|---|---|
| テ | ン | ワ | チ | ョ | ウ | ト | ウ | ロ | ク |
| ア | キ | × | × | メ | ケ | ン | | | |
| ナ | マ | エ | ? | | | | | | |
- 2 Enter the name, up to 12 characters (see the table on page 7 for instructions).
 - 3 Press (Store).
 - 4 Enter the telephone number, up to 30 digits.
 - To correct a mistake, press (Clear).
 - 5 Press (Store).
 - To store a second or third number, repeat steps 4–5.
 - 6 Press (Store).
 - 7 If necessary, enter the group number (1–4).
 - 8 Press (Store).
 - To program other items, repeat steps 2–8.
 - 9 Press (Off) to exit the program.

Making a voice call using the search dial

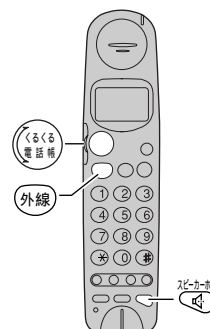


- 1 Rotate the (Search dial) until the desired name is displayed.
- 2 Press (Talk) or press (Speakerphone).


 

Editing a stored name or number

- 1 Rotate the (Search dial) until the desired name is displayed.
 - 2 Press (Edit).
 - 3 Press .
 - If you do not need to edit the name, skip to step 5.
 - 4 Edit the name (see the table on page 7 for instructions).
 - 5 Press (Store).
 - If you do not need to edit the telephone number, skip to step 7.
 - 6 Enter the correct telephone number.
 - 7 Press (Store).
 - If you want to edit the second or third telephone number, repeat steps 6–7.
 - 8 Press (Store) repeatedly until the following is displayed.
 - If you do not need to change the group number, skip to step 10.
- | | | | | | | | |
|---|---|---|---|----|----|---|----|
| ク | ル | フ | = | 1 | | | |
| 1 | - | 4 | テ | セン | タク | | |
| ト | ウ | ロ | ク | テ | セ | ツ | テイ |
- 9 If necessary, enter the correct group number.
 - 10 Press (Store).


Sending faxes


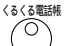 

Sending a fax manually

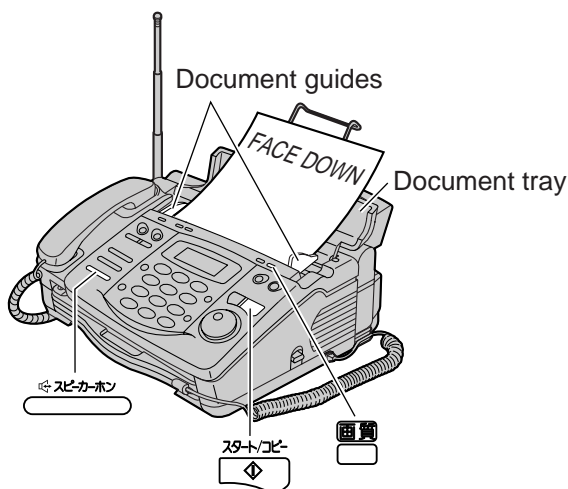


- 1 Open the document tray, and adjust the width of the document guides to the size of the document.
- 2 Insert the document (up to 5 pages) FACE DOWN until a single beep is heard.
- 3 If necessary, press  (Resolution) repeatedly to select the desired setting (see below).
- 4 Lift the handset or press  (Speakerphone).
- 5 Dial the fax number.
- 6 When a fax tone is heard, press  (Start).
- 7 Replace the handset if you are using it.
 - The unit will start fax transmission.

Sending a fax using the search dial

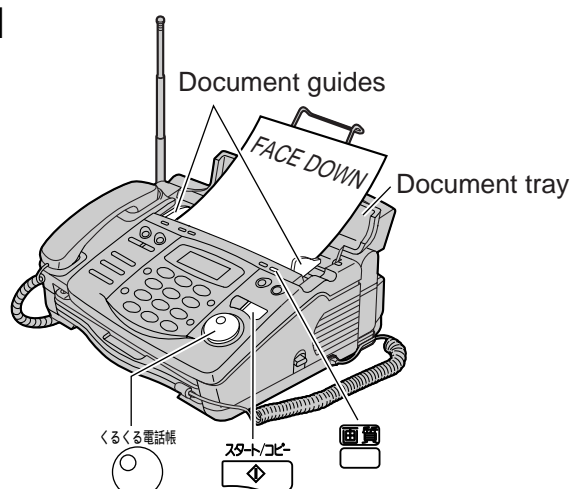

- 1 Open the document tray, and adjust the width of the document guides to the size of the document.
- 2 Insert the document (up to 5 pages) FACE DOWN until a single beep is heard.
- 3 If necessary, press  (Resolution) repeatedly to select the desired setting (see below).
- 4 Rotate the  (Search dial) until the desired name is displayed.
- 5 Press  (Start).
 - The unit will start fax transmission.


To select the resolution

Select the desired resolution according to the type of document, by pressing  (Resolution).

- | | |
|--------------|---|
| カ` シツ = フツウ | (Standard) for printed or typewritten originals with normal-sized characters. |
| カ` シツ = チイサイ | (Fine) for originals with minute printing. |
| カ` シツ = シャシン | (Photo) for originals containing photographs. |

Receiving faxes

Receiving a fax manually (AUTO ANSWER off)

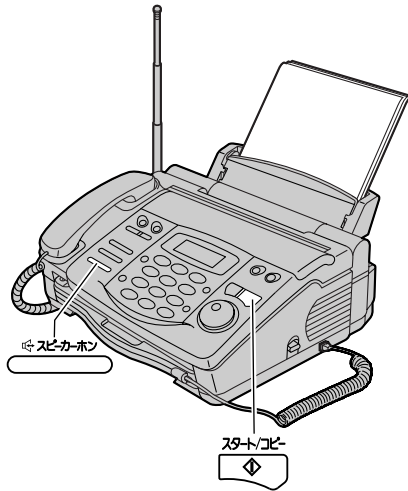

Using the main unit:


- 1 When you hear a ring, lift the handset or press (Speakerphone) to answer the call.
- 2 When:
 - document reception is required,
 - a fax calling tone (slow beep) is heard, or
 - no sound is heard,
 press (Start).
- 3 Replace the handset if you are using it.
 - The unit will start fax reception.



Using the portable handset:

- 1 When you hear a ring, press (Talk) or (Speakerphone) to answer the call.
- 2 When:
 - document reception is required,
 - a fax calling tone (slow beep) is heard, or
 - no sound is heard,
 press (Fax reception).
 - The main unit will start fax reception.

Setting AUTO ANSWER mode to off

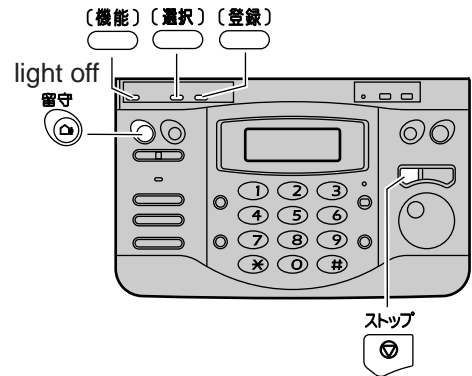

If the (Auto answer) light is on, turn it off by pressing .

When AUTO ANSWER mode is off, the unit provides two types of receiving modes: “テ`ンワユセン” (Telephone) mode and “FAX ヲセン” (Fax/Telephone) mode.

Telephone mode (テ`ンワユセン) –Pre-selected setting:

Select this mode when you plan to answer the calls yourself. When receiving calls, you have to answer all calls manually.

Fax/Telephone mode (FAX ヲセン):

Select this mode when you are near the unit and want to use it to receive voice calls yourself and fax calls automatically.

Change the setting if you want to use this mode.

1. Press (Function).

2. Press .

サ`イタク=テ`ンワユセン
[センタク, トリロク]

means “Telephone mode”

3. Press (Select).

サ`イタク=FAX ヲセン
[センタク, トリロク]


means “Fax/Telephone mode”

4. Press (Register).

5. Press (Stop).


Receiving faxes

Automatic reception

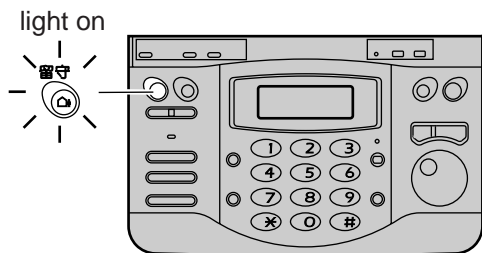

- 1 If the **留守** (Auto answer) light is off, turn it on by pressing **留守**.
- 2 When receiving a call, the unit will receive a fax document or record a voice message automatically depending on the caller's request.


Recording your own greeting message

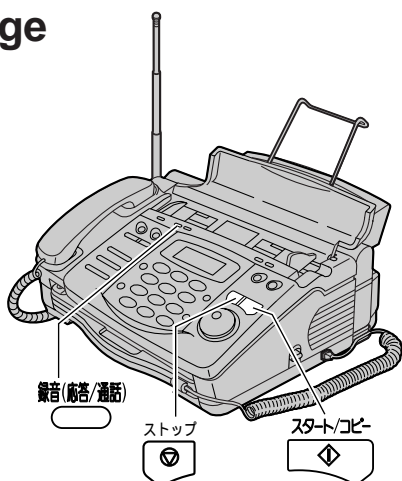

You can record your own greeting message. When receiving a call, it will be played to callers instead of the pre-recorded Japanese greeting message.

- 1 Press **録音(応答/通話)** (Record).
- 2 Lift the handset.
- 3 Press **スタート/コピー** (Start).
- 4 Record your greeting message, up to 16 seconds, using the handset.
- 5 Press **ストップ** (Stop).
- 6 Replace the handset.
 - Your greeting message will be played back automatically.

Setting AUTO ANSWER mode to on

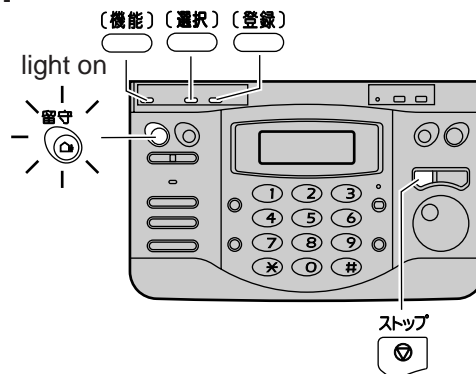

AUTO ANSWER mode will work when the **留守** (Auto answer) light is on.

AUTO ANSWER mode provides three types of receiving modes: "FAX / ルス^テ^ン" (Fax/Answering device) mode, "FAX センヨウ" (Fax only) mode and "ルス^テ^ンセンヨウ" (Answering device only) mode.

Fax/Answering device mode (FAX / ルス^テ^ン)

–Pre-selected setting:

Select this mode when you want to receive all voice and fax calls automatically.

Fax only mode (FAX センヨウ):

Select this mode when you wish to use the unit only as a fax machine.

Answering device only mode (ルス^テ^ンセンヨウ):

Select this mode when you wish to use the unit only as a telephone answering device.

Change the setting if you want to use the fax only mode or answering device only mode.

1. Press **機能** (Function).

2. Press **☎120**.

means "Fax/Answering device mode" — **ルス = FAX / ルス^テ^ン [センタク, トウロク]**

3. Press **選択** (Select) repeatedly.

means "Fax only mode" — **ルス = FAX センヨウ [センタク, トウロク]**


means "Answering device only mode" — **ルス = ルス^テ^ンセンヨウ [センタク, トウロク]**

4. Press **登録** (Register).

5. Press **ストップ** (Stop).

Operating the built-in answering device

Activating the answering device

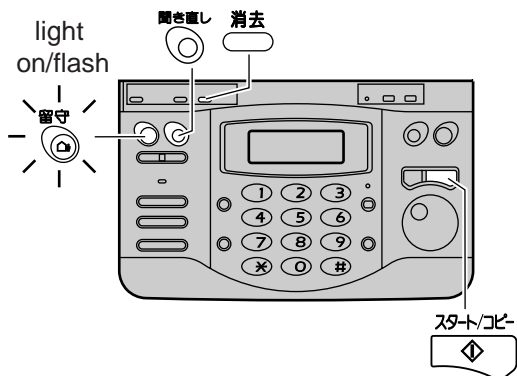

- 1 Turn the (Auto answer) light on by pressing .
- 2 When receiving a call, a greeting message will be played and the unit will record a voice message.
 - To record your own greeting message, see page 12.

Listening to recorded messages

When new messages are recorded, the (Auto answer) light will flash.

Press to listen to recorded messages.

Listening to all of the recorded messages

Press (Replay).

Erasing a specific message

- 1 Press (Erase) while listening to the message you want to erase.
- 2 Press (Start).


Erasing all of the recorded messages

- 1 Press (Erase).
- 2 Press (Start).

Erasing your own greeting message

- 1 Press (Erase) twice.
- 2 Press (Start).
 - The pre-recorded Japanese greeting message will be played when you receive a call.

Operating the answering device from a remote location

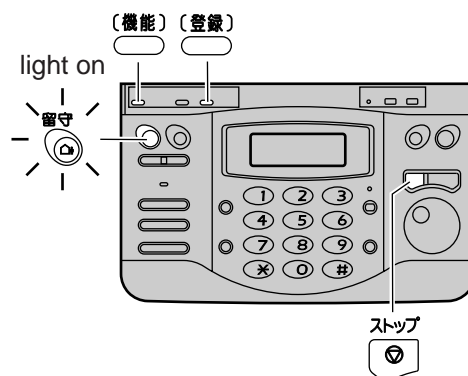

Preparation: Programming the remote operation ID

1. Press (Function).
2. Press .
3. Enter any 4-digit number (remote operation ID) except * or #.
4. Press (Register).
5. Press (Stop).


Operation: Listening to a recorded message from a remote location

Turn the (Auto answer) light on before you go out. Remote operations are available only from a touch tone telephone.


1. Call your unit.
2. Enter the remote operation ID during the greeting message.
3. Press or wait 4 seconds.
 - Only the new recorded messages will be played back.
 - To listen to all the recorded messages, press after the new messages have been played back.

Operating the hand scanner


Scanning a document

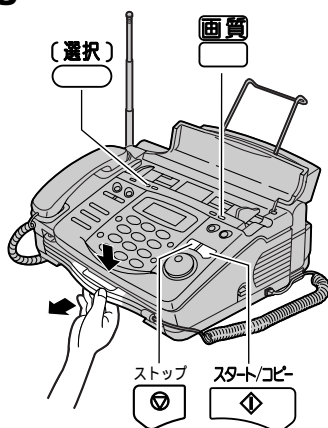

1 Press down the handle of the hand scanner, and pull out the scanner from the main unit. Then, turn over the scanner to start scanning.


2 Press  (Resolution) repeatedly to select the desired resolution.

 
- フツウ (Standard)
- チイサイ (Fine)
- シャシン (Photo)

3 Press  (Select) repeatedly to select the scanning width.

- A4: within 208 mm
- B4: within 252 mm


4 Place the scanning position on the upper left side of the document.

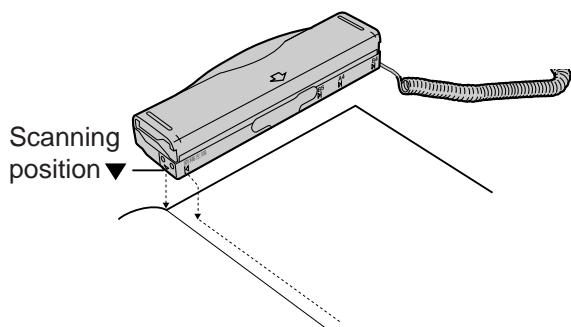

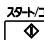5 Press  (Start).

- When you hear a beep, you can start scanning.


6 Press the hand scanner against the document, and move it slowly toward the direction of the arrow.

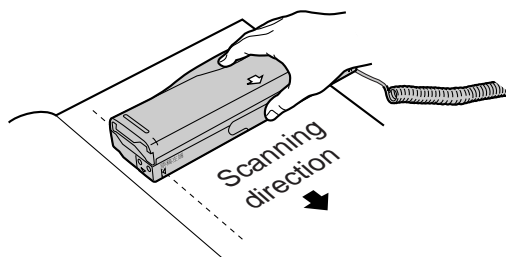

7 After scanning is completed, press  (Stop).


- You will hear a beep, and the scanned document is stored in memory of the main unit. Only 1 page can be scanned.

 8 To print the scanned document or to send it by fax, see the next page.

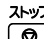- If you make a mistake, press  (Stop) to erase the content of the memory, then start from step 2.

Important:


- When you have completed scanning, the scanned document in memory will be automatically erased after 10 minutes.
- To reinsert the hand scanner into the main unit, turn the scanner over, and insert it into the main unit firmly.

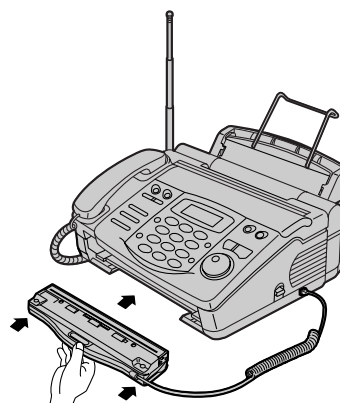

- When the hand scanner is out of the main unit, you cannot make a copy or send a fax.

Operating the hand scanner

Printing the scanned document

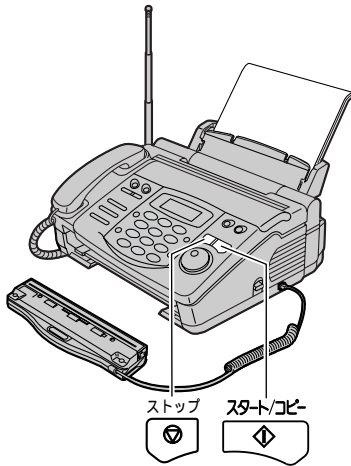

- 1 When scanning is completed, the following is displayed.


イソシ	[スタート]
ヨミナオシ	[ストップ]

- 2 Press  (Start).

- 3 If necessary, enter the number of copies up to 30, using the dial keypad.

- 4 Press  (Start).


- The unit will start printing.
- To send the scanned document by fax, see the information on the right.

- 5 Press  to end printing.

- The scanned document in memory will be erased.


- 6 Reinsert the hand scanner into the main unit.

Sending the scanned document by fax

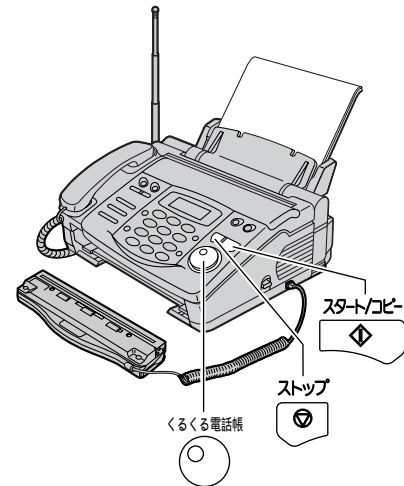


- 1 When scanning is completed, the following is displayed.


イソシ	[スタート]
ヨミナオシ	[ストップ]


- 2 Rotate the  (Search dial) until the following is displayed.

ソウシ	[スタート]
ヨミナオシ	[ストップ]

 
- 3 Press  (Start).

 - 4 Dial the fax number.

- You can use the  (Search dial).

 - 5 Press  (Start).

- The unit will start fax transmission.
- To print the scanned document, see the information on the left.

- 6 Press  after the fax transmission is completed.

- The scanned document in memory will be erased.

- 7 Reinsert the hand scanner into the main unit.

Individual e-mail services

Using the e-mail services

Kyushu Matsushita Electric Co., Ltd. (hereafter called "KME") offers individual information services, such as e-mail.

Your fax machine with e-mail features will be able to send an e-mail to another party's personal computer (PC) or another e-mail fax machine through the Internet all over the world. Also, you will be able to receive an e-mail from them.

To access the Internet using your fax machine, you have to subscribe to the following services beforehand.

- -ALPHA5 services offered by the DDI, and
- Individual information services offered by KME.

See pages 17 and 18 to subscribe to these services. You must subscribe to the DDI services first, then the KME services.

Important:

- If your fax machine is connected to a home telephone system or a private branch exchange (PBX) system, these services are not available.

Application fee and call charges

DDI -ALPHA5 services	Registration fee	Free
KME information services	Registration fee	¥500
	Call charge	¥10/minute (8 am-11 pm) ¥8.5/minute (11 pm-8 am)
	Information service fee	¥5/30 s

- As of Feb. 2000.
- Tax not included.

KME information services

The following services are available with your fax machine. A call charge and information service fee will be applied.

- Fax e-mail sending (page 19)
- Text e-mail sending (page 19)
- Voice e-mail sending (page 20)
- Storing another party's e-mail address (free of charge) (page 22)
- E-mail reception and printing (page 23)
- Voice e-mail listening (page 23)
- Others

Note:

- KME plans to add new information services and the information service fee is subject to change. KME will announce them by e-mail to its customers.
- For the other party to view your fax e-mail or to hear your voice e-mail sent from your fax machine, the following PC software will be required.
 - E-mail software that can read the MIME format
 - TIFF viewer software
 - WAV sound player software and sound system

Individual e-mail services

Subscribing to DDI -ALPHA5 services

To use the e-mail service, you have to subscribe to DDI first. If you filled out a DDI registration at the place where you purchased your fax machine, steps 1 and 2 below are not required.


1 Fill in the included application form.

Application form subject to change without notice.

Detailed call charge list required? (free of charge)
 1: Need
 2: No need

2 Fax this form to DDI at 0077 2322 9555 (24-hour availability).

After the fax transmission is completed, please follow the steps below.

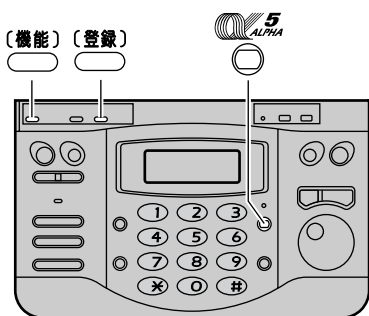

3 Press **機能** (Function).

4 Press **5 ALPHA**.

5 Enter your postal code without the “-” (hyphen mark).

6 Press **登録** (Register).

7 Press *****.

- Your telephone number will be sent to DDI.
- The red -ALPHA5 indicator light will be off.
- After about 1 hour, an online data communication will start between your unit and DDI. After the communication has been completed, the -ALPHA5 indicator will turn green.

Note:

- Please contact DDI Customer Service Center at 0077 772 (dial toll free) 9 am-9 pm, in the following cases:
 - when you have already subscribed to DDI,
 - when you have subscribed to other telephone companies other than NTT and DDI, or
 - when you are using a discount service offered by NTT or other telephone companies.

Individual e-mail services

Subscribing to KME information services

1 Fill in the included application form.

Labels on the form:

- Your name
- Your signature
- The telephone no. you wish to subscribe to KME information services
- Your address and telephone number for contact

Text on the form:

この原を裏向きにして、宛先の方向へ入れてください。

おたたくす情報サービス ご利用申込書

申込みのしかた

おたたくす情報サービスの利用申し込みをします

ご住所

ご電話番号

お申し込み番号

お申し込み日

お申し込みの電話番号


お申し込みのメールアドレス

お申し込みのセキュリティID

お申し込みのセキュリティIDは、新サービスの提供時や引越しに伴う電話番号の変更による利用登録は未申請で行われます。

Application form subject to change without notice.

Confirm that the indicator is green, and follow the steps below.

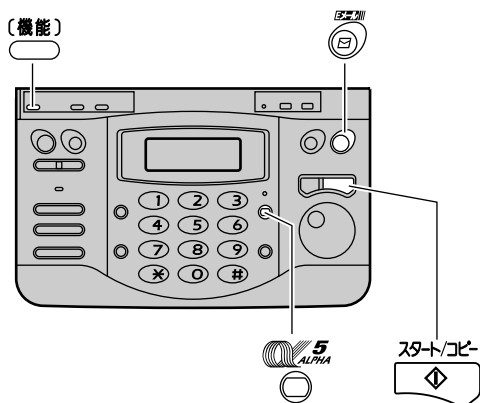

2 Press (Function).

3 Press (E-mail).

4 Press (Start).

- Your telephone number will be displayed.


5 Press (Start).

6 Insert the application form FACE DOWN.

7 Press (Start).

- The unit will start fax transmission.
- After the fax transmission is completed, the following report will be printed.

Example:

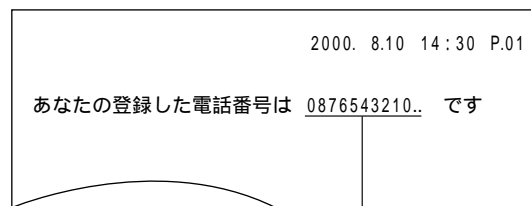


Confirm your telephone number.

8 After approx. 5 minutes, the unit will ring, and a data communication will start automatically between your unit and KME.

- If you answer this call, hang up immediately and wait for a while until the communication is completed.

9 When the communication is completed, a user registration form will be printed.

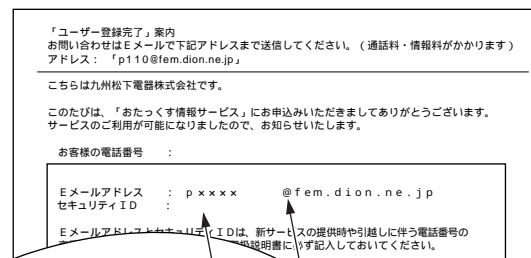


Your e-mail address

Your security ID code

- Please save the address and ID code for future reference.


Individual e-mail services

Sending a fax e-mail

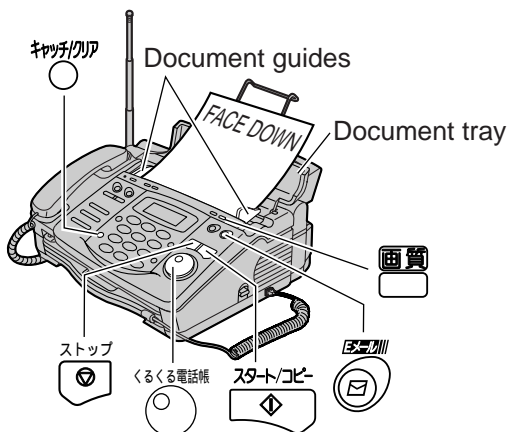

- 1 Open the document tray, and adjust the width of the document guides to the size of the document.
- 2 Insert the document (up to 5 pages) FACE DOWN until a single beep is heard.
- 3 If necessary, press (Resolution) repeatedly to select the desired setting (see page 10).
- 4 Press (E-mail).
- 5 Press (Start).
 - The display will show the last e-mail address you entered. To delete this address, press (Clear) for 2 seconds more.
- 6 Enter the desired e-mail address (see the top of page 21 for instructions).
 - You can enter the address by rotating the (Search dial). To store an address, see page 22.
- 7 Press (Start).
 - The display will show the last title you entered. To delete this title, press (Clear) for 2 seconds more.
- 8 Enter the title of your fax e-mail, up to 32 characters (see the bottom of page 21 for instructions).
- 9 Press (Start).
- 10 Press (Stop).

Sending a text e-mail

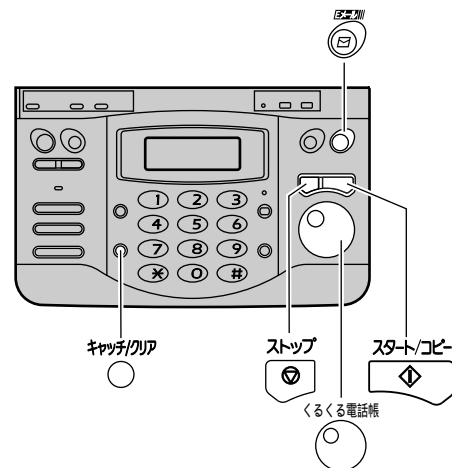


- 1 Press (E-mail).
- 2 Rotate the (Search dial) until the following is displayed.


モシ・Eメールソリューション
 [スタート]
- 3 Press (Start).
 - The display will show the last e-mail address you entered. To delete this address, press (Clear) for 2 seconds more.
- 4 Enter the desired e-mail address (see the top of page 21 for instructions).
 - You can enter the address by rotating the (Search dial). To store an address, see page 22.
- 5 Press (Start).
 - The display will show the last title you entered. To delete this title, press (Clear) for 2 seconds more.
- 6 Enter the title of your e-mail, up to 32 characters (see the bottom of page 21 for instructions).
- 7 Press (Start).
 - The display will show the last message you entered. To delete this message, press (Clear) for 2 seconds more.
- 8 Enter your e-mail message, up to 200 characters (see the bottom of page 21 for instructions).
- 9 Press (Start).
- 10 Press (Stop).

Individual e-mail services


Sending a voice e-mail

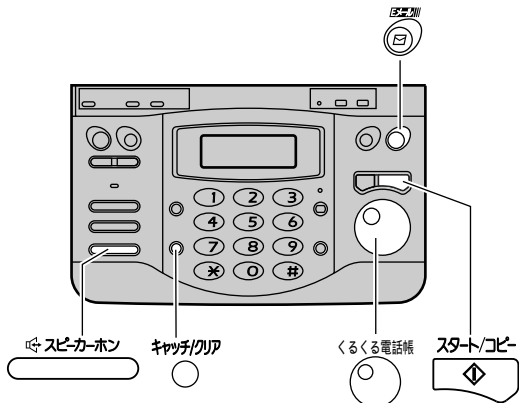


1 Press  (E-mail).


2 Rotate the  (Search dial) until the following is displayed.

 オンセイ Eメール ソウシン
[スタート]


3 Press  (Start).

 - The display will show the last e-mail address you entered. To delete this address, press  (Clear) for 2 seconds more.

 
4 Enter the desired e-mail address (see the top of page 21 for instructions).

- You can enter the address by rotating the  (Search dial). To store an address, see page 22.

5 Press  (Start).


- The display will show the last title you entered. To delete this title, press  (Clear) for 2 seconds more.

6 Enter the title of your e-mail, up to 32 characters (see the bottom of page 21 for instructions).

7 Press  (Start).

- An announcement about how to record will be heard.

 8 Record your voice message up to 60 seconds according to voice guidance, toward the microphone or using the handset.

9 Press  to finish recording, or replace the handset if you are using it.

Individual e-mail services

E-mail address –Character input and command key table


	Pressing the dial keys will select a character as shown below.	
Dial key ①	@ . - _ \$ % & ~ ^ 1	
②	a b c A B C 2	
③	d e f D E F 3	
④	g h i G H I 4	
⑤	j k l J K L 5	
⑥	m n o M N O 6	
⑦	p r s P R S 7	
⑧	t u v T U V 8	
⑨	w x y W X Y 9	
⑩	q z Q Z () , ¥ ; : * # / +	
	= [] " ' ? ! < > { } 0	
Command keys	➡	Used to move the cursor to the right.
	⬅	Used to move the cursor to the left.
	⓪ (Clear)	Used to delete a character.
	Ⓜ (Insert)	Used to insert a space.

E-mail title/E-mail message –Character input and command key table

Character	Pressing the dial keys will select a character as shown below.			
	“カナ” Katakana	“英” English	Numbers	Symbols
Dial key ①	アイウエオアイウエオ		1	@ . - _ \$ % & = ~ ^
②	カキクケコ	A B C a b c	2	
③	サシスセソ	D E F d e f	3	
④	タチツテトツ	G H I g h i	4	
⑤	ナニヌネノ	J K L j k l	5	
⑥	ハヒフヘホ	M N O m n o	6	
⑦	マミムメモ	P R S p r s	7	
⑧	ヤユヨヤユヨ	T U V t u v	8	
⑨	ラリルレロ	W X Y w x y	9	
⑩	ワヲン` °	Q Z q z	0	、 。 () , ¥ ; : . * # / [] { } “ ’ ? ! “ ” 「 」
Command keys	⓪ (Character input mode)	Used to change the character input mode.		
	➡	Used to move the cursor to the right.		
	⬅	Used to move the cursor to the left.		
	⓪ (Clear)	Used to delete a character.		
	Ⓜ (Insert)	Used to insert a space.		
	Ⓜ (New paragraph)	Used to start a new line (only for e-mail messages)		

Individual e-mail services

Storing another party's e-mail address in the search dial

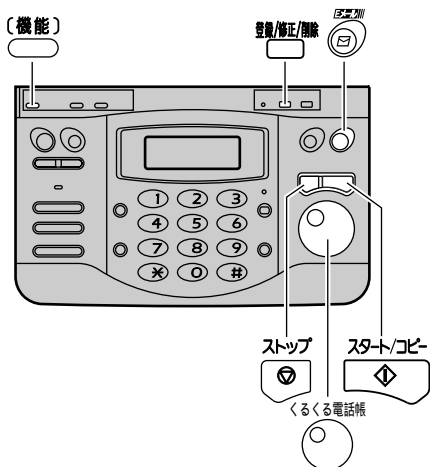


- 1 Press [機能] (Function).
- 2 Press 登録/修正/削除 (E-mail).
- 3 Rotate the くるくる電話帳 (Search dial) until the following is displayed.

アト`レス チョウ トウロク [スタート]

- 4 Press スタート/コピー (Start).
- 5 Enter the name, up to 12 characters (see the bottom of page 21 for instructions).
- 6 Press 登録/修正/削除 (Store).
- 7 Enter the e-mail address, up to 60 characters (see the top of page 21 for instructions).
- 8 Press 登録/修正/削除 (Store).
 - To program other items, repeat steps 5–8.
 - You can store up to 30 stations.
- 9 Press ストップ (Stop) to exit the program.

Editing a stored e-mail address

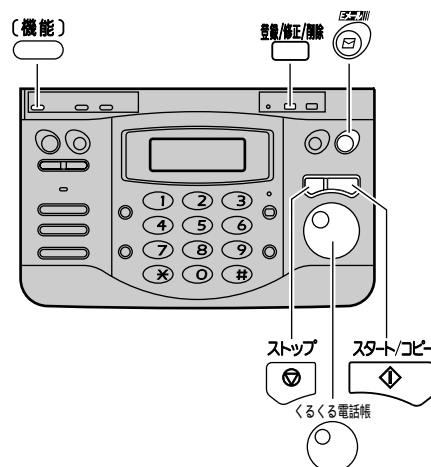


- 1 Press [機能] (Function).
- 2 Press 登録/修正/削除 (E-mail).
- 3 Rotate the くるくる電話帳 (Search dial) until the following is displayed.

アト`レス チョウ カクニン [スタート]

- 4 Press スタート/コピー (Start).
- 5 Rotate the くるくる電話帳 (Search dial) until the desired name is displayed.
- 6 Press 登録/修正/削除 (Edit).
- 7 Press *.
 - If you do not need to edit the name, skip to step 9.
- 8 Edit the name (see the bottom of page 21 for instructions).
- 9 Press 登録/修正/削除 (Store).
 - If you do not need to edit the e-mail address, skip to step 11.
- 10 Edit the e-mail address (see the top of page 21 for instructions).
- 11 Press 登録/修正/削除 (Store).
- 12 Press ストップ (Stop).

Individual e-mail services

Receiving and printing an e-mail

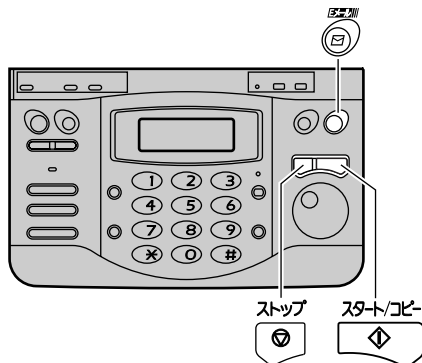

1 Press (E-mail).

2 Press (Start).

- If there is an e-mail you have not viewed yet:

Eメール ツウシン チュウ
ツウシン チュウ

The unit will print the received e-mail.

- If there is no e-mail:

Press (Stop).


ミシ ュシン Eメール 0ケン

The file formats recognized by your fax machine are:

- JPEG •~. doc
- TIFF •~. xls
- BMP •~. ppt
- TXT •~. pdf
- WAV

(as of Jan. 2000)

Listening to a received voice e-mail in an attached file

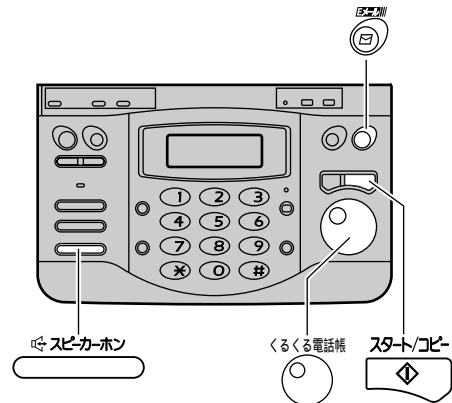

1 Press (E-mail).

2 Rotate the (Search dial) until the following is displayed.

オンセイ Eメール シ ュシン
[スタート]

3 Press (Start).

4 Enter the document number with 4 digits.

- See the example below about document number.

5 Press (Start).

6 Listen to an announcement through the speaker, or using the handset.

7 Listen to the voice message according to voice guidance.

8 Press (Speakerphone) to finish listening, or replace the handset if you are using it.

Note:

- You can hear a voice in WAV format only.
- Voice data will be saved for 1 week in the server after the e-mail has been received.

Example of received e-mail document:

受信日時：2000/03/10 18:41 合計1ページ
 タイトル：連絡
 送信日時：2000/03/10 18:40:05
 差出人：p x x x x @fem.dion.ne.jp
 宛先：p x x x x @fem.dion.ne.jp
 同報宛先：p x x x x @fem.dion.ne.jp
 文書番号：0001 ← Document number

Specifications

(KX-PW36CL/PW36CLW)	Main unit	Portable handset	Battery charger
Power supply	AC 100 V (50 Hz/60 Hz)	Ni-Cd battery (Part no. KX-FAN37) DC 2.4 V, 600 mAh	AC adaptor (Part no. KX-A12N or PFAP1001) AC 100 V (50 Hz/60 Hz) DC 9 V, 200 mA
Power consumption	Transmission: Approx. 20 W Reception: Approx. 24 W Copy: Approx. 25 W Stand by: Approx. 3.4 W Maximum*1: Approx. 130 W		Charging: Approx. 2.2 W Stand by: Approx. 1.0 W
Dimensions (H x W x D)	Approx. 161 x 336 x 283 mm (without projections) Approx. 185 x 336 x 283 mm (Document tray open and without projections) Approx. 233 x 336 x 378 mm (Recording paper sub-tray installed)	Approx. 190 x 47 x 40 mm	Approx. 72 x 72 x 90 mm
Mass (Weight)	Approx. 4.4 kg (20 m ink film installed)	Approx. 182 g (Battery installed)	Approx. 77 g
Operating environment	5 °C – 35 °C, 45 % – 85 % RH (Relative Humidity)		

(KX-PW36CL/PW36CLW)	Main unit
Applicable line	Public Switch Telephone Network (Tone/Pulse), F-Net, NCC Lines
DC resistance	320 Ω *2
Compatibility	G3 compatible
Document size	B4-A5 (Max. 257 mm in width, Max. 800 mm in length)
Effective scanning size	252 mm (B4), 208 mm (A4)
Effective printing size	202 mm (A4 size plain paper)
Transmission time*3	Approx. 15 s/page (Original mode)
Modem speed	9,600 / 7,200 / 4,800 / 2,400 bps; Automatic fallback
Halftone level	64-level
Scanning density	Horizontal: 8 pels/mm Vertical: 7.7 lines/mm (Fine/Photo), 3.85 lines/mm (Standard)
Scanner type	CCD image sensor
Printer type	Thermal transfer printing on plain paper
Data compression system	Modified Huffman (MH), Original mode
Recording paper size	A4: 210 mm x 297 mm (Plain paper)
Answering device	Greeting message recording: Digital recording system. Up to 16 seconds of the original message. Pre-recorded greeting message provided. Incoming message recording: Digital recording system. Approx. 18 minutes in total.
Memory capacity	Voice memory: Approx. 18 minutes of recording time Fax memory: Approx. 50 pages for fax reception *4

*1 When copying a 100% black document.

*2 If you cannot make a call due to DC resistance, consult your dealer.

*3 Transmission speed is based on an A4-size document of 700 characters sent in standard resolution at 9,600 bps. The actual transmission speed depends upon the contents of the page, resolution, telephone line conditions and capability of the other party's machine.

*4 Memory capacity is based on an A4-size document of 700 characters received in standard resolution.