 


Facsimile

# Quick Reference Guide

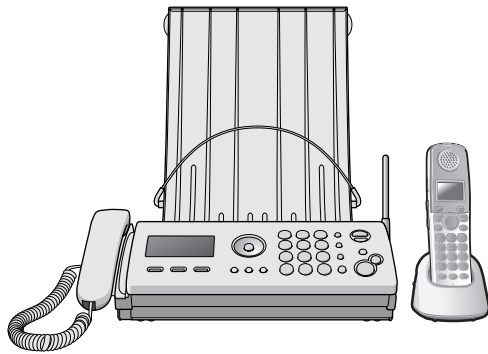

KX-PW504E2

Model No. **KX-PW504E2**

Main unit: KX-PW504  
Portable handset: KX-FKN511

Thank you for purchasing a Panasonic facsimile.

 
## Table of Contents

Finding the controls .....	2
Installations and connections .....	4
Setting the date and time.....	7
Setting your facsimile telephone number .....	7
Setting your logo .....	8
Character input and command key table .....	9
Automatic dialing on the main unit .....	10
Automatic dialing on the portable handset (KX-FKN511) .....	12
Intercom .....	13
Sending faxes .....	14
Receiving faxes .....	15
Operating the built-in answering device .....	16
Specifications .....	18

- This guide explains some basic features and operations, but not all of them. For further details, see the Japanese operating instructions.
- This product is designed for use in Japan. Panasonic cannot provide service for this product if used outside Japan.
- Any details given in this guide are subject to change without notice.

# Finding the controls

## Main unit

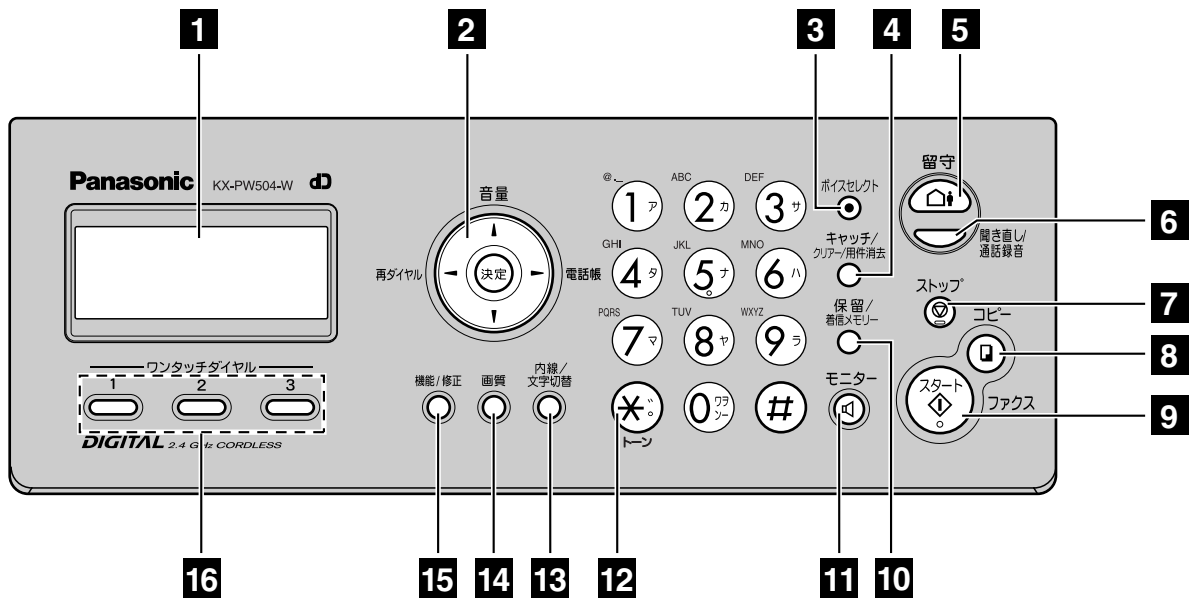

### 1 Liquid crystal display

### 2 Volume/Redial/Phonebook/Set key



To adjust the volume.



To redial the phone numbers in the redial list. The last 10 phone numbers dialed are stored in memory.



To use the phonebook.



To store a parameter.

### 3 Voice Select button changes the tone heard from the earpiece.

### 4 Flash button

(For call waiting service users.)

**Clear/Erase** button

### 5 Auto Answer button & indicator

—light on: answering device activated.

—light off: used as a regular telephone.

### 6 Replay button plays back recorded messages.

**Record** button records telephone calls.

### 7 Stop button

### 8 Copy button starts copying.

### 9 Start/Fax button starts faxing.

### 10 Hold button

**Call Memory** button starts a search in the Number Display log.

(For caller ID display service users.)

### 11 Monitor button

### 12 Tone button switches to tone dialing.

### 13 Intercom button

**Character Input Mode** button

### 14 Resolution button selects the resolution when faxing or copying.

### 15 Function button initiates programming.

**Edit** button

### 16 One-touch Dial buttons

# Finding the controls

## Portable handset (KX-FKN511)

### Liquid crystal display

 
① ..... Portable handset number  
 ② ..... Indicates which directions the key can be tilted.  
 変換  
 再ダイヤル / 電話帳  
 up and down    left  
 ③ ..... No link to the base unit  
 ④ ..... Battery strength  
 ⑤ ..... Function menu that is controlled by **F1** or **F2**

● To change the tone heard from the earpiece.  
 ● To adjust the volume.

### Dial buttons

☎ Tone button  
 ● To switch to tone dialing.  
 # Sharp button

● For call waiting service users.  
 ● To change your voice.  
 ● To mute your voice to the other party by pressing this button for about 2 seconds. (To release the mute, press this button again.)  
 ● To use the speakerphone.

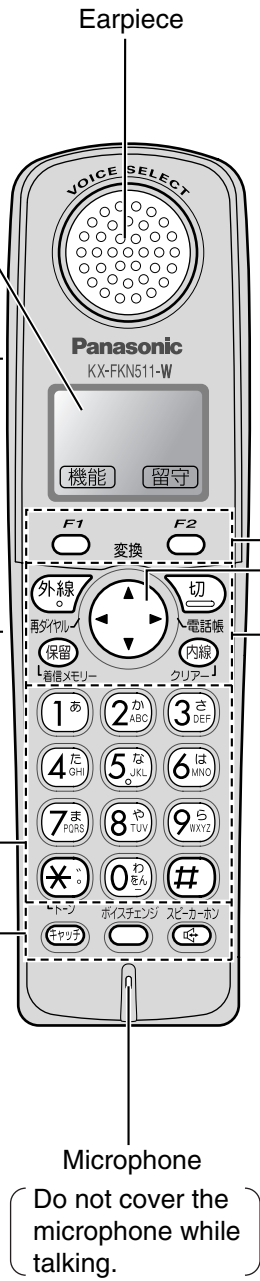

### How to use **F1** **F2** buttons

**F1** and **F2** buttons refer to the function displayed on the bottom of the display. They function differently depending on the mode.

 
### How to use 変換 key

● To use the phonebook.  
 ● To redial the phone numbers in the redial list. The last 10 phone numbers dialed are stored in memory.  
 ● To change Hiragana into Kanji.

● To make/answer calls.  
 ● To end a call.  
 ● To end or exit from editing or other operations.  
 ● To page the main unit and/or portable handset(s).  
 ● To clear letters/numbers.  
 ● To put a call on hold.  
 ● To start a search in the Number Display log. (For caller ID display service users.)

# Installations and connections

## Installing the ink film

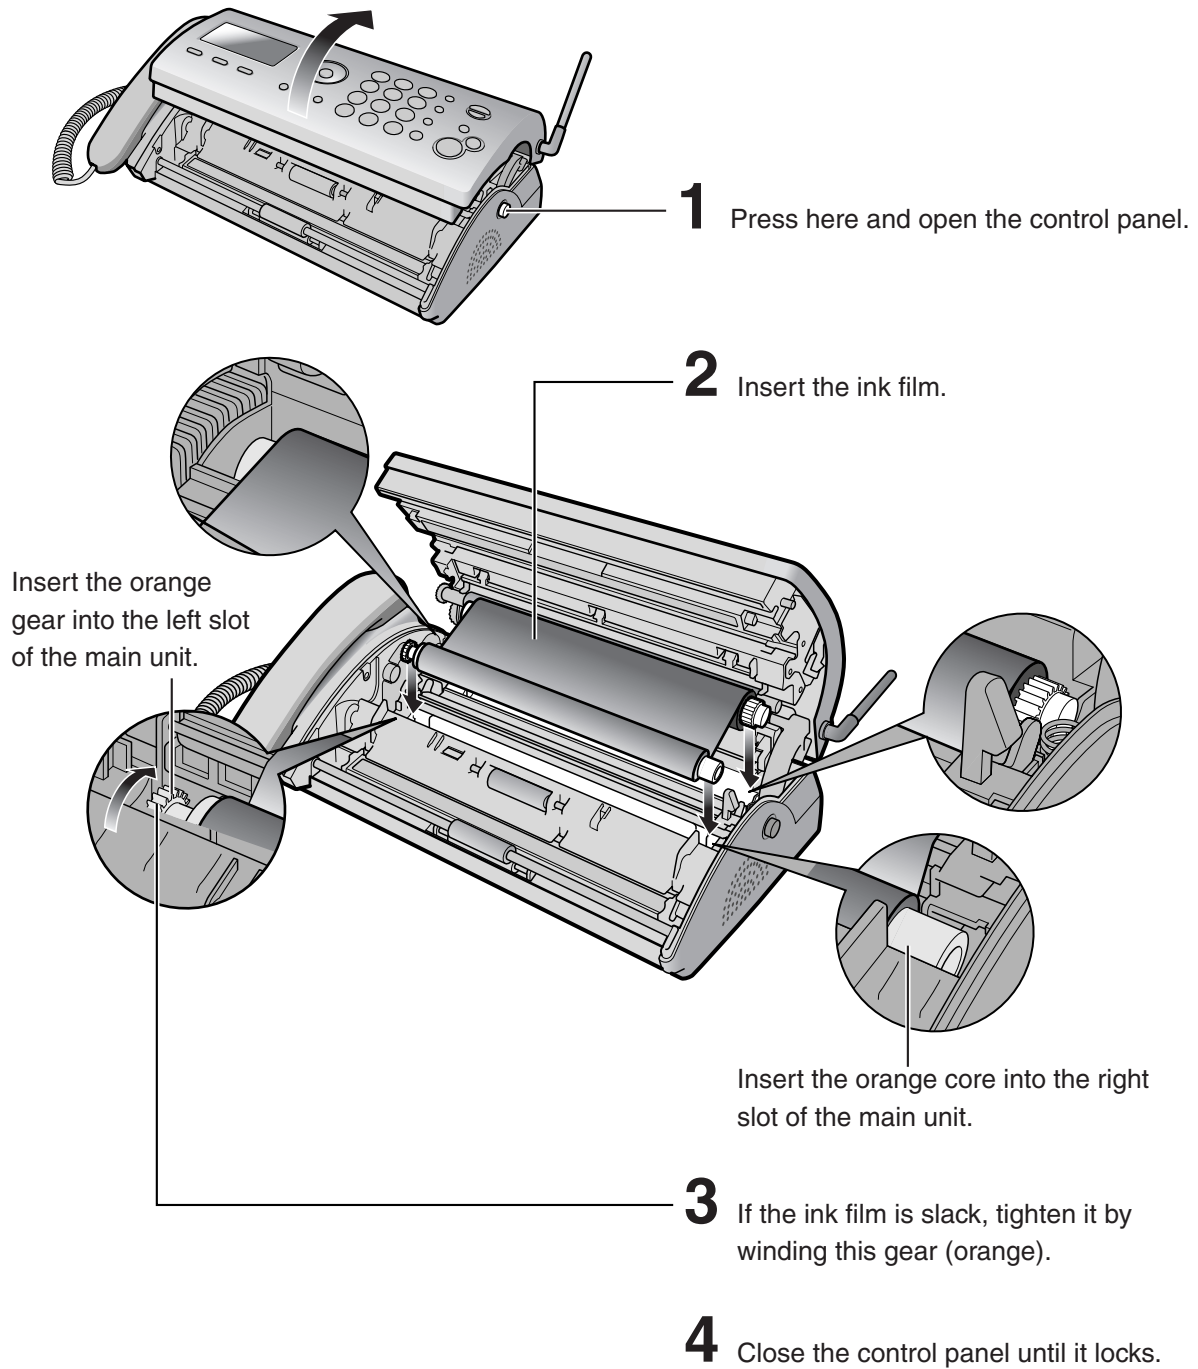

- When the unit runs out of ink film, the following message will be displayed.

フィルムカ ナクナリマシタ コウカンシテクタサイ U23	↔	フィルムカ ナクナリマシタ ヒンバツ : KX-FAN200
---------------------------------	---	-----------------------------------


Install a new ink film.

Replacement ink film: <b>KX-FAN200</b> (30 m)    ¥1,208
--


· As of June 2005.    · Tax included.

# Installations and connections
 
## Installing recording paper (A4 size)

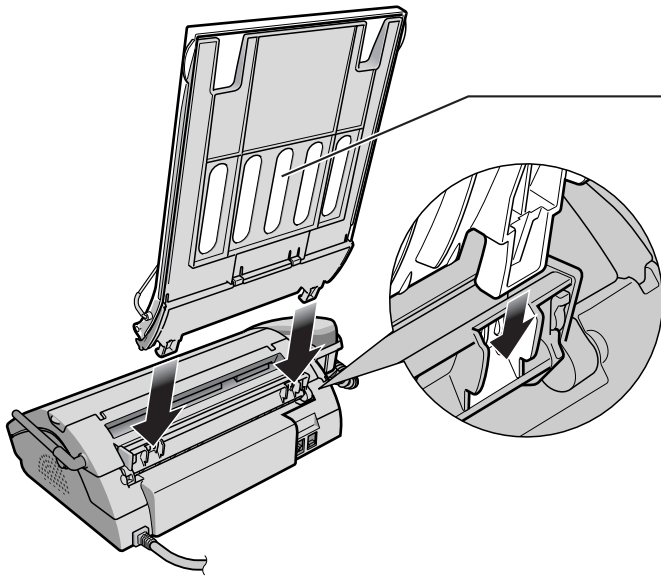

 
**1** Install the recording paper cover/tray.

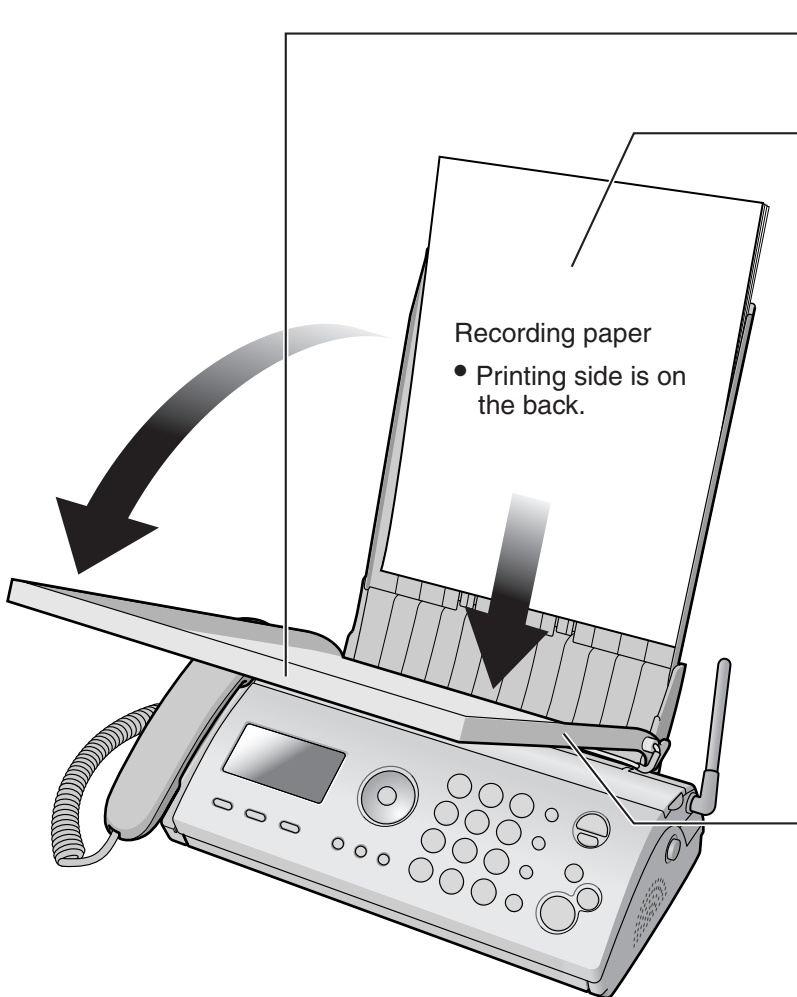

**2** Open the recording paper cover.

**3** Insert the recording paper into the recording paper tray. (Up to 20 sheets)

 
- Fan the stack of recording paper.

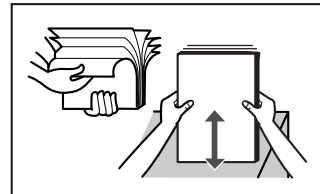

**4** Close the recording paper cover.

# Installations and connections
 
## Connecting the main unit

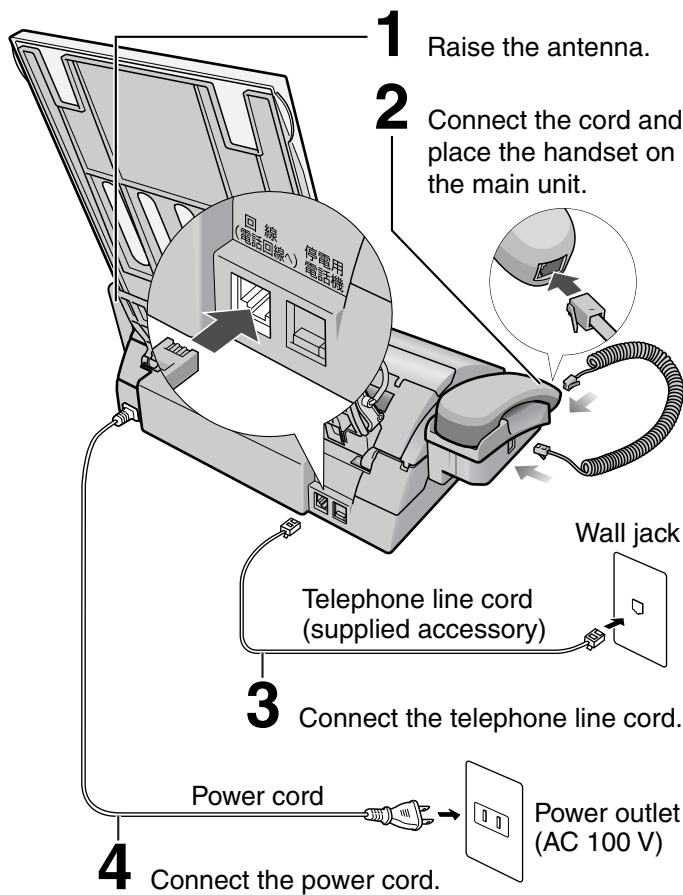

### After the Power On...

This unit will automatically select the dialing mode (Tone/Pulse).



### If you can not make a call...

Set the dialing mode with the main unit.

- 機能/修正
1. Press (Function/Edit).
  2. Press .
  3. Press (Search button) repeatedly until the desired setting is displayed.

 
#### Example :

カイセンシユハツ=20	●フツシユ: Tone
[◀.ケツテイ]オス	20 : Pulse (20 PPS)
	10 : Pulse (10 PPS)

4. Press (Set).

5. Press (Stop).


## Setting up the portable handset (KX-FKN511)

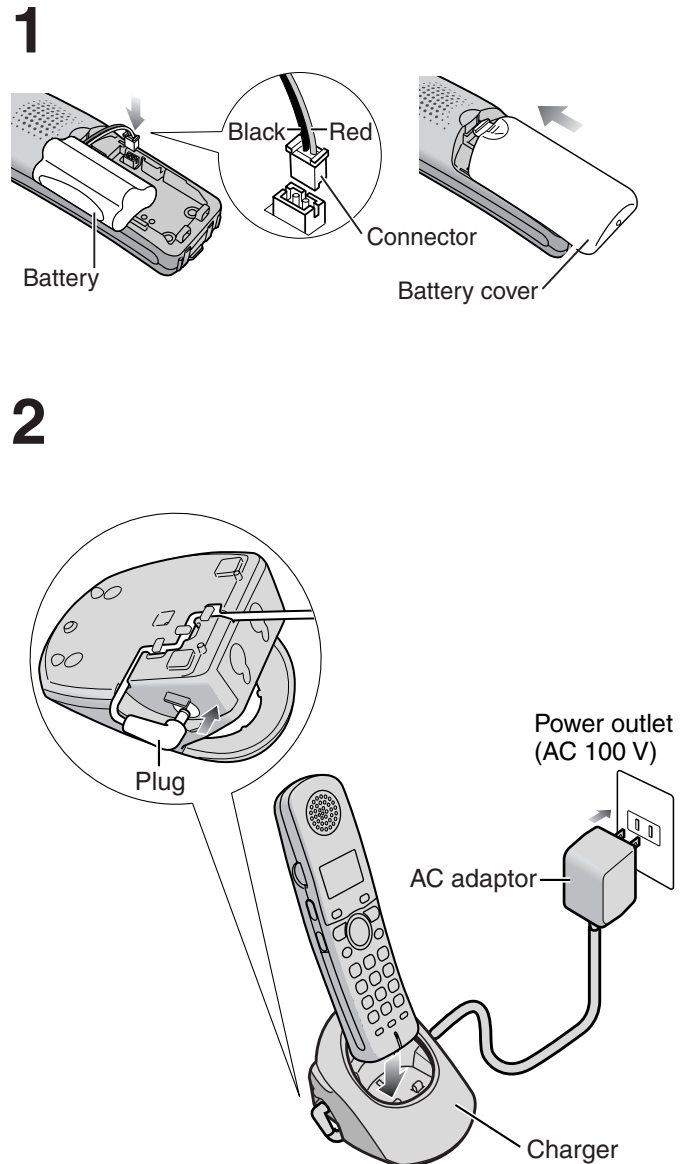

- 3** Charge the battery in the charger for 10 hours.

- After your Panasonic battery is fully charged, it will last up to about 7 hours of conversation.

# Setting the date and time

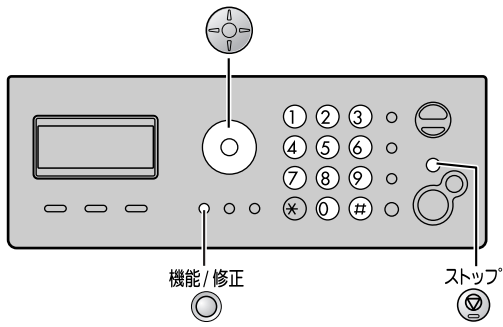 

**1** Press **機能/修正** (Function/Edit).

キノウ トウロク モード  
[▼▲]オス

**2** Press **# 0 0 1**.

**Example :** 2005年06月01日  
20:10  
Cursor

**3** Enter the correct year/month/day.

**Example: October 1, 2005**

Press **2 0 0 5 1 0 0 1**.

2005年10月01日  
20:10

**4** Enter the correct hour/minute in a 24-hour clock entry.

**Example: 15:45 (3:45 PM)**

Press **1 5 4 5**.

2005年10月01日  
15:45

**5** Press **決定** (Set).

トウロク シマシタ

 


2005年10月01日  
15:45

**6** Press **ストップ** (Stop).

**Example :** 10月 1日 15:45  
ヨウゲン ロクオン 00ケン

# Setting your facsimile telephone number

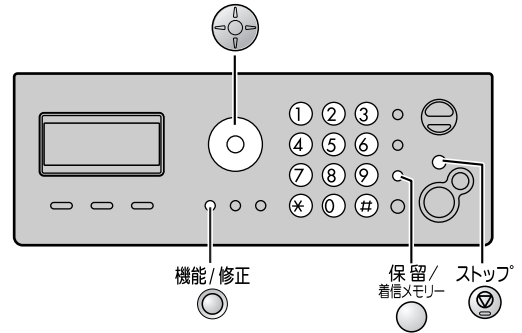

**1** Press **機能/修正** (Function/Edit).

キノウ トウロク モード  
[▼▲]オス

**2** Press **# 0 0 4**.

アナタノテレホンバツゴウ?  
TEL=.....  
Cursor

**3** Enter your facsimile telephone number, up to 20 digits.

**Example: +098 7654..**

アナタノテレホンバツゴウ?  
TEL=+098 7654..

- The **\*** (Tone) button replaces the digit with "+".
- The **保留/着信メモリー** (Hold/Call memory) button replaces the digit with a space.

**4** Press **決定** (Set).

トウロク シマシタ

 


アナタノテレホンバツゴウ?  
TEL=098 765 43.

**5** Press **ストップ** (Stop).

**Example :** 10月 1日 15:45  
ヨウゲン ロクオン 00ケン

# Setting your logo

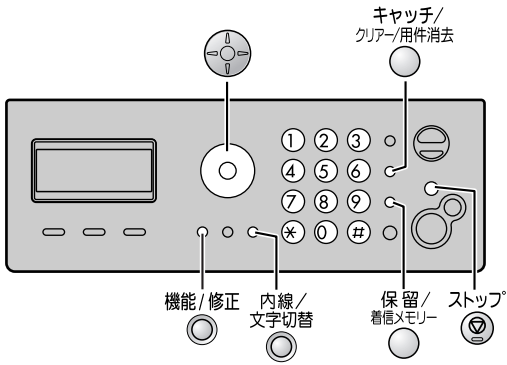

**1** Press (Function/Edit).

キノ トウロク モード  
[▼▲]オス

**2** Press .

アナタノナマイ?  
Cursor

**3** Enter your logo, up to 30 characters, using the dial keypad.

- To enter English characters easily, press (Intercom/Character input mode) repeatedly and select “英” (English and sign input mode).
- For details, see the table on page 9 for instructions.

## Example: Micah

1. Press once.

アナタノナマイ?  
M  
Cursor

2. Press six times.

アナタノナマイ?  
Mi

3. Press six times.

アナタノナマイ?  
Mic

4. Press to move the cursor to the next space and press four times.

アナタノナマイ?  
Mica

5. Press five times.

アナタノナマイ?  
Micah

**4** Press (Set).

トウロク シマシタ  
↓  
アナタノナマイ?  
Micah

**5** Press (Stop).





**Example :** 10月 1日 15:45  
ヨウケン ロクオン 00ケン





 

# Character input and command key table

Pressing the dial keys will select a character as shown below.

## Main unit

Character Dial key	“カナ” Katakana	“英” English	“数” Numbers
①	アイウエオ アイウエオ	@ . _ - & \$ ¥ % + = ~ ^	1
②	カキクケコ	A B C a b c	2
③	サシスセソ	D E F d e f	3
④	タチツテトツ	G H I g h i	4
⑤	ナニヌネノ	J K L j k l	5
⑥	ハヒフヘホ	M N O m n o	6
⑦	マミムメモ	P Q R S p q r s	7
⑧	ヤユヨヤユヨ	T U V t u v	8
⑨	ラリルレロ	W X Y Z w x y z	9
⑩	ワヲンー!? ( )	! ? / - * # , ; :   · ‘ ’ ” ( ) [ ] { } < > 「 」	0
⊛	” ° 、 。	、 。	
Command keys	 内線/ 文字切替		Used to change the character input mode.
			Used to move the cursor to the left and right.
	 キャッチ/ クリア/用件消去		Used to delete a character.
	 保留/ 着信メモリー		Used to insert a space.


## Portable handset

Character Dial key	“かな” Hiragana	“カナ” Katakana	“英” English	“数” Numbers
①	あいうえお あいうえお	アイウエオ アイウエオ	@ . _ - & \$ ¥ % + = ~ ^	1
②	かきくけこ	カキクケコ	A B C a b c	2
③	さしすせそ	サシスセソ	D E F d e f	3
④	たちつてとつ	タチツテトツ	G H I g h i	4
⑤	なにぬねの	ナニヌネノ	J K L j k l	5
⑥	はひふへほ	ハヒフヘホ	M N O m n o	6
⑦	まみむめも	マミムメモ	P Q R S p q r s	7
⑧	やゆよやゆよ	ヤユヨヤユヨ	T U V t u v	8
⑨	らりるれろ	ラリルレロ	W X Y Z w x y z	9
⑩	わをんー!? ( )	ワヲンー!? ( )	! ? / - * # , ; :   · ‘ ’ ” ( ) [ ] { } < > 「 」	0
⊛	” ° 、 。		、 。	
Command keys			Used to change the character input mode.	
			Used to move the cursor to the left and right.	
	 内線 クリアー		Used to delete a character.	
	 保留 着信メモリー		Used to insert a space.	

●The characters on the display are somewhat different from those shown in the character input and command key table.

# Automatic dialing on the main unit
 
## Storing telephone numbers in the one-touch dial

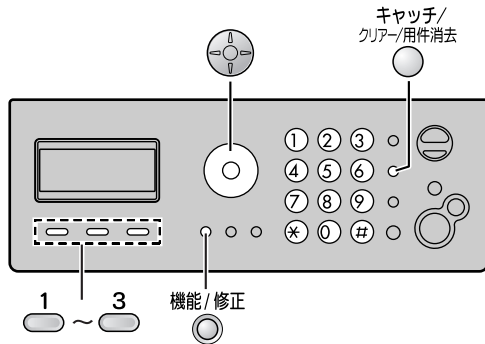

**1** Press (Function/Edit).

キノウ トウロク モード  
[▼▲]オス

**2** Press the desired one-touch dial button (1 to 3).

Example: One-touch dial 1

ワンタッチ 1  
トウロク サレテ イマセン

Button number

**3** Enter the telephone number, up to 24 digits.

• To correct a mistake, press (Flash/Clear/Eraser).

0987654

**4** Press (Set).


## Making a voice call using the one-touch dial

 **1** Press the desired one-touch dial button (1 to 3).

• The unit will start dialing.

**2** When the other party answers, lift the handset.

## Editing a stored number in the one-touch dial

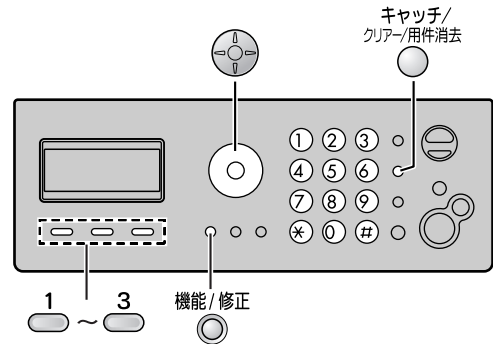

**1** Press (Function/Edit).

**2** Press the desired one-touch dial button (1 to 3).

**3** Move the cursor to the number you want to edit.

**4** Press (Flash/Clear/Eraser).

**5** Enter the number.

**6** Press (Set).

## Erasing a stored number in the one-touch dial

**1** Press (Function/Edit).

 
**2** Press the desired one-touch dial button (1 to 3).

**3** Press and hold (Flash/Clear/Eraser) until the telephone number has been erased.

**4** Press (Set).

# Automatic dialing on the main unit

## Storing names and telephone numbers in the phonebook

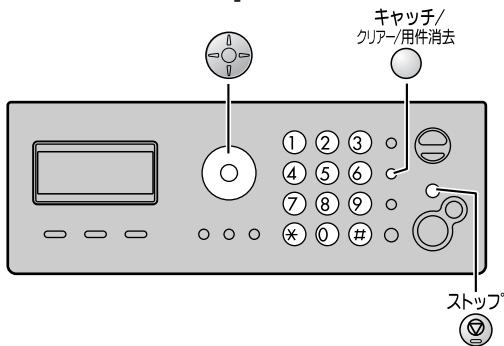

**1** Press 電話帳 (Phonebook).

トウロク ハ [ケツタイ]オス  
ケンサク ハ [▼▲]オス

**2** Press 決定 (Set).

- “XXX” shows the remaining station numbers you can store.
- You can program up to 150 stations, including 4 pre-programmed stations.

テ ンワチヨウ アキXXXケン

**3** Enter the name, up to 12 characters (see the table on page 9 for instructions).

**4** Press 決定 (Set).

**5** Enter the telephone number, up to 24 digits.

- To correct a mistake, press (Flash/Clear/Erase).

**6** Press 決定 (Set).


**7** Enter the group number (① to ⑨).

**8** Press 決定 (Set).

- To program other items, repeat steps 3 to 8.

**9** Press ストップ (Stop) to exit the program.

## Making a voice call using the phonebook

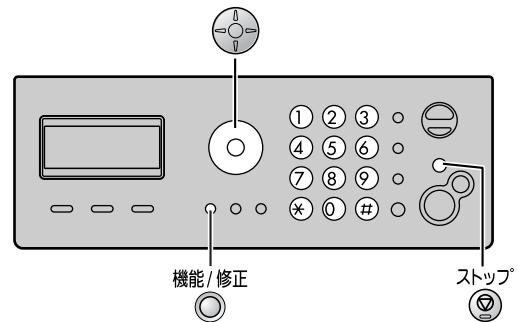 

**1** Press 電話帳 (Phonebook).

**2** Press (Search button) repeatedly until the desired name is displayed.

**3** Lift the handset.

## Editing a stored name or number in the phonebook

**1** Press 電話帳 (Phonebook).

**2** Press (Search button) repeatedly until the desired name is displayed.

**3** Press 機能/修正 (Function/Edit).

**4** Edit the name (see the table on page 9 for instructions).

- If you do not need to edit the name, skip to step 5.

**5** Press 決定 (Set).

**6** Edit the telephone number.

- If you do not need to edit the telephone number, skip to step 7.

**7** Press 決定 (Set).

**8** Edit the group number.

 
- If you do not need to edit the group number, skip to step 9.

**9** Press 決定 (Set).

**10** Press ストップ (Stop).

# Automatic dialing on the portable handset (KX-FKN511)

## Storing names and telephone numbers in the phonebook

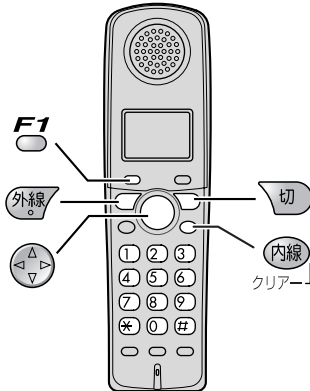

**1** Press 電話帳 (Phonebook).

**2** Press .

- “XXX” shows the remaining station numbers you can store.

- You can program up to 150 stations, including 4 pre-programmed stations.

**3** Enter the name, up to 20 characters (see the table on page 9 for instructions).

**4** Press twice.

**5** Enter the telephone number, up to 24 digits.

- To correct a mistake, press (Clear).

**6** Press .

**7** Enter the group number ( to ).

**8** Press .

- To program other items, repeat steps 3 to 8.

**9** Press (Off) to exit the program.

## Making a voice call using the phonebook

**1** Press 電話帳 (Phonebook).

**2** Press (Search button) repeatedly until the desired name is displayed.

**3** Press (Talk).

## Editing a stored name or number in the phonebook

**1** Press 電話帳 (Phonebook).

**2** Press (Search button) repeatedly until the desired name is displayed.

**3** Press .

**4** Edit the name (see the table on page 9 for instructions).

- If you do not need to edit the name, skip to step 5.

**5** Press .

**6** Edit the kana.

- If you do not need to edit the kana, skip to step 7.

**7** Press .

**8** Enter the correct telephone number.

- If you do not need to edit the telephone number, skip to step 9.

**9** Press .

**10** Edit the group number.

- If you do not need to edit the group number, skip to step 11.

**11** Press .

**12** Press (Off) to exit the program.

 
検索は  
[▼▲]を押す

名前?  
空き XXX 件

# Intercom

An intercom is available between the portable handsets or between the main unit and portable handset(s).

## Using the main unit:

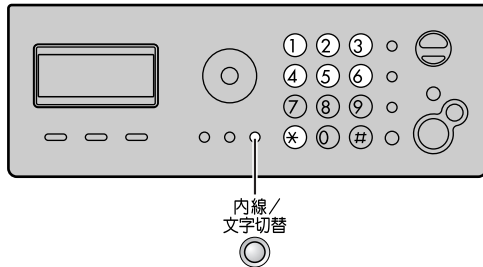

### 1 ■ For single portable handset users


- ① Lift the handset.

ハンゴウ?

- ② Press  (Intercom/Character input mode).

コキ1 ヨビダシ チュウ

### ■ For multiple portable handset users

 
- ① Lift the handset.
- ② Press  (Intercom/Character input mode).
- ③ Call the portable handset(s) in the following ways:
  - To call a specific portable handset, press the portable handset number (① to ⑥) which you want to call.
  - To call all the portable handsets, press \*.

### 2 Start talking.

Example : コキ1 ナイセンツウ チュウ

### 3 Replace the handset to end the intercom call.


## Using the portable handset (KX-FKN511):

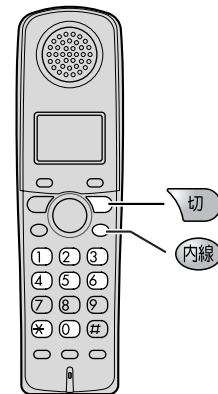

### 1 ■ For single portable handset users

Press  (Intercom).

### ■ For multiple portable handset users

- ① Press  (Intercom).
- ② Call the main unit and/or portable handset(s) in the following ways:
  - To call a specific portable handset, press the portable handset number (① to ⑥) which you want to call.
  - To call the main unit, press ①.
  - To call the main unit and all the portable handsets, press \*.

 
### 2 Start talking.

 

内線通話中

### 3 Press (Off) to end the intercom call.

 
# Sending faxes

## Sending a fax manually

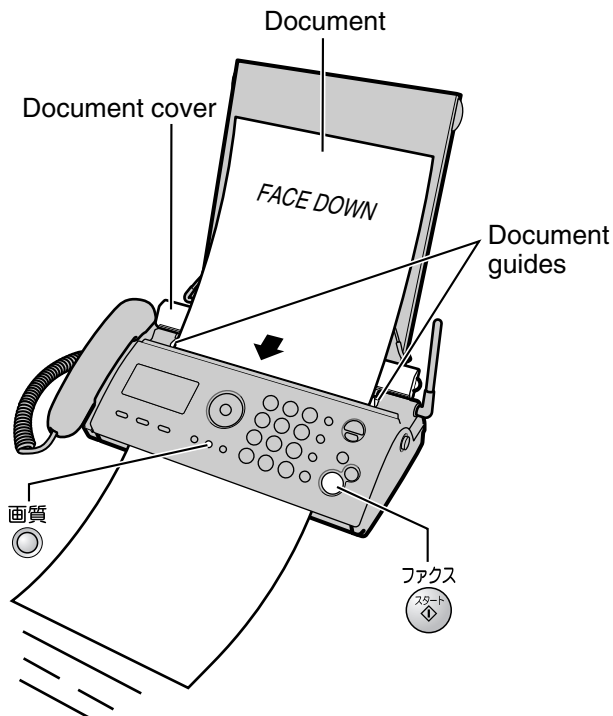
 


- 1** Open the document cover, and adjust the width of the document guides to the size of the document.
- 2** Insert the document (up to 5 pages) FACE DOWN until a single beep is heard.
- 3** If necessary, press  (Resolution) repeatedly to select the desired setting (see below).
- 4** Dial the fax number.
- 5** Press  (Start/Fax).
  - The unit will start fax transmission.

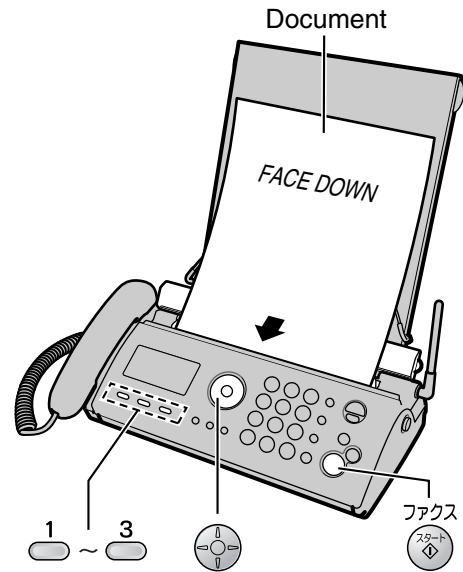


## Sending a fax using automatic dialing



### Using the one-touch dial

- 1** Insert the document (up to 5 pages) FACE DOWN until a single beep is heard.
- 2** Press the desired one-touch dial button ( to ).
  - The unit will start fax transmission.

### Using the phonebook

- 1** Insert the document (up to 5 pages) FACE DOWN until a single beep is heard.
- 2** Press  (Phonebook).
- 3** Press  (Search button) repeatedly until the desired name is displayed.
- 4** Press  (Start/Fax).
  - The unit will start fax transmission.

### To select the resolution

 
Select the desired resolution according to the type of document, by pressing  (Resolution).

カ`シツ=フツウ	(Standard) for printed or typewritten originals with normal-sized characters.
カ`シツ=チイサイ	(Fine) for originals with minute printing.
カ`シツ=シャシヨ	(Photo) for originals containing photographs.

# Receiving faxes

## Receiving a fax manually (AUTO ANSWER off)

Using the main unit:

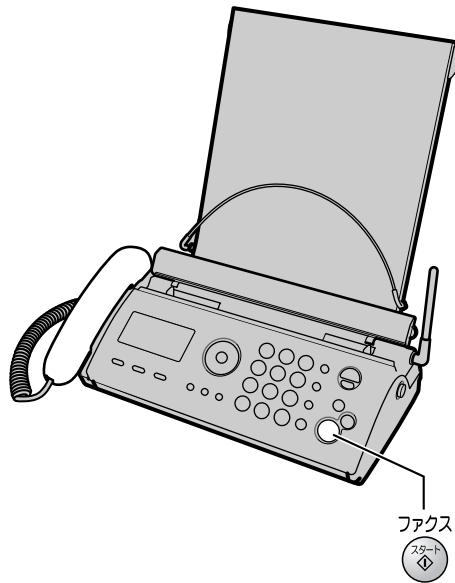


**1** When you hear a ring, lift the handset to answer the call.

**2** When:  
– document reception is required,  
– a fax calling tone (slow beep) is heard, or  
– no sound is heard,  
press **ファクス スタート** (Fax), then replace the handset.

- The unit will start fax reception.

 Using the portable handset (KX-FKN511):

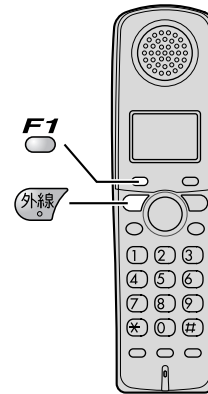

**1** When you hear a ring, lift the portable handset from the charger to answer the call.

- If the portable handset is not set on the charger, press **外線** (Talk).


**2** When:  
– document reception is required,  
– a fax calling tone (slow beep) is heard, or  
– no sound is heard,

press **F1** until a single beep is heard.

- The main unit will start fax reception.

## Receiving faxes

 
### Receiving a fax automatically (AUTO ANSWER on)

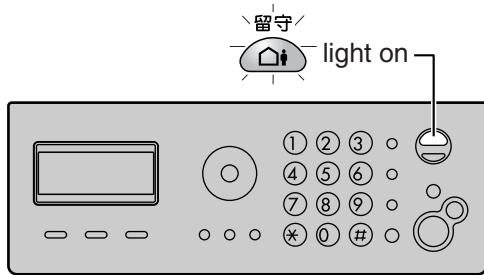

- 1 If the **留守** (Auto answer) light is off, turn it on by pressing **留守**.
- 2 When receiving a call, the unit will receive a fax document or record a voice message automatically depending on the caller's request.

## Operating the built-in answering device
 
### Recording your own greeting message

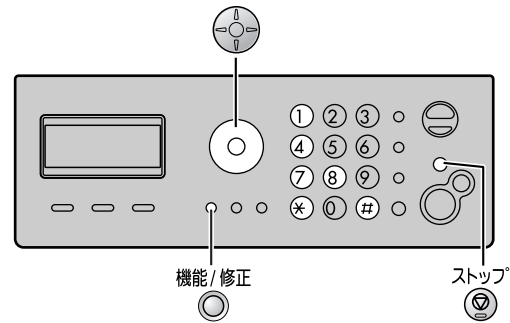

You can record your own greeting message. When receiving a call, it will be played to callers instead of the pre-recorded Japanese greeting message.

- 1 Press **機能/修正** (Function/Edit).
- 2 Press **# 1 4 7**.  

ジ サク オウトウ ロクオン  
[ケッテイ]オス
- 3 Press **決定** (Set).
- 4 Lift the handset.
- 5 Press **決定** (Set) and speak your greeting message after a beep, up to 16 seconds, to the handset.
- 6 Press **ストップ** (Stop) and replace the handset.
  - Your greeting message will be played back automatically.

### Erasing your own greeting message

 
- 1 Press **機能/修正** (Function/Edit).
- 2 Press **# 1 4 8**.  

ジ サク オウトウ ショウキョ  
[ケッテイ]オス
- 3 Press **決定** (Set).
- 4 Press **\***.
  - The pre-recorded Japanese greeting message will be played when you receive a call.



# Operating the built-in answering device

## Activating the answering device

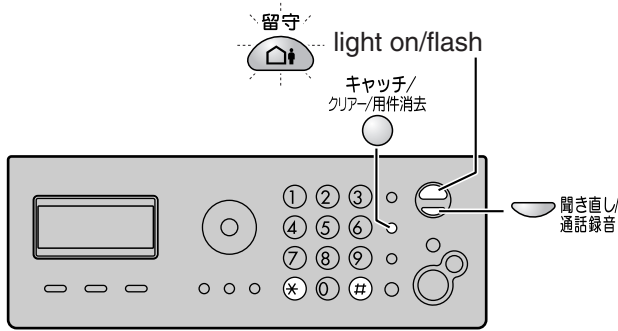

- 1 Turn the **留守** (Auto answer) light on by pressing **留守**.
- 2 When receiving a call, a greeting message will be played and the unit will record a voice message.
  - To record your own greeting message, see page 16.

## Listening to recorded messages

When new messages are recorded, the **留守** (Auto answer) light will flash.

Press **留守** to listen to recorded messages.

After the messages are played back, the following will be displayed.

- To erase the messages, press **\***. サイセイシタヨウケンシヨウキヨ  
スル=\* シナイ=#
- To save the messages, press **#**.

## Listening to all of the recorded messages

Press **聞き直し/通話録音** (Replay/Record).

After the messages are played back, the following will be displayed.

- To erase the messages, press **\***. サイセイシタヨウケンシヨウキヨ  
スル=\* シナイ=#
- To save the messages, press **#**.

## Erasing a specific message

Press **キャッチ/クリア/用件消去** (Flash/Clear/Eraser) while listening to the message you want to erase, then press **\***.

 
## Erasing all of the recorded messages

- 1 Press **キャッチ/クリア/用件消去** (Flash/Clear/Eraser).

スハ\*テ シヨウキヨシマスカ?  
ハイ=\* イイエ=#

- 2 Press **\***.

## Operating the answering device from a remote location

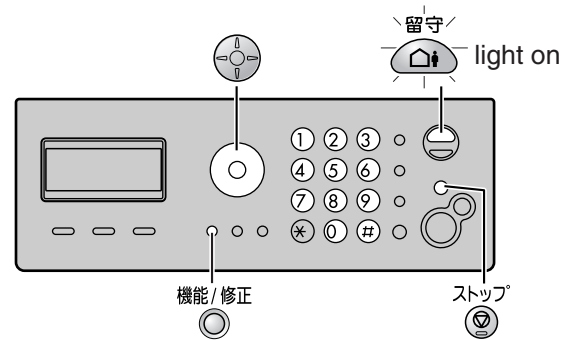

### Preparation: Programming the remote operation ID

1. Press **機能/修正** (Function/Edit).
2. Press **# 0 0 6**.
3. Enter any 4-digit number (remote operation ID) except \* or #.

**Example :** アンショウ No.=1234  
[4ケタ,ケツテイ]オス

4. Press **決定** (Set).
5. Press **ストップ** (Stop).

### Operation: Listening to a recorded message from a remote location

Turn the **留守** (Auto answer) light on before you go out. Remote operations are available only from a touch tone telephone.

1. Call your unit.
2. Enter the remote operation ID during the greeting message.
3. Press **2** or wait 4 seconds.
  - Only the new recorded messages will be played back.
  - To listen to all the recorded messages, press **4** after the new messages have been played back.

# Specifications

KX-PW504E2	Main unit	Portable handset (KX-FKN511)	Battery charger
<b>Power supply</b>	AC 100 V (50 Hz/60 Hz)	Ni-MH battery (Part no. KX-FAN50) DC 3.6 V, 600 mAh	AC adaptor (Part no. PFAP1009) AC 100 V (50 Hz/60 Hz) DC 7.5 V, 100 mA
<b>Power consumption</b>	Transmission: Approx. 10 W Reception: Approx. 15 W Copy: Approx. 20 W Stand by: Approx. 0.9 W (When the F-net service is not in use.) Maximum(*1): Approx. 130 W		<ul style="list-style-type: none"> <li>• Charging: Approx. 1.5 W</li> <li>• Stand by: Approx. 0.6 W</li> </ul>
<b>Dimensions (H x W x D)</b>	Approx. 110.5 X 332.5 X 205 mm (without projections) Approx. 355.5 X 332.5 X 243 mm (recording paper cover/tray installed, without projections)	Approx. 171 X 48 X 38 mm	Approx. 65 X 86 X 96 mm
<b>Mass (Weight)</b>	Approx. 2.9 kg (10 m ink film installed)	Approx. 160 g (battery installed)	Approx. 75 g
<b>Operating environment</b>	5 °C – 35 °C, 45 % – 85 % RH (Relative Humidity)		

KX-PW504E2	Main unit
<b>Applicable line</b>	Public Switch Telephone Network (Tone/Pulse), F-Net, NCC Lines
<b>DC resistance</b>	320 Ω (*2)
<b>Compatibility</b>	G3 compatible
<b>Document size</b>	A4–A5 (Max. 216 mm in width, Max. 600 mm in length)
<b>Effective scanning size</b>	208 mm (A4)
<b>Effective printing size</b>	202 mm (A4 size plain paper)
<b>Transmission time</b>	Approx. 15 s/page (Original mode) (*3)
<b>Modem speed</b>	9,600 / 7,200 / 4,800 / 2,400 bps; Automatic fallback
<b>Halftone level</b>	64-level
<b>Scanning density</b>	Horizontal: 8 pels/mm Vertical : 7.7 lines/mm (Fine/Photo), 3.85 lines/mm (Standard)
<b>Scanner type</b>	Contact image sensor
<b>Printer type</b>	Thermal transfer printing on plain paper
<b>Data compression system</b>	Modified Huffman (MH), Original mode
<b>Recording paper size</b>	A4: 210 mm x 297 mm (Plain paper)
<b>Answering device</b>	Greeting message: Digital recording system (up to 16 sec) Pre-recording greeting message ICM Recording: Digital recording system (Approx. 18 min. in total) (*4)
<b>Memory capacity</b>	Max. Approx. 46 pages (Only receiving fax etc.) (*5) Max. Approx. 18 min. (Only Recording message) (*4)

\*1 When copying a 100% black document.

\*2 If you cannot make a call due to DC resistance, consult your dealer.

\*3 Transmission speed is based on an A4-size document of 700 characters sent in standard resolution at 9,600 bps. The actual transmission speed depends upon the contents of the page, resolution, telephone line conditions and capability of the other party's machine.

\*4 If there is a silent pause, the total recording time will be longer.

\*5 The memory capacity is based on an A4-size document of 700 characters.



