 


Facsimile

Quick Reference Guide

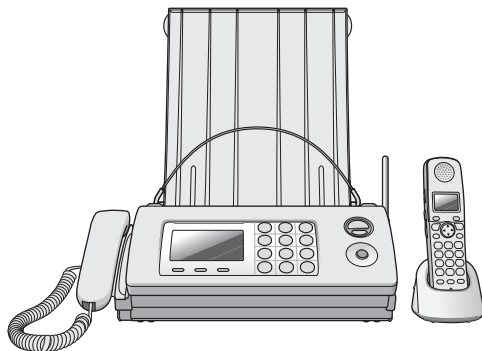

KX-PW605DL

Model No. **KX-PW605DL**
KX-PW605DW

Main unit: KX-PW605
 Portable handset: KX-FKN512

Thank you for purchasing a Panasonic facsimile.

Table of Contents


Finding the controls	2
Installations and connections	4
Setting the date and time.....	7
Setting your facsimile telephone number	7
Setting your logo	8
Character input and command key table	9
Voice guide.....	10
Automatic dialing on the main unit.....	11
Automatic dialing on the portable handset (KX-FKN512)	12
Intercom	13
Sending faxes	14
Receiving faxes	15
Operating the built-in answering device	16
Call block	18
Night mode.....	19
Adjusting the volume of a TV (KX-FKN512).....	19
Specifications	Back cover

- This guide explains some basic features and operations, but not all of them. For further details, see the Japanese operating instructions.
- This product is designed for use in Japan.
Panasonic cannot provide service for this product if used outside Japan.
- Any details given in this guide are subject to change without notice.

This unit is equipped with the voice guide features. (Japanese only)
For details about voice guide, please see page 10.

Finding the controls

 Main unit

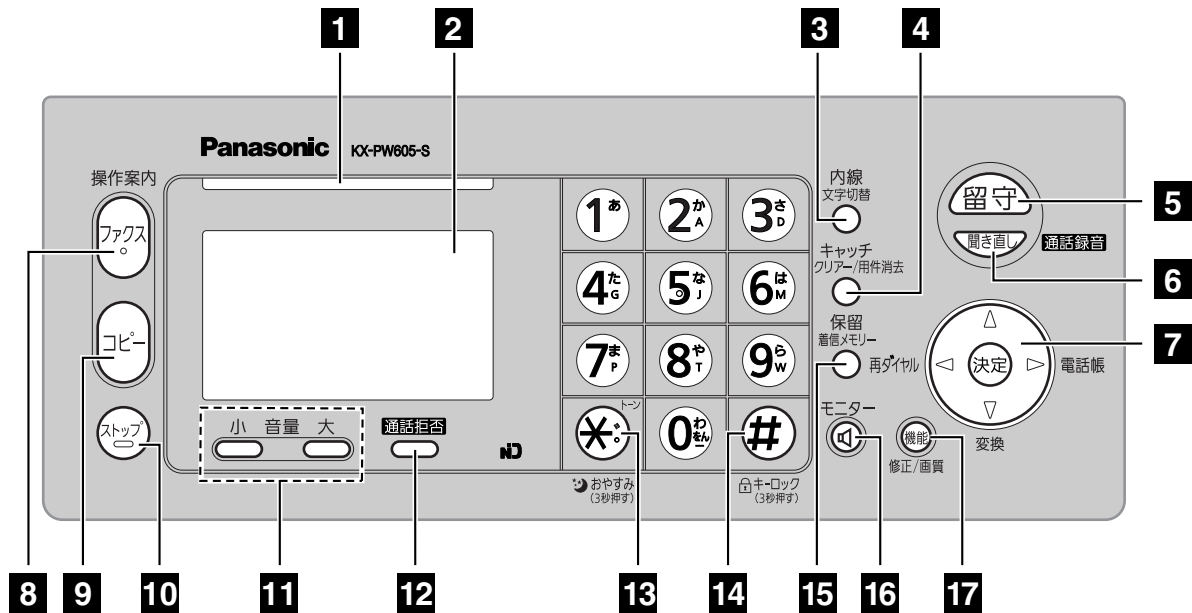

1 Call indicator

2 Liquid crystal display

3 Intercom button

Character Input Mode button

4 Flash button

(For call waiting service users.)

Clear/Erase button

5 Auto Answer button & indicator

—light on: answering device activated.

—light off: used as a regular telephone.

6 Replay button plays back recorded messages.

Record button records a telephone conversation.

7 Redial/Phonebook/Set key



To change Hiragana into Kanji.



To redial the phone numbers in the redial list. The last 10 phone numbers dialed are stored in memory.



To use the phonebook.



To store a parameter.

8 Fax button starts faxing.

9 Copy button starts copying.

10 Stop button

11 Volume button adjusts the volume.

12 Block button for the undesired call

13 Tone button switches to tone dialing.

Night mode button

14 Sharp button

Key lock button can lock the main unit so that no calls or settings can be made. To turn key lock on, press this button for about 3 seconds until a single beep is heard.

- “**キーロック**” is displayed

- To turn key lock off, press this button for about 3 seconds.

15 Hold button

Call Memory button starts a search in the Number Display (Caller ID) log. (For Number Display service users.)

16 Monitor button

17 Function button initiates programming.

 
Edit button

Resolution button selects the resolution when faxing or copying.

Finding the controls

Portable handset (KX-FKN512)

Liquid crystal display

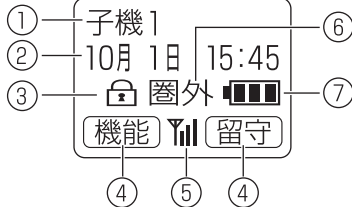

- ① Portable handset number (and name)
- ② Date and time (set by main unit)
- ③ Key lock is on
- ④ Function menu that is controlled by **F1** or **F2**
- ⑤ Link strength to the main unit
- ⑥ No link to the main unit
- ⑦ Battery strength

テレビ消音

- To mute the TV volume.

テレビ音量

- To adjust the TV volume.



- To make/answer calls.



- To end a call.
- To end or exit from editing or other operations.

 


- To page the main unit and/or portable handset(s).
- To clear letters/numbers.



- To put a call on hold.
- To start a search in the Number Display log. (For Number Display service users.)

Earpiece

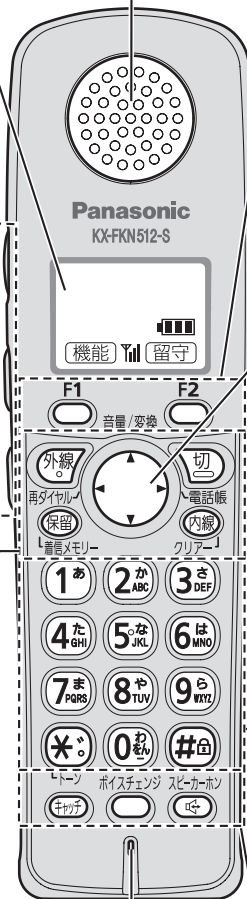

Microphone

(Do not cover the microphone while talking.)

How to use **F1** **F2** buttons

- F1** and **F2** buttons refer to the function displayed on the bottom of the display. They function differently depending on the mode.

How to use **音量/変換** key

- To use the phonebook.
- To redial the phone numbers in the redial list. The last 10 phone numbers dialed are stored in memory.
- To adjust the volume.
- To change Hiragana into Kanji.

Dial buttons

- **トーン** (Tone button)
 - To switch to tone dialing.
- **シャープ** (Sharp button)
 - To lock the portable handset so that no calls or settings can be made. To turn key lock on, press this button for about 3 seconds until a single beep is heard.
 - “**鍵外**” is displayed.
 - To turn key lock off, press this button for about 3 seconds.

 
- **キルチ** (Call waiting)
 - For call waiting service users.

- **ボイスチェンジ** (Voice change)
 - To change your voice.
 - To mute your voice to the other party by pressing this button for about 2 seconds. (To release the mute, press this button again.)


- **スピーカーホン** (Speakerphone)
 - To use the speakerphone.

Installations and connections

Installing the ink film

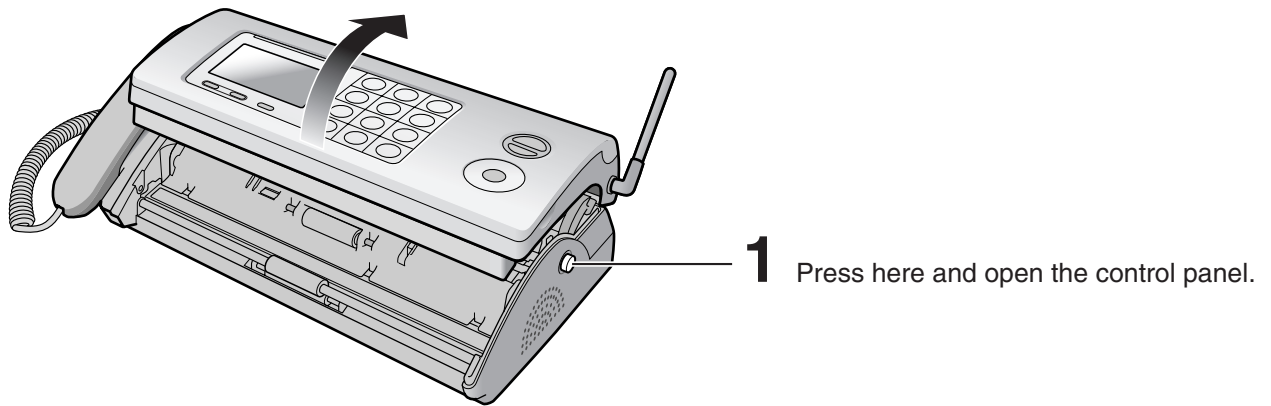

 1 Press here and open the control panel.

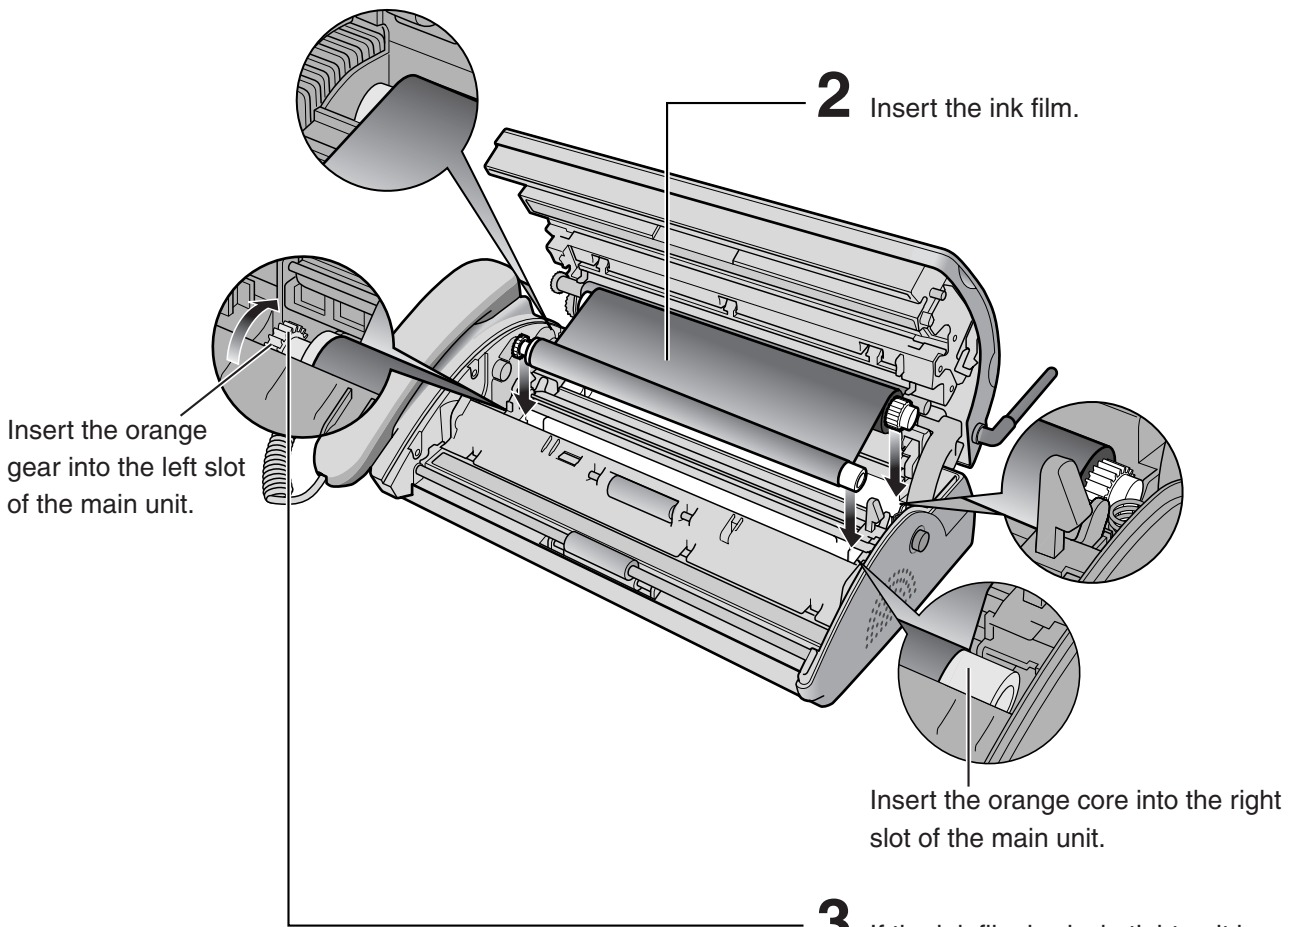

2 Insert the ink film.

Insert the orange gear into the left slot of the main unit.

Insert the orange core into the right slot of the main unit.

3 If the ink film is slack, tighten it by winding this gear (orange).

4 Close the control panel until it locks.

• When the unit runs out of ink film, the following message will be displayed.

フィルムがなくなりましたU23
交換してください



フィルムがなくなりましたU23
品番: KX-FAN200

Install a new ink film.

 
Replacement ink film:
KX-FAN200 (30 m) ¥1,208

• As of February 2006.


• Tax included.

Installations and connections


Installing recording paper (A4 size)

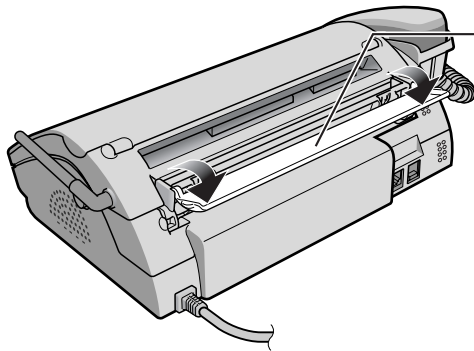

 - 1** Open the recording paper insertion cover.

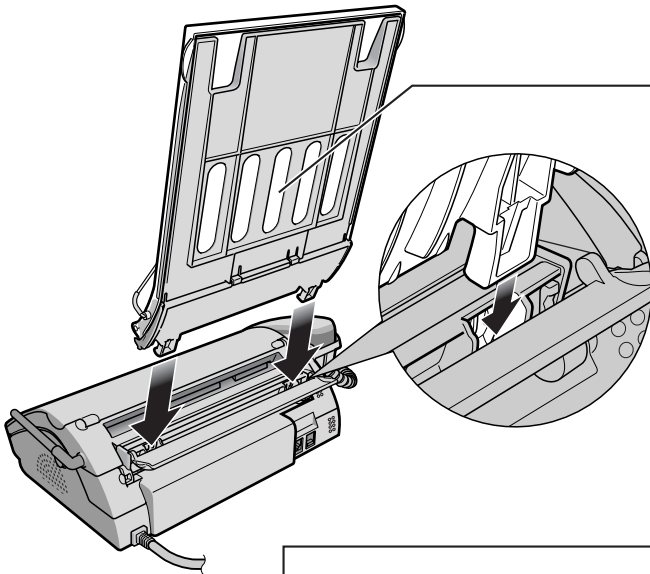

 
- 2** Install the recording paper cover/tray.

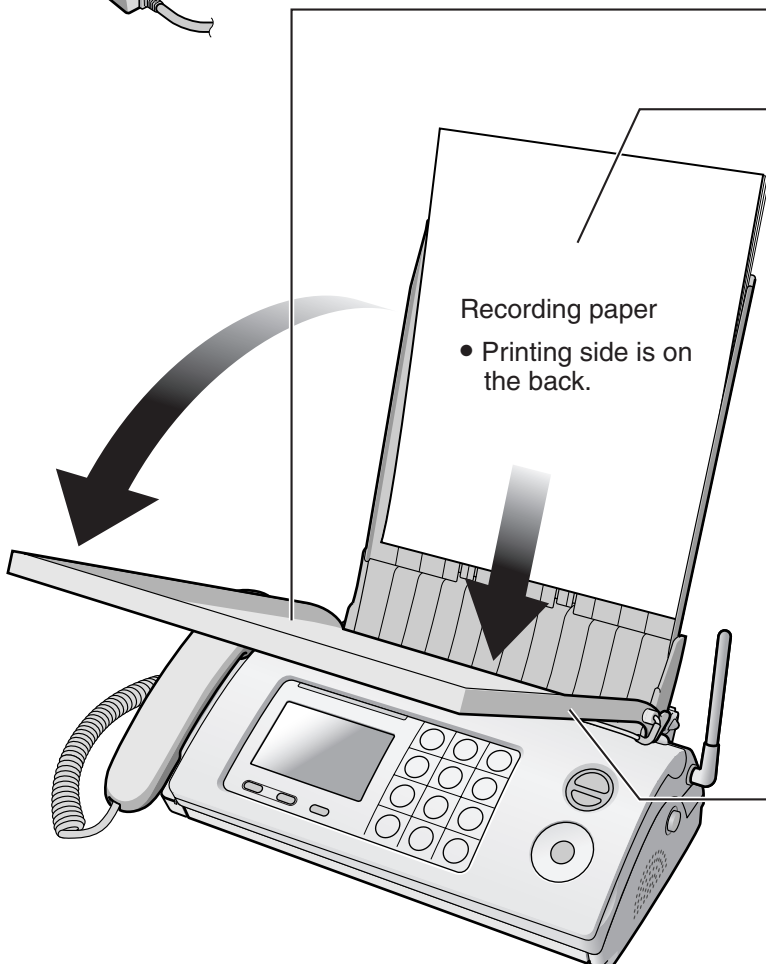

- 3** Open the recording paper cover.

- 4** Insert the recording paper into the recording paper tray. (Up to 20 sheets)

 
- Fan the stack of recording paper.

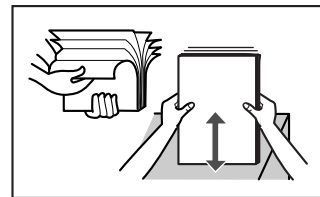

- 5** Close the recording paper cover.

Installations and connections

 Connecting the main unit

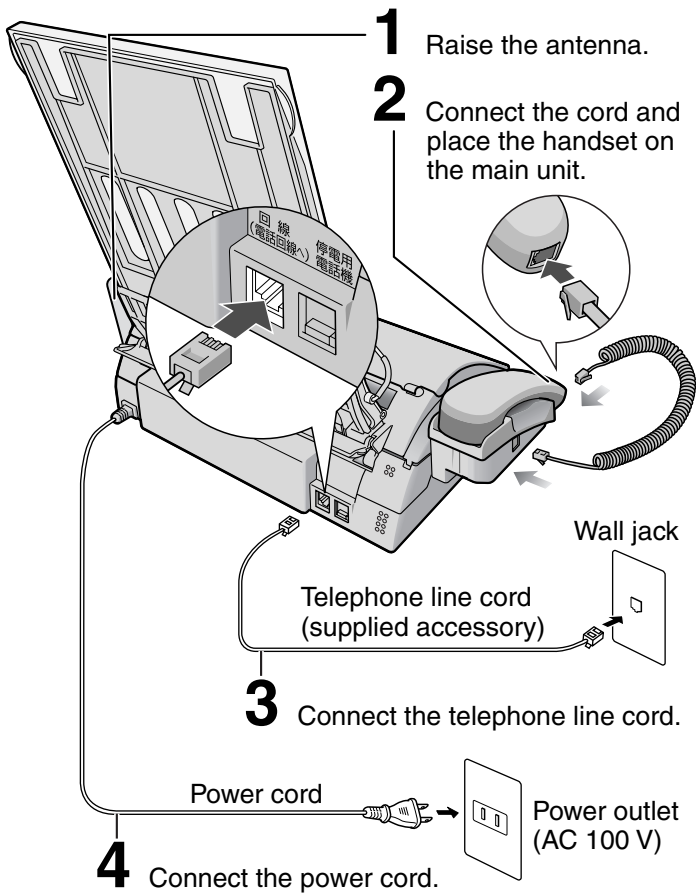

After the Power On...

This unit will automatically select the dialing mode (Tone/Pulse).



If you can not make a call...

Set the dialing mode with the main unit.

1. Press (Function/Edit/Resolution).
2. Press **# 0 7 9**.
3. Press (Search button) repeatedly until the desired setting is displayed.


Example :

回線種別=20	• プッシュ: Tone
[◀, ▶, 決定] 押す	20 : Pulse (20 PPS)
	10 : Pulse (10 PPS)


4. Press (Set).
5. Press (Stop).

Setting up the portable handset (KX-FKN512)

 
1

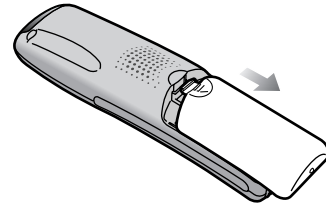

2

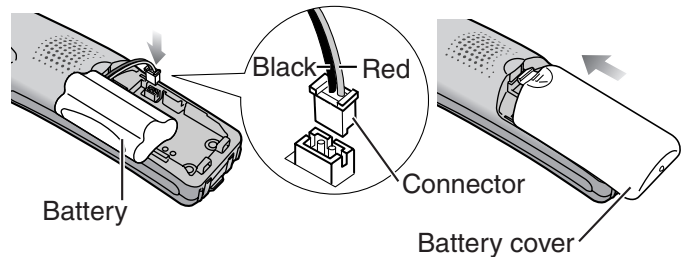 

3

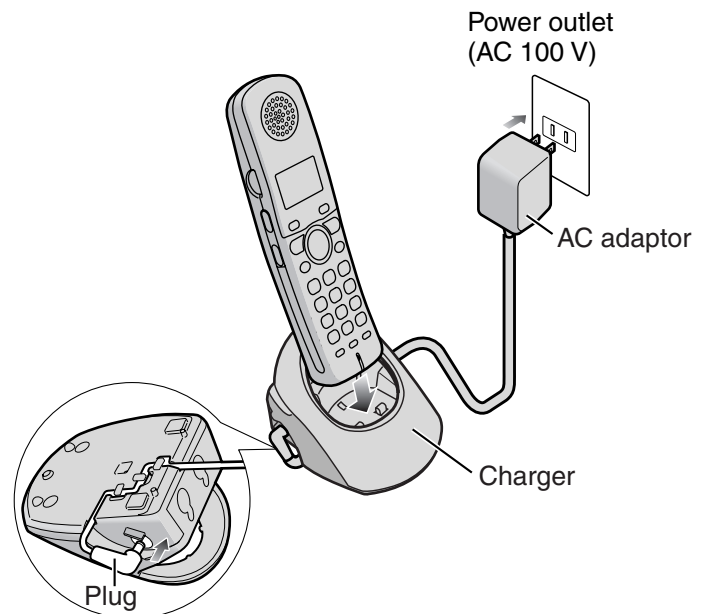 


4

Charge the battery in the charger **for 10 hours**.

- After your Panasonic battery is fully charged, it will last up to about 7 hours of conversation.

 Setting the date and time

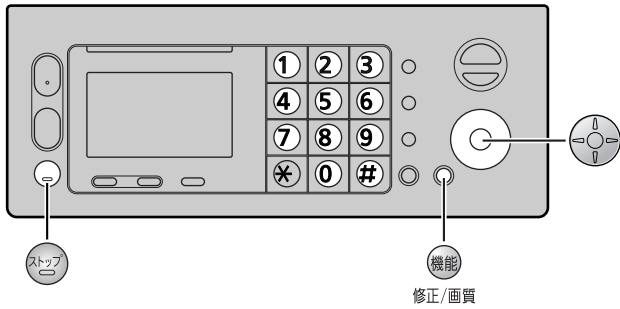

1 Press (Function/Edit/Resolution).

機能登録モード
[▼,▲] 押す

2 Press **# 0 0 1**.

Example : 2006年09月30日
15:00
Cursor

3 Enter the correct year/month/day.

Example: **October 1, 2006**

Press **2 0 0 6 1 0 0 1**.

2006年10月01日
15:00

4 Enter the correct hour/minute in a 24-hour clock entry.

Example: **15:45 (3:45 PM)**

Press **1 5 4 5**.

2006年10月01日
15:45

5 Press (Set).

 
登録しました

↓
2006年10月01日
15:45

6 Press (Stop).

Example : 10月 1日 15:45
用件録音 0 件

Setting your facsimile telephone number

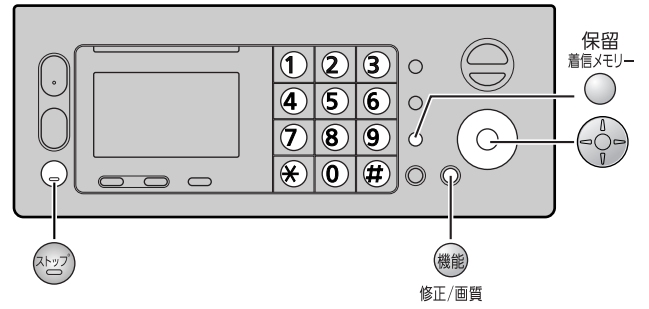

1 Press (Function/Edit/Resolution).

機能登録モード
[▼,▲] 押す

2 Press **# 0 0 4**.

あなたの電話番号?
.....
Cursor

3 Enter your facsimile telephone number, up to 20 digits.

Example: **+098 7654..**

あなたの電話番号?
+098 7654.....

- The (Tone) button replaces the digit with “+”.
- The (Hold/Call memory) button replaces the digit with a space.

4 Press (Set).

 
登録しました

↓
あなたの電話番号?
+098 7654.....

5 Press (Stop).

Example : 10月 1日 15:45
用件録音 0 件


Setting your logo

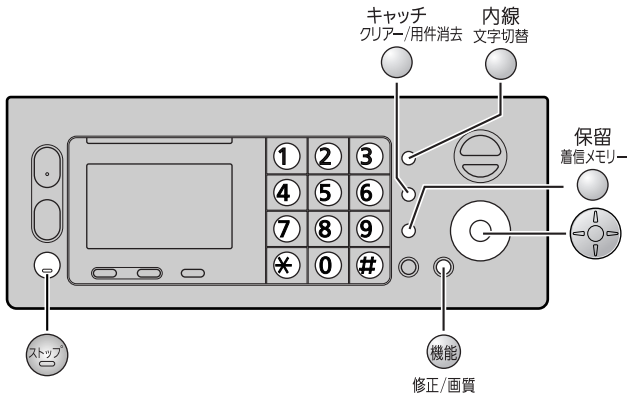

1 Press (Function/Edit/Resolution).



 2 Press .

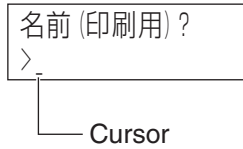


3 Enter your logo, up to 30 characters, using the dial keypad.

- To enter English characters easily, press (Intercom/Character input mode) repeatedly and select “英” (English and sign input mode).
- For details, see the table on page 9 for instructions.

Example: Micah

 1. Press once.

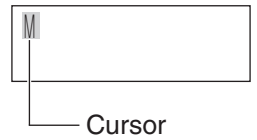


2. Press six times.



3. Press six times.



 
4. Press to move the cursor to the next space and press four times.



5. Press five times.



 4 Press (Set).

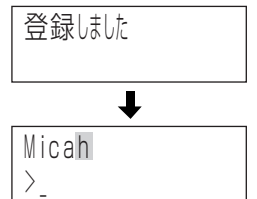

5 Press (Stop).

Example :



Character input and command key table

Pressing the dial keys will select a character as shown below.

















Character		“かな” Hiragana	“カナ” Katakana	“英” English	“数” Numbers
Dial key					
(Main unit) ①	(Portable handset KX-FKN512) ①	あいうえお あいうえお	アイウエオ アイウエオ	@ . _ - & \$ ¥ % + = ~ ^	1
②	②	かきくけこ	カキクケコ	A B C a b c	2
③	③	さしすせそ	サシスセソ	D E F d e f	3
④	④	たちつてとっ	タチツテトツ	G H I g h i	4
⑤	⑤	なにぬねの	ナニヌネノ	J K L j k l	5
⑥	⑥	はひふへほ	ハヒフヘホ	M N O m n o	6
⑦	⑦	まみむめも	マミムメモ	P Q R S p q r s	7
⑧	⑧	やゆよやゆよ	ヤユヨヤユヨ	T U V t u v	8
⑨	⑨	らりるれろ	ラリルレロ	W X Y Z w x y z	9
⑩	⑩	わをんー! ? ()	ワヲンー! ? ()	! ? / - * # , ; : . ' " () [] { } < > 「 」	0
✳	✳	ゝ っ っ っ		、 。	
Command keys		内線 文字切替 ● (Main unit), F2 (Portable handset)		Used to change the character input mode.	
		● (Main unit), ● (Portable handset)		Used to move the cursor to the left and right.	
		キャッチ クリアー/用件消去 ● (Main unit), ● (Portable handset)		Used to delete a character.	
		保留 着信メモリー ● (Main unit), ● (Portable handset)		Used to insert a space.	

- The characters on the display are somewhat different from those shown in the character input and command key table.

Voice guide

Operation guide

The unit starts the following voice guidance in Japanese:

Operations	To cancel the operation guide
Send a fax	 → # 0 2 1 →  (Select [なし]) →  決定 →  ストップ
Copy	
Add entries to the phonebook	 → # 1 6 7 →  (Select [なし]) →  決定 →  ストップ
Make a call using the phonebook/redial/call memory	
Change a ink film	 → # 1 7 3 →  (Select [なし]) →  決定 →  ストップ
Print fax documents from the main unit memory	 → # 1 7 7 →  (Select [なし]) →  決定 →  ストップ

Error announcements

The unit can make an announcement to alert you when the following errors or trouble occurs:

- The control panel is opened while sending a fax or printing
- The recording paper runs out or jams
- The ink film runs out
- The document paper jams or does not eject properly

• To cancel the error announcements



Reading-out dial

 
The unit announces the number dialed, when you make a call with the main unit.

• To cancel the reading-out dial



Automatic dialing on the main unit

Storing names and telephone numbers in the phonebook

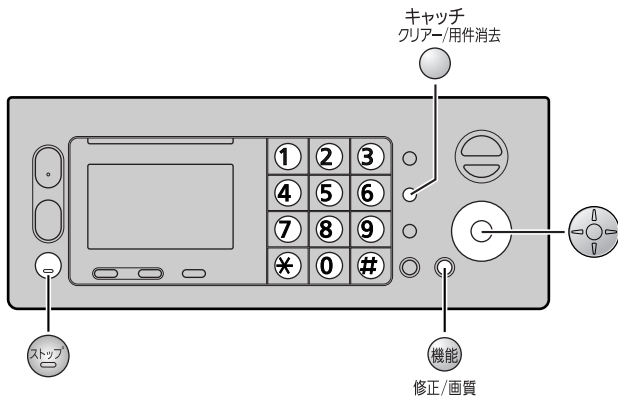

1 Press 電話帳 (Phonebook).

登録は[決定]を押す
検索は[▼,▲]を押す

2 Press 決定 (Set).

- “XXX” shows the remaining station numbers you can store.
- You can program up to 150 stations, including 4 pre-programmed stations.

電話帳空き XXX 件

3 Enter the name, up to 20 characters (see the table on page 9 for instructions).

4 Press 決定 (Set) 2 times.

5 Enter the telephone number, up to 24 digits.

- To correct a mistake, press (Flash/Clear/Erase).

6 Press 決定 (Set).

7 Enter the group number (① to ⑨).

8 Press 決定 (Set).

- To program other items, repeat steps 3 to 8.

9 Press ストップ (Stop) to exit the program.

Making a voice call using the phonebook

1 Press 電話帳 (Phonebook).

2 Press (Search button) repeatedly until the desired name is displayed.

3 Lift the handset.

Editing a stored name or number in the phonebook

1 Press 電話帳 (Phonebook).

2 Press (Search button) repeatedly until the desired name is displayed.

3 Press 機能 修正/画質 (Function/Edit/Resolution).

4 Edit the name (see the table on page 9 for instructions).

- If you do not need to edit the name, skip to step 5.

5 Press 決定 (Set).

6 Edit the kana.

- If you do not need to edit the kana, skip to step 7.

7 Press 決定 (Set).

8 Edit the telephone number.

- If you do not need to edit the telephone number, skip to step 9.

9 Press 決定 (Set).

10 Edit the group number.

 
- If you do not need to edit the group number, skip to step 11.

11 Press 決定 (Set).

12 Press ストップ (Stop).

Automatic dialing on the portable handset (KX-FKN512)

Storing names and telephone numbers in the phonebook

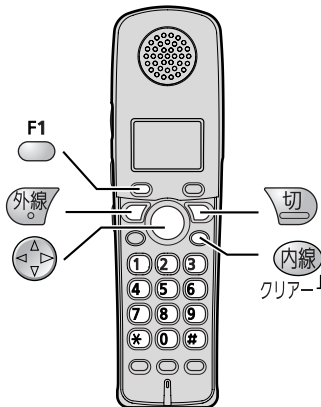

1 Press 電話帳 (Phonebook).

検索は
[▼,▲]を押す

2 Press F1.

- “XXX” shows the remaining station numbers you can store.
- You can program up to 150 stations, including 4 pre-programmed stations.

名前?
空き XXX 件

3 Enter the name, up to 20 characters (see the table on page 9 for instructions).

4 Press F1 2 times.

5 Enter the telephone number, up to 24 digits.

- To correct a mistake, press 内線 (Clear).

6 Press F1.

7 Enter the group number (① to ⑨).

8 Press F1.

- To program other items, repeat steps 3 to 8.

9 Press 切 (Off) to exit the program.

Making a voice call using the phonebook

1 Press 電話帳 (Phonebook).

2 Press (Search button) repeatedly until the desired name is displayed.

3 Press 外線 (Talk).

Editing a stored name or number in the phonebook

1 Press 電話帳 (Phonebook).

2 Press (Search button) repeatedly until the desired name is displayed.

3 Press F1.

4 Edit the name (see the table on page 9 for instructions).

- If you do not need to edit the name, skip to step 5.

5 Press F1.

6 Edit the kana.

- If you do not need to edit the kana, skip to step 7.

7 Press F1.

8 Enter the correct telephone number.

- If you do not need to edit the telephone number, skip to step 9.

9 Press F1.

10 Edit the group number.

- If you do not need to edit the group number, skip to step 11.

 
11 Press F1.

12 Press 切 (Off) to exit the program.

Intercom

An intercom is available between the portable handsets or between the main unit and portable handset(s).

Using the main unit:

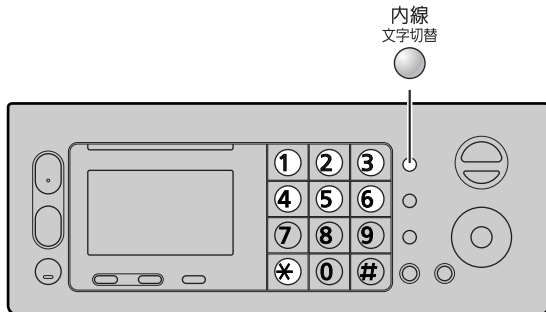

1 ■ For single portable handset users



- ① Lift the handset.

電話番号?

- ② Press  (Intercom/Character input mode).

子機 1 呼出中

■ For multiple portable handset users

 
- ① Lift the handset.
- ② Press  (Intercom/Character input mode).
- ③ Call the portable handset(s) in the following ways:
 - To call a specific portable handset, press the portable handset number (① to ⑥) which you want to call.
 - To call all the portable handsets, press .

2 Start talking.

Example : 子機 1 内線通話中

3 Replace the handset to end the intercom call.

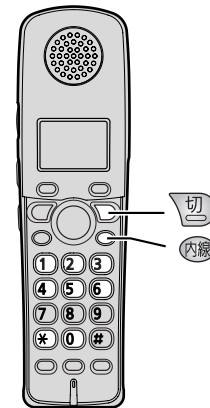


Using the portable handset (KX-FKN512):



1 ■ For single portable handset users

Press  (Intercom).

■ For multiple portable handset users

- ① Press  (Intercom).
- ② Call the main unit and/or portable handset(s) in the following ways:
 - To call a specific portable handset, press the portable handset number (① to ⑥) which you want to call.
 - To call the main unit, press .
 - To call the main unit and all the portable handsets, press .

 
2 Start talking.

内線通話中

3 Press (Off) to end the intercom call.


Sending faxes

Sending a fax manually

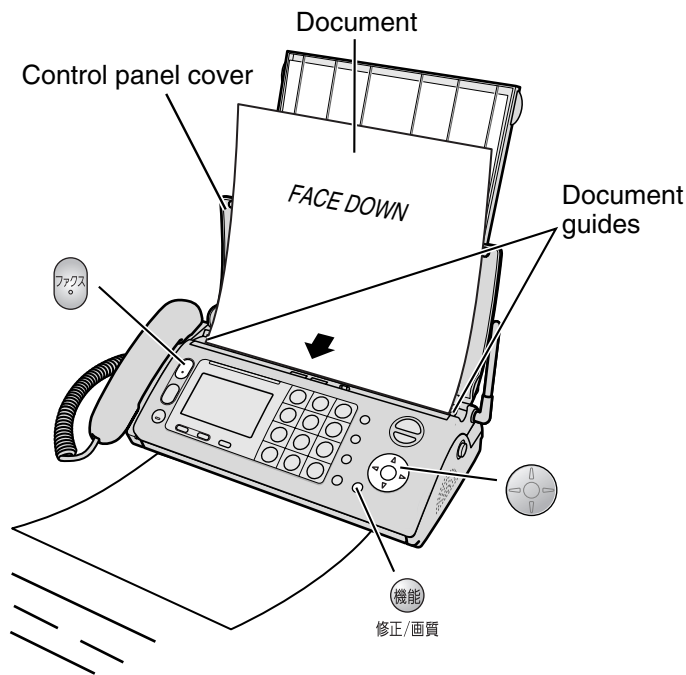

- 1** Open the control panel cover, and adjust the width of the document guides to the size of the document.
- 2** Press **ファクス** (Fax).
- 3** If necessary, press **機能 修正/画質** (Function/Edit/Resolution), press **検索** (Search button) repeatedly to select the desired setting, then press **決定** (Set) (see below).
- 4** Insert the document (up to 5 pages) FACE DOWN until a single beep is heard.
- 5** Dial the fax number.
- 6** Press **ファクス** (Fax).
 - The unit will start fax transmission.

 Sending a fax using the phonebook

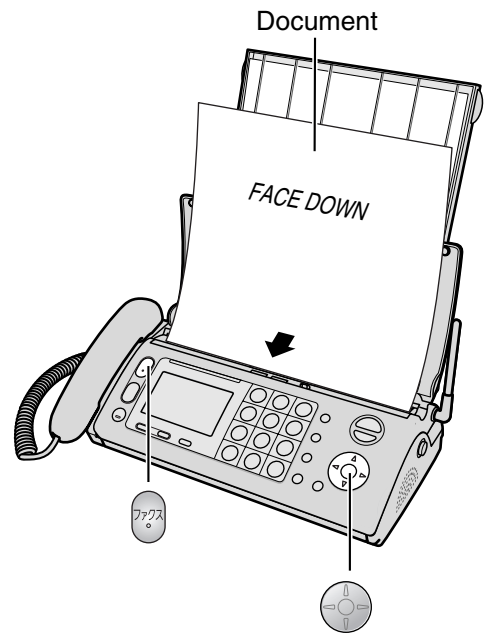

- 1** Insert the document (up to 5 pages) FACE DOWN until a single beep is heard.
- 2** Press **電話帳** (Phonebook).
- 3** Press **検索** (Search button) repeatedly until the desired name is displayed.
- 4** Press **ファクス** (Fax).
 - The unit will start fax transmission.

To select the resolution

Select the desired resolution according to the type of document, by pressing **機能 修正/画質** (Function/Edit/Resolution), then press **検索** (Search button) repeatedly.

- If you turn the operation guide off, press **機能 修正/画質** (Function/Edit/Resolution) 2 times, then press **検索** (Search button) repeatedly.

Press **決定** (Set) to decide the resolution.

画質=通常 [◀,▶,決定]押す (Standard) for printed or typewritten originals with normal-sized characters.

 
画質=小さい [◀,▶,決定]押す (Fine) for originals with minute printing.

画質=写真 [◀,▶,決定]押す (Photo) for originals containing photographs.

Receiving faxes


Receiving a fax manually (AUTO ANSWER off)

Using the main unit:

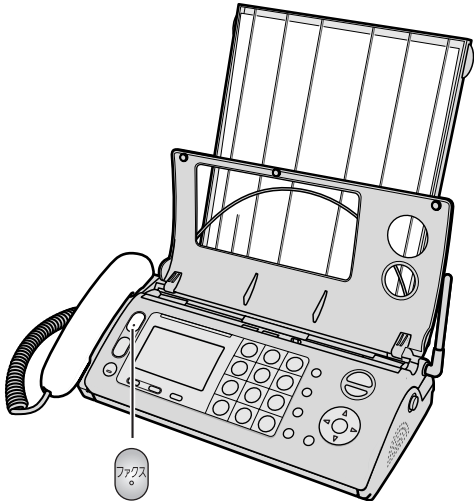


1 When you hear a ring, lift the handset to answer the call.

2 When:
– document reception is required,
– a fax calling tone (slow beep) is heard, or
– no sound is heard,


press  (Fax), then replace the handset.


- The unit will start fax reception.

 
Using the portable handset (KX-FKN512):

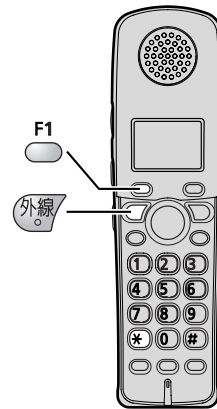


1 When you hear a ring, lift the portable handset from the charger to answer the call.

- If the portable handset is not set on the charger, press  (Talk).

 
2 When:
– document reception is required,
– a fax calling tone (slow beep) is heard, or
– no sound is heard,
press .

3 Press  (Search button) repeatedly until the “ファクス受信” is displayed.

4 Press  2 times.
• The main unit will start fax reception.

Receiving faxes


Receiving a fax automatically (AUTO ANSWER on)

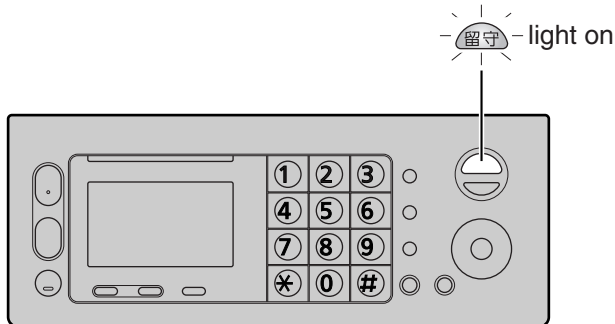

- 1 If the **留守** (Auto answer) light is off, turn it on by pressing **留守**.
- 2 When receiving a call, the unit will receive a fax document or record a voice message automatically depending on the caller's request.

Operating the built-in answering device

 Recording your own greeting message

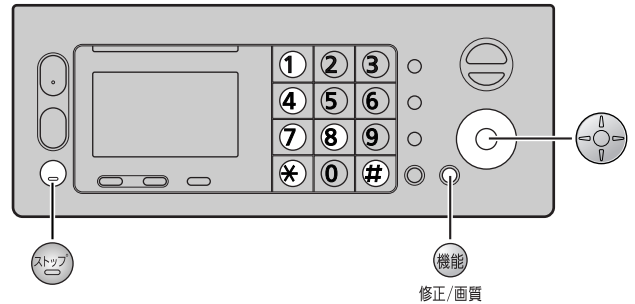

You can record your own greeting message. When receiving a call, it will be played to callers instead of the pre-recorded Japanese greeting message.

- 1 Press **機能** (Function/Edit/Resolution).
- 2 Press **# 1 4 7**.

自作応答録音
[決定]押す
- 3 Press **決定** (Set).
- 4 Lift the handset.
- 5 Press **決定** (Set) and speak your greeting message after a beep, up to 16 seconds, to the handset.
- 6 Press **ストップ** (Stop) and replace the handset.
 - Your greeting message will be played back automatically.

 
Erasing your own greeting message

- 1 Press **機能** (Function/Edit/Resolution).
- 2 Press **# 1 4 8**.

自作応答消去
[決定]押す
- 3 Press **決定** (Set).
- 4 Press *****.
 - The pre-recorded Japanese greeting message will be played when you receive a call.

Operating the built-in answering device

Activating the answering device

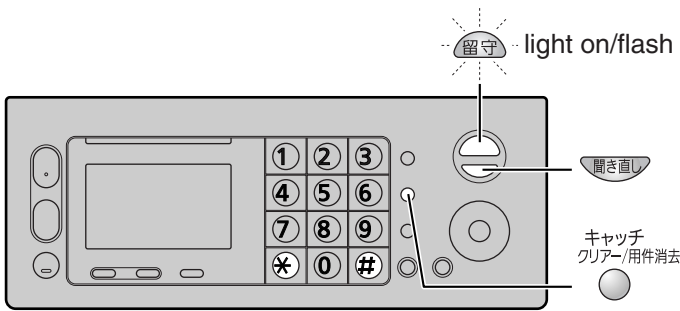

- 1 Turn the **留守** (Auto answer) light on by pressing **留守**.
- 2 When receiving a call, a greeting message will be played and the unit will record a voice message.
 - To record your own greeting message, see page 16.

Listening to recorded messages

When new messages are recorded, the **留守** (Auto answer) light will flash.

Press **留守** to listen to recorded messages.

After the messages are played back, the following will be displayed.

- To erase the messages, press *****. 再生した用件を消去する=* しない=#
- To save the messages, press **#**.

Listening to all of the recorded messages

Press **聞き直し** (Replay).

After the messages are played back, the following will be displayed.

- To erase the messages, press *****. 再生した用件を消去する=* しない=#
- To save the messages, press **#**.

 
Erasing a specific message

Press **キャッチ クリアー/用件消去** (Flash/Clear/Eraser) while listening to the message you want to erase, then press *****.

Erasing all of the recorded messages

- 1 Press **キャッチ クリアー/用件消去** (Flash/Clear/Eraser). すべて消去しますか?
はい=* いいえ=#
- 2 Press *****.

Operating the answering device from a remote location

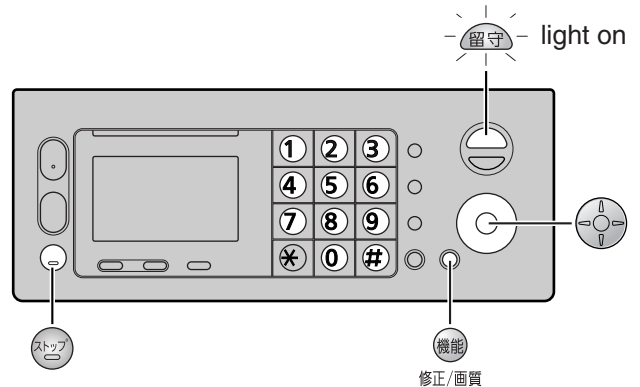

Preparation: Programming the remote operation ID

1. Press **機能** (Function/Edit/Resolution).
2. Press **# 0 0 6**.
3. Enter any 4-digit number (remote operation ID) except * or #.

Example : 暗証番号=1234
[4桁, 決定]押す

4. Press **決定** (Set).
5. Press **ストップ** (Stop).

 
Operation: Listening to a recorded message from a remote location

Turn the **留守** (Auto answer) light on before you go out. Remote operations are available only from a touch tone telephone.

1. Call your unit.
2. Enter the remote operation ID during the greeting message.
3. Press **2** or wait 4 seconds.
 - Only the new recorded messages will be played back.
 - To listen to all the recorded messages, press **4** after the new messages have been played back.

Blocking the incoming calls

Using the main unit:

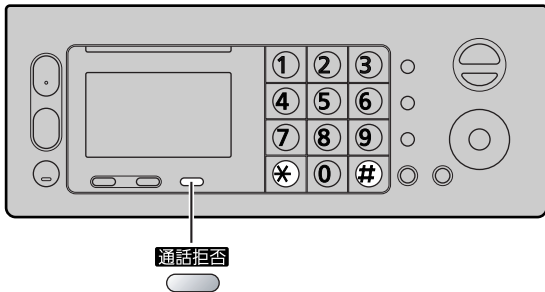

Press **通話拒否** (Block) while the unit is ringing or while you are on an incoming call.

- The unit announces a message to the caller 2 times, then hangs up automatically. The message is announced in Japanese and means “We’re sorry, but your call cannot be connected.”.

For Number Display service subscribers

If you subscribe to Number Display service, the message heard by the caller will change according to the caller’s situation.

Example :

If the caller requested not to send caller’s information, the message heard by the caller will change to mean
 “Your phone number is blocked by service provider.
 Please call again with adding ‘186’ to the beginning of the phone number.”.

When the following is displayed after pressing

通話拒否 (Block), you can set the unit to block the call from the same telephone number.

 
- To block the call, press *****.
- To cancel blocking, press **#**.

迷惑設定しますか?
はい=* いいえ=#

- When the following is displayed, press **#** to cancel.

拒否設定しますか?
はい=* いいえ=#

Using the portable handset (KX-FKN512):

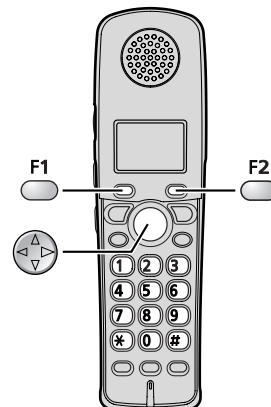

1 Press **F1** while the unit is ringing or while you are on an incoming call.

2 Press **Search** (Search button) repeatedly until the “通話拒否” is displayed.

3 Press **F1** 2 times.

- The unit announces a message to the caller 2 times, then hangs up automatically. The message is announced in Japanese and means “We’re sorry, but your call cannot be connected.”.

For Number Display service subscribers

If you subscribe to Number Display service, the message heard by the caller will change according to the caller’s situation.

Example :

If the caller requested not to send caller’s information, the message heard by the caller will change to mean
 “Your phone number is blocked by service provider.
 Please call again with adding ‘186’ to the beginning of the phone number.”.

When the following is displayed after operating step 1 to 3, you can set the unit to block the call from the same telephone number.

- To block the call, press **F1**.
- To cancel blocking, press **F2**.

 
迷惑設定
しますか?

- When the following is displayed, press **F2** to cancel.

拒否設定
しますか?

Night mode

Turn on the night mode

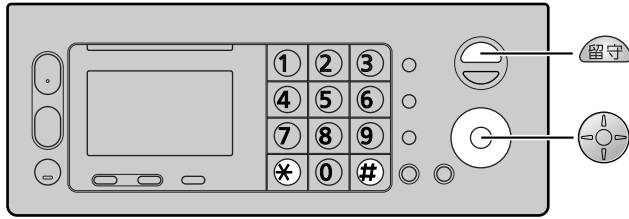

Press (Night mode) for about 3 seconds.

- “” is displayed and lights on.
- When a call is received during night mode, the unit will handle the call silently, either by storing the received fax into memory or by recording the caller's message.
- Night mode allows you to select a block of time during which the unit will not ring for outside calls or make sounds when you change the settings. This feature is useful when you do not want to be disturbed, for example, while sleeping.

Listening to recorded messages

When new messages are recorded, the (Auto answer) light will flash.

Press to listen to recorded messages.

After the messages are played back, the following will be displayed.

- To erase the messages, press . 再生した用件を消去
する=* しない=#
- To save the messages, press .

Printing received fax documents

When new faxes are received, the following will be displayed.

 
ファクスが届いています
印刷は[決定]押す

Press (Set) 2 times to print fax documents.

Turn off the night mode

Press (Night mode) for about 3 seconds.

Adjusting the volume of a TV (KX-FKN512)

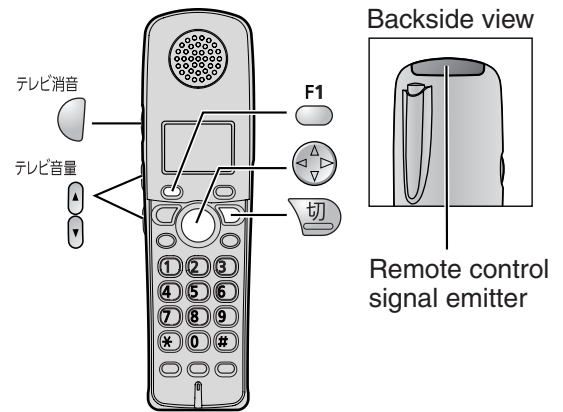

Preparation: Programming the maker of your TV

1. Press .
2. Press (Search button) repeatedly until the “テレビメーカー登録” is displayed.
3. Press 2 times.
4. Press (Search button) repeatedly until the maker of your TV is displayed.
 - If you do not want to use this feature, please select “使用しない”.
5. Press .
6. Press (Off).

• You can select from the following:

松下1	松下2	松下3	三洋1	三洋2
シャープ1	シャープ2	シャープ3	富士通セネラル	ソニー
東芝	NEC1	NEC2	パイオニア	日立1
日立2	アイ	ビクター	三菱1	三菱2
アイワ	使用しない			

- This feature may not work with some TV models even if you select the maker correctly.
- This feature cannot be used with TV/VCR combo decks or PCs with built-in TV tuners.
- Some makers have multiple setting choices (for example, “松下1” to “松下3”). Please choose one which you can operate correctly.

Operation: Adjusting the TV volume

Press (TV volume) to adjust the TV volume.

Operation: Mute the TV volume

Press (TV mute) to mute TV volume.

- To cancel mute, press (TV mute) again.

Specifications

KX-PW605DL KX-PW605DW	Main unit	Portable handset (KX-FKN512)	Battery charger
Power supply	AC 100 V (50 Hz/60 Hz)	Ni-MH battery (Part no. KX-FAN50) DC 3.6 V, 600 mAh	AC adaptor (Part no. PFAP1009) AC 100 V (50 Hz/60 Hz) DC 7.5 V, 100 mA
Power consumption	Transmission: Approx. 12 W Reception: Approx. 15 W Copy: Approx. 21 W Stand by: Approx. 0.9 W (When the F-net service is not in use.) Maximum(*1): Approx. 130 W	/	<ul style="list-style-type: none"> • Charging: Approx. 1.5 W • Stand by: Approx. 0.6 W
Dimensions (H x W x D)	Approx. 103 X 332.5 X 195 mm (without handset, projections) Approx. 355.5 X 332.5 X 233 mm (recording paper cover/tray installed, without handset, projections)	Approx. 171 X 48 X 38 mm	Approx. 65 X 86 X 96 mm
Mass (Weight)	Approx. 3.0 kg (10 m ink film installed)	Approx. 160 g (battery installed)	Approx. 75 g
Operating environment	5 °C – 35 °C, 45 % – 85 % RH (Relative Humidity)		

KX-PW605DL KX-PW605DW	Main unit
Applicable line	Public Switch Telephone Network (Tone/Pulse), F-Net, NCC Lines
DC resistance	320 Ω (*2)
Compatibility	G3 compatible
Document size	B4–A5 (Max. 257 mm in width, Max. 600 mm in length)
Effective scanning size	252 mm (B4), 208 mm (A4)
Effective printing size	202 mm (A4 size plain paper)
Transmission time	Approx. 15 s/page (Original mode) (*3)
Modem speed	9,600 / 7,200 / 4,800 / 2,400 bps; Automatic fallback
Halftone level	64-level
Scanning density	Horizontal: 8 pels/mm Vertical : 7.7 lines/mm (Fine/Photo), 3.85 lines/mm (Standard)
Scanner type	Contact image sensor
Printer type	Thermal transfer printing on plain paper
Data compression system	Modified Huffman (MH), Original mode
Recording paper size	A4: 210 mm x 297 mm (Plain paper)
Answering device	Greeting message: Digital recording system (up to 16 sec) Pre-recording greeting message ICM Recording: Digital recording system (Approx. 18 min. in total) (*4)
Memory capacity	Max. Approx. 46 pages (Only receiving fax etc.) (*5) Max. Approx. 18 min. (Only recording message) (*4)

*1 When copying a 100% black document.

*2 If you cannot make a call due to DC resistance, consult your dealer.

*3 Transmission speed is based on an A4-size document of 700 characters sent in standard resolution at 9,600 bps. The actual transmission speed depends upon the contents of the page, resolution, telephone line conditions and capability of the other party's machine.

*4 If there is a silent pause, the total recording time will be longer.

*5 The memory capacity is based on an A4-size document of 700 characters.

© 2006 Panasonic Communications Co., Ltd. All Rights Reserved.

PFQX2487ZA FK0206MH0