

Windows® 7/ Windows Server® 2008 R2 “USB Printer Driver Installation Guide”


1

Connecting the Device

With the **Device Power Turned OFF** connect the USB cable to your computer, then **Power the Device On** to begin the Plug and Play installation.


2

Windows is searching the device driver software.
- Searching process may take 5-10 minutes.

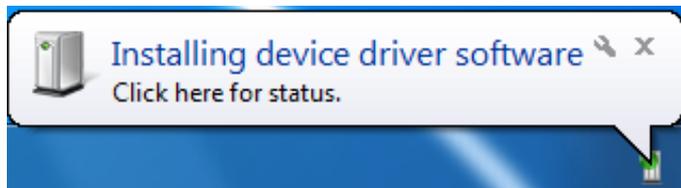


3

If this screen appears, click “ **Close** ” .
(This screen may not appear.)

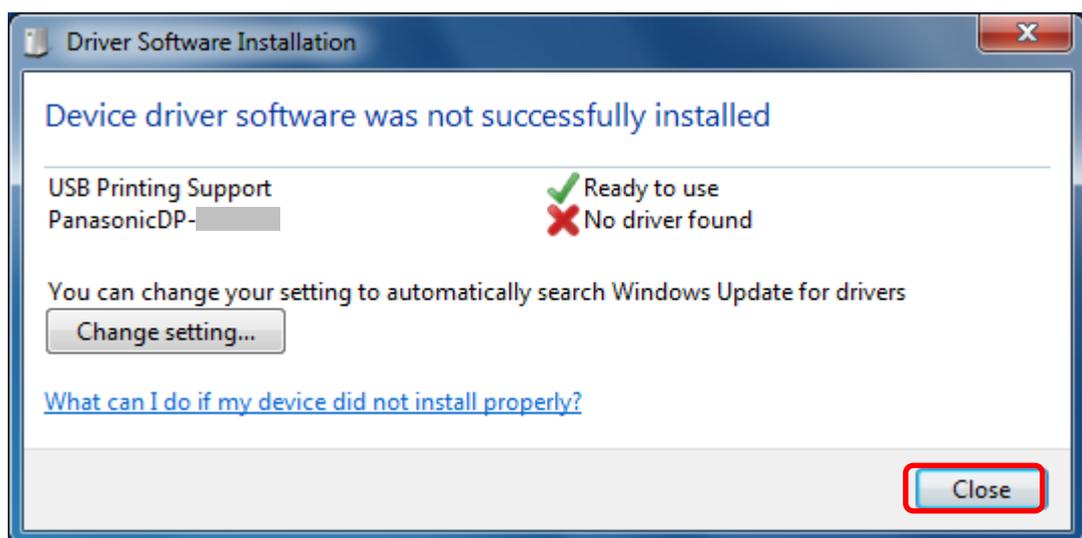


4

In the <Control Panel>, click “View devices and printers”.

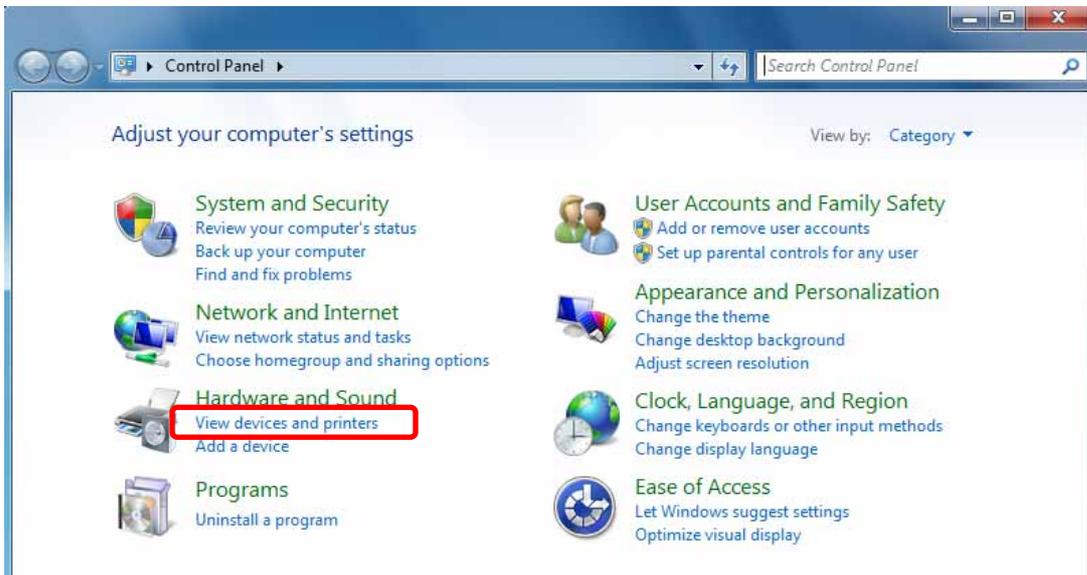


5


Right-click <Panasonic USB-DEVICE> icon and select “Properties”.

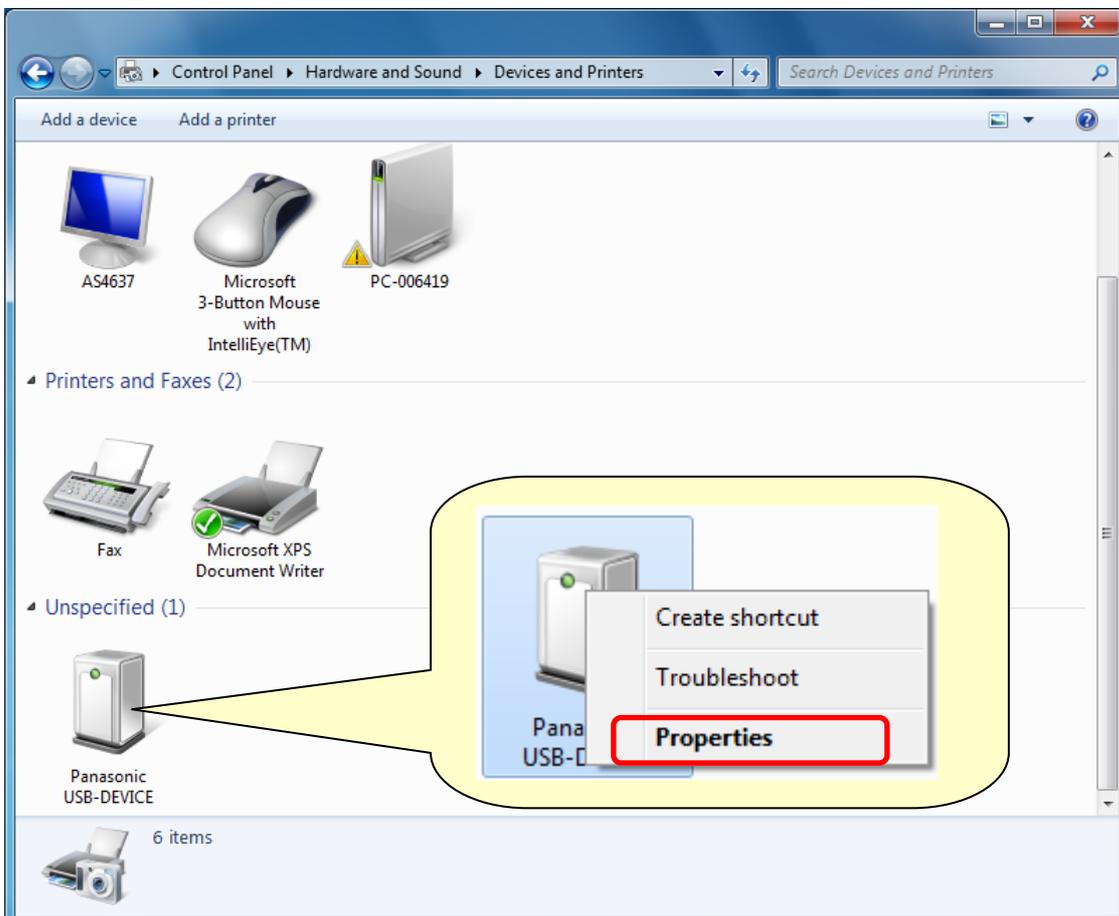

6 Select “**Hardware**” tab, then click “**Properties**”.

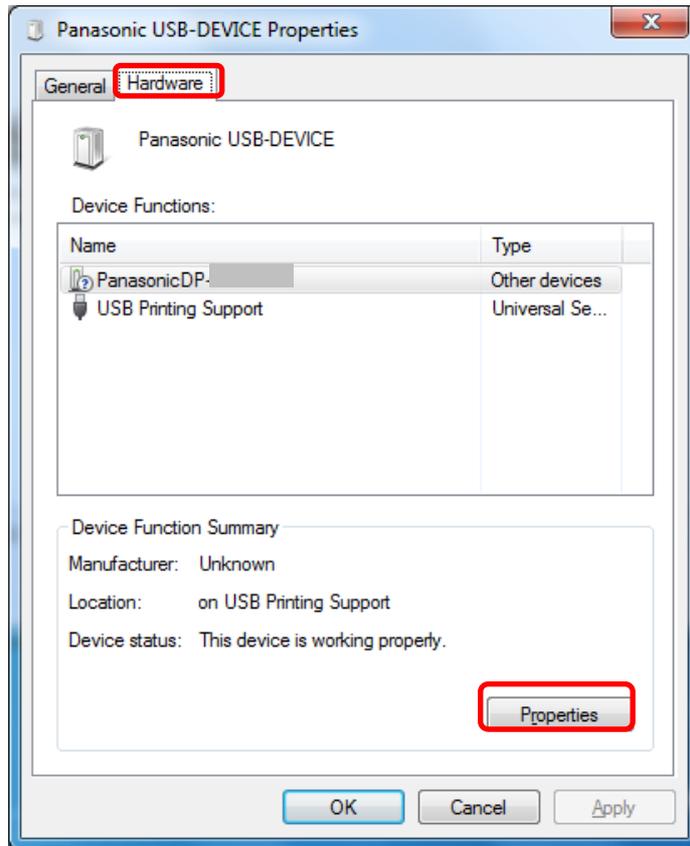


7 (Windows 7) Click “**Change settings**”.
(Windows Server 2008 R2) Skip to **Step 8**.

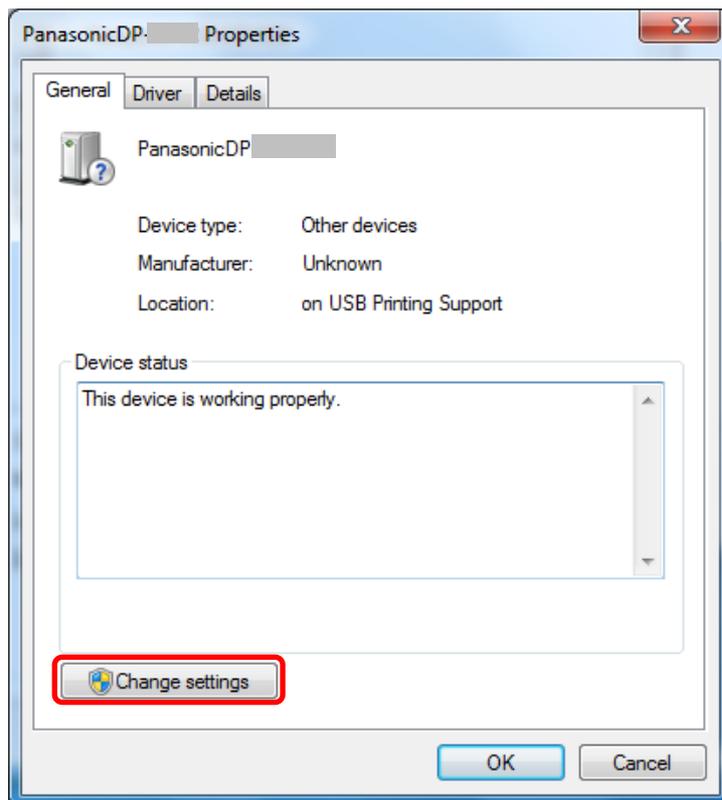


8

Select “**Driver**” tab, then click “**Update Driver**”.

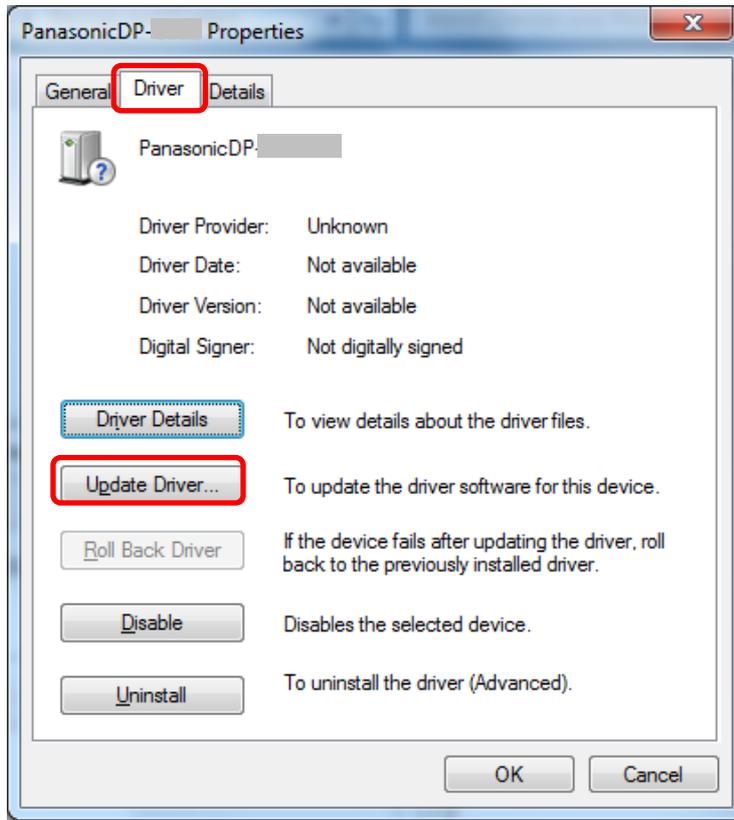


9


Click “**Browse my computer for driver software**”.

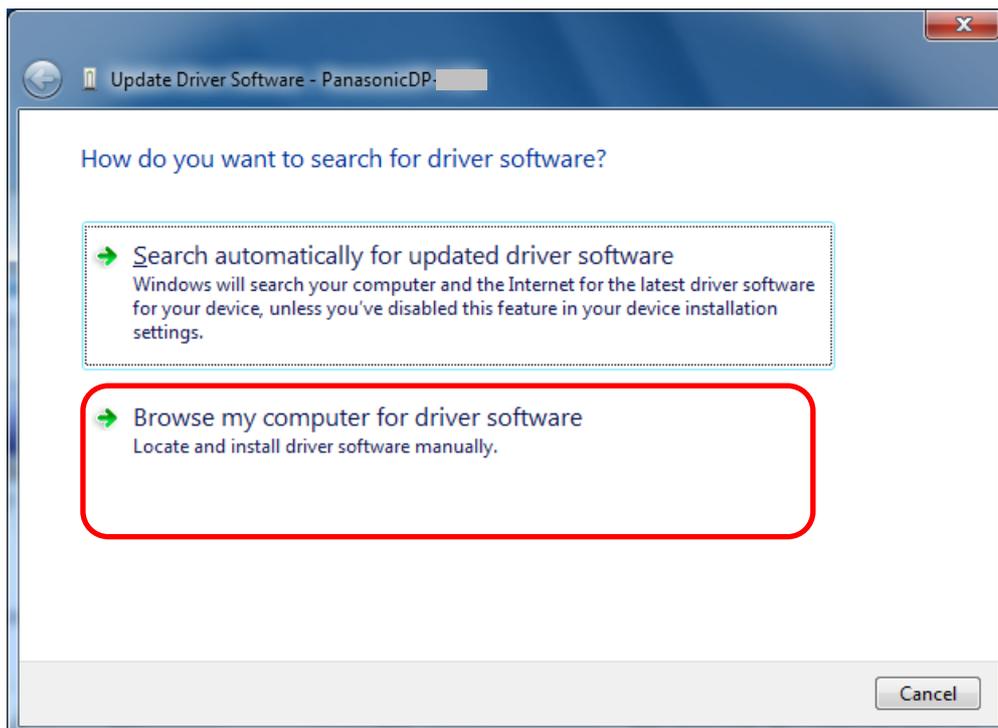

10 Click **“Browse”**.

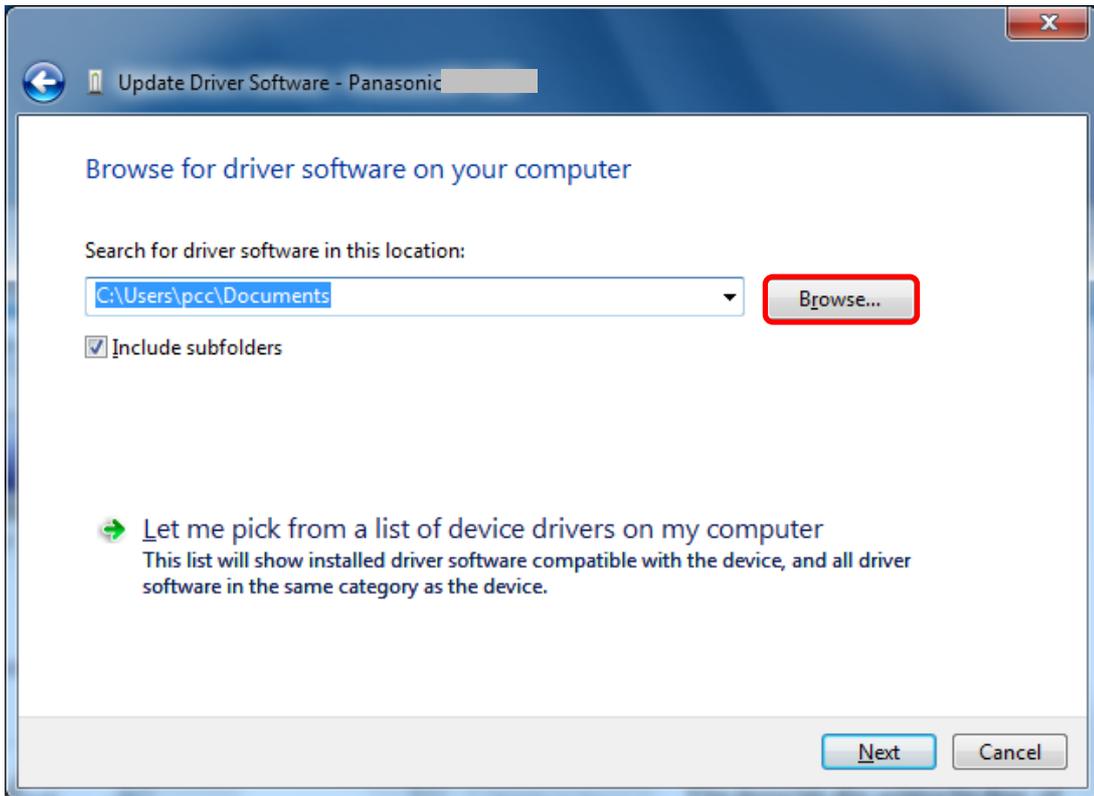


11 Select the folder where the print driver software is located, then click **“OK”**.

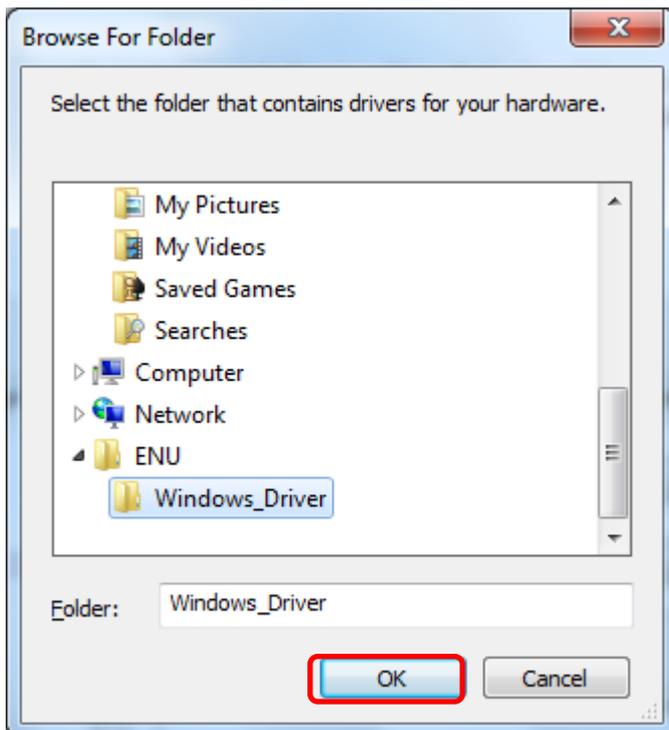

12


Make sure the folder selected in the previous step is shown in the pull-down menu, then click “Next”.

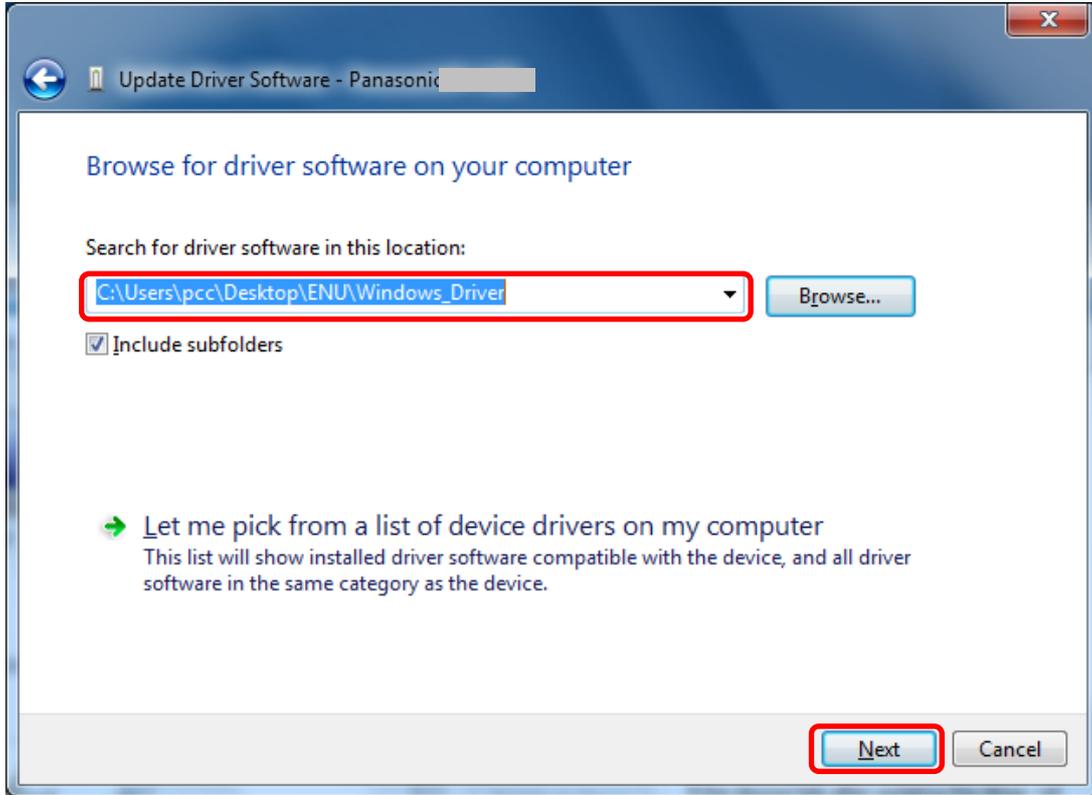

13

When the warning message appears, click “Install this driver software anyway”.

Note: Although the drivers are not digitally signed by Microsoft Corporation, we have verified proper operation within the Windows operating system environment.

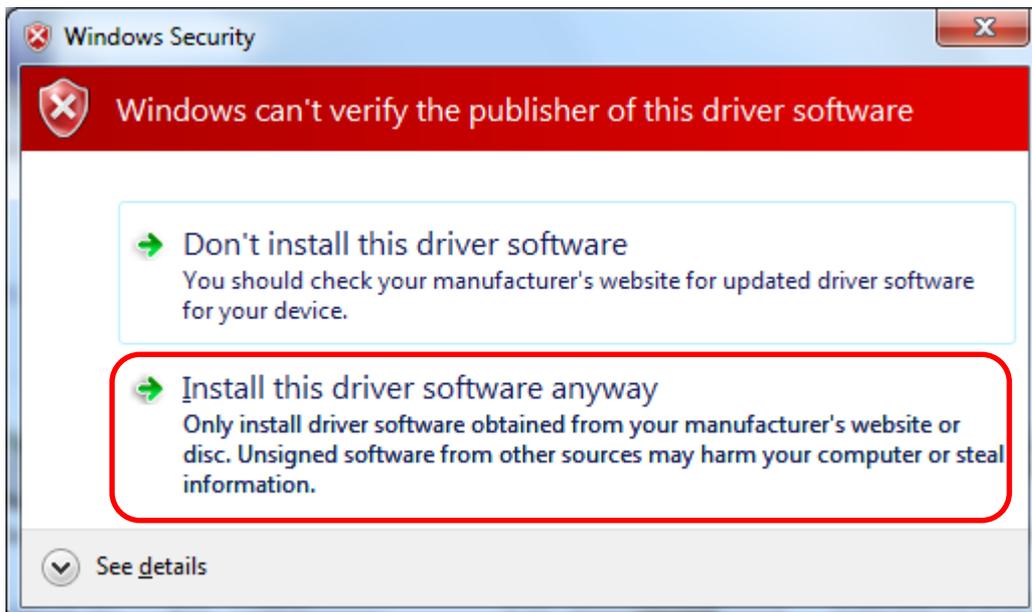

14

Device Driver software installation complete

Click “Close”.

