


## Operating Instructions Software (Printer Driver) For Digital Imaging Systems

---

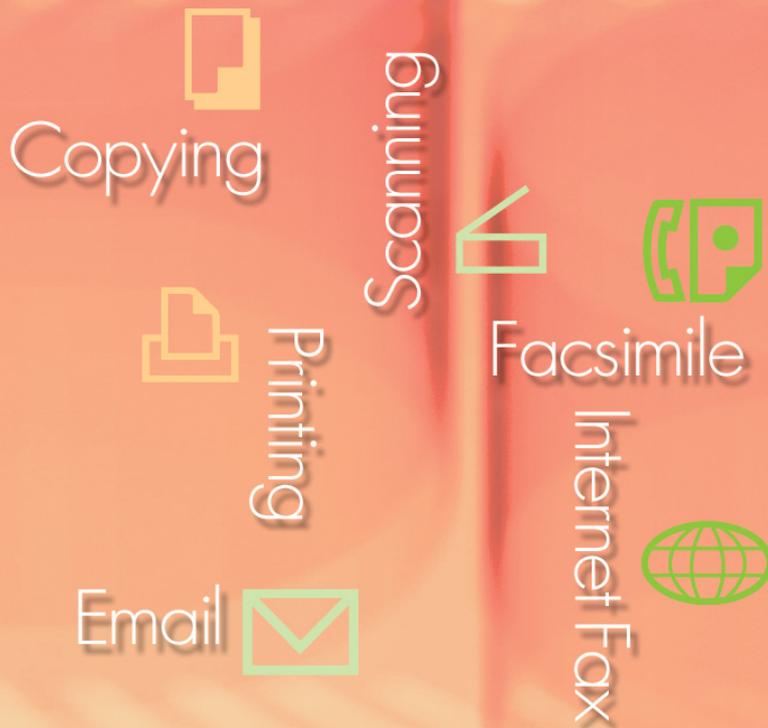

**WORKIO™**

Before using this software, please carefully read these instructions completely and keep these operating instructions in a safe place for future reference.

English

System  
Requirements

Configuring  
the Printer Driver  
Settings

Print Operation  
(for PC)

Print Operation  
(for Printer)

Specifications

Troubleshooting

Appendix

The following trademarks and registered trademarks are used throughout this manual:

Microsoft, MS-DOS, Windows, Windows Server, Windows Vista and Internet Explorer are either registered trademarks or trademarks of Microsoft Corporation in the USA and other countries. Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation. i386, i486, Celeron, Intel Centrino, Pentium and Itanium are trademarks of Intel Corporation and its subsidiaries.

The USB-IF Logos are trademarks of Universal Serial Bus Implementers Forum, Inc. Mac, Mac OS, Macintosh, True Type and Apple are trademarks of Apple Inc., registered in the U.S. and other countries.

Novell, NetWare, IntranetWare, NDS are registered trademarks of Novell, Inc. in the USA and other countries.

PEERLESSPage™ is a trademark of the PEERLESS Systems Corporation; and, PEERLESSPrint® and Memory Reduction Technology® are registered trademarks PEERLESS Systems Corporation; and, COPYRIGHT © 2005 PEERLESS Systems Corporation. COPYRIGHT © 2005 Adobe Systems Incorporated. All Rights Reserved; and Adobe® PostScript® 3™.

Universal Font Scaling Technology (UFST) and all typefaces have been licensed from Monotype Imaging Inc.

Monotype® is a registered trademark of Monotype Imaging Inc. registered in the U.S. Patent and Trademark Office and may be registered in other jurisdictions.

ColorSet™ is a registered trademark of Monotype Imaging Inc. registered in the U.S. Patent and Trademark Office and may be registered in other jurisdictions. ColorSet™ Profile Tool Kit, Profile Studio and Profile Optimizer are trademarks of Monotype Imaging Inc. and may be registered in certain jurisdictions.

COPYRIGHT © 2007 Monotype Imaging Inc. All Rights Reserved.

PCL is a trademark of Hewlett-Packard Company.

Adobe, Acrobat, Adobe Reader, Adobe Type Manager, PostScript, PostScript 3 and Reader are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.

All other product/brand names, trademarks or registered trademarks identified herein are the property of their respective owners.

In these Operating Instructions, some ™ and ® marks are omitted from the main text.

© Panasonic Communications Co., Ltd. 2005-2008  
Unauthorized copying and distribution is a violation of law.  
Published in Japan.

The contents of these Operating Instructions are subject to change without notice.

## Memo

# Table of Contents

---

<b>System Requirements .....</b>	<b>6</b>
<b>Configuring the Printer Driver Settings .....</b>	<b>8</b>
■ Opening the Printer Properties Dialog Box .....	8
■ Basic Tab .....	11
■ Output Tab .....	21
■ Job Type Tab .....	24
■ Quality Tab .....	26
■ Effects Tab .....	34
■ Profile Tab .....	39
■ Support Tab.....	41
■ Form/Tray Tab.....	42
■ Device Tab .....	43
<b>Print Operation (for PC).....</b>	<b>45</b>
■ Printing from Windows Applications .....	45
■ Printing on Network .....	46
■ IPP (Internet Printing Protocol) Printing .....	47
■ Job Status Utility.....	54
<b>Print Operation (for Printer) .....</b>	<b>58</b>
■ SD Print.....	58
■ Mailbox .....	59
■ Mailbox (For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265) .....	61
■ Job Control (Output Queue) (For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265) .....	63
■ Mailbox (For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330).....	65
■ Job Queue (For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330) .....	66
■ MailBox (For DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960) .....	67
■ Secure Mailbox (For DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960) .....	69
■ Job Queue (For DP-8020E/8020P/8016P).....	71
<b>Specifications .....</b>	<b>72</b>
■ Specifications (For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265).....	72
■ Specifications (For DP-8060/8045/8035) .....	73
■ Specifications (For DP-8032/8025) .....	73
■ Specifications (For DP-3030/2330) .....	73
■ Specifications (For DP-8020E/8020P/8016P).....	73
■ Specifications (For UF-8200/7200, UF-8300/7300, UF-7960) .....	74

<b>Troubleshooting .....</b>	<b>76</b>
■ Printing Operation Failure .....	76
■ Documents Not Printing Correctly (For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265) .....	77
■ Documents Not Printing Correctly (For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960).....	78
■ Error Messages Displayed on the Computer .....	79
■ Error Messages Displayed on Your Machine (For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265) .....	80
<b>Appendix .....</b>	<b>82</b>
■ Printing Area.....	82

**NOTE**

*Model availability depends on the destination country.*

## System Requirements

- Personal Computer : IBM® PC/AT® and compatibles (CPU Intel® Pentium® 4 1.6 GHz or greater is recommended)
- Operating System : Microsoft® Windows® 2000 operating system (Service Pack 4 or later)\*<sup>1</sup>, Microsoft® Windows® XP operating system (Service Pack 2 or later)\*<sup>2</sup>, Microsoft® Windows Server® 2003 operating system (Service Pack 1 or later)\*<sup>3</sup>, Microsoft® Windows Vista® operating system\*<sup>4</sup>.  
  
\*The following Operating System is not supported :  
Microsoft® Windows Server® 2003 Enterprise Edition for Itanium®-based systems
- Application Software: Microsoft® Internet Explorer® 6.0 Service Pack 1 or later
- System Memory : Recommended Memory for each OS:
  - Microsoft® Windows® 2000 operating system : 256 MB or more
  - Microsoft® Windows® XP operating system : 512 MB or more
  - Microsoft® Windows Server® 2003 operating system
  - Microsoft® Windows Vista® operating system : 1 GB or more
- Free Disk Space : 300 MB or more (For installation and work space, not including storage space)
- CD-ROM Drive : Used for installing the software and utilities from the CD-ROM
- Interface : 10Base-T/100Base-TX Ethernet Port, USB Port, Parallel Port  
(The interface that can be used is different depending on the model)

\*1 Microsoft® Windows® 2000 operating system (hereafter Windows 2000)

\*2 Microsoft® Windows® XP operating system (hereafter Windows XP)

\*3 Microsoft® Windows Server® 2003 operating system (hereafter Windows Server 2003)

\*4 Microsoft® Windows Vista® operating system (hereafter Windows Vista)

# Memo

# Configuring the Printer Driver Settings

## Opening the Printer Properties Dialog Box


### ■ Administrator

To change the printer settings, open the dialog box for the printer properties by performing the following steps.


**Note:**

*In Windows the available property settings depend on the logon account access level. This section describes properties to be specified by the administrator (system manager). See "User" on page 10 for details on user properties.*

- 1 Logon to the computer/network using an account with administrator rights.
- 2 Open the **Printers and Faxes (Printers)** on the **Control Panel**,  
Windows XP / Windows Server 2003:  
Select **[Start] → ([Control Panel] or [Settings]) → [Printers and Faxes]**.  
Windows 2000:  
Select **[Start] → [Settings] → [Printers]**.  
Windows Vista:  
Select **[Start] → [Control Panel] → [Hardware and Sound : Printer]**.
- 3 Right-click on the desired printer icon in the **Printers and Faxes (Printers)** folder, and then select **Properties** in the pop-up menu.

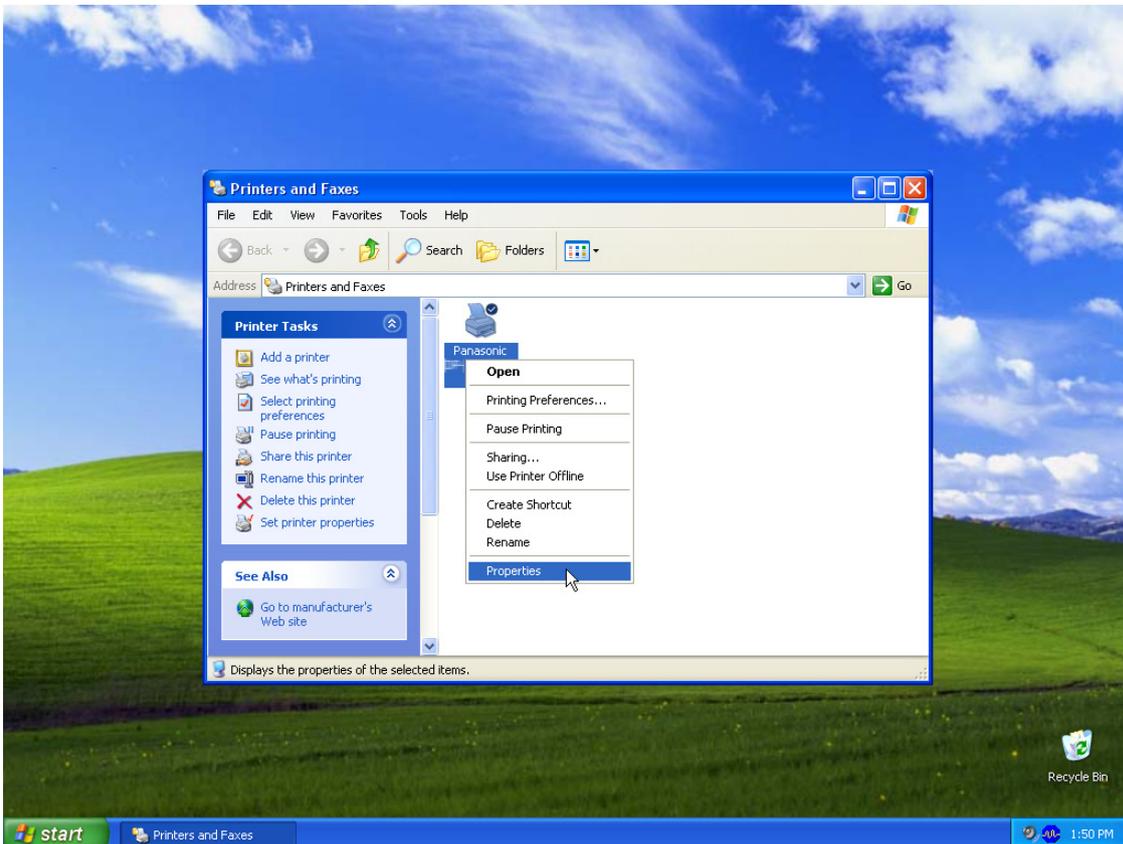

The following printer properties dialog box appears. Click the desired tab(s) and configure the properties as necessary.

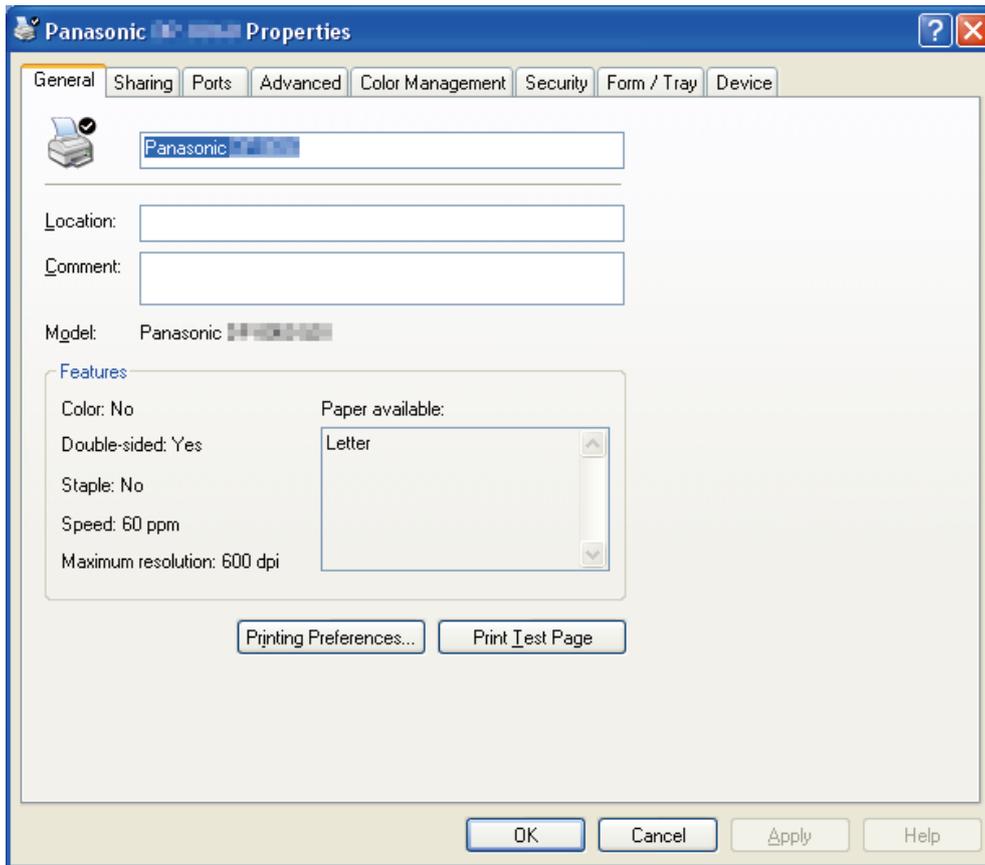

**General/Sharing/Ports/Advanced/Color Management/Security Tab:**

These tabs are Windows specific settings. Refer to Windows manuals, Windows pop-up help topics, and/or Online Support.

**Note:**

To open Windows pop-up help topics:

- Click the  icon at top right corner of the printer properties dialog box. The "?" mark will appear on your mouse cursor.
- Then click on unfamiliar object in the dialog box, the topic opens in a pop-up window. When you finish reading the information in the pop-up window you can close it by clicking anywhere in the window.
- Color Management Tab is not available for DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, and UF-7960.

**Form/Tray/Device Tab:**

These tabs are **Panasonic Printing System** associated settings. For additional details refer to the page(s) relevant to the subject you are interested in.

**Form/Tray Tab** : See page 42


**Device Tab** : See page 43

## ■ User

To change the printer settings, open the dialog box for the printer properties by performing the following steps.

- 1 Select **Print** in the **File** menu of the application. (**Ex:** Microsoft® WordPad)
- 2 Select the printer model in the name list box.
- 3 Click the **Preferences** button in the **Print** dialog box.


The printer properties dialog box appears. Click the desired tab(s) and configure the properties as necessary.

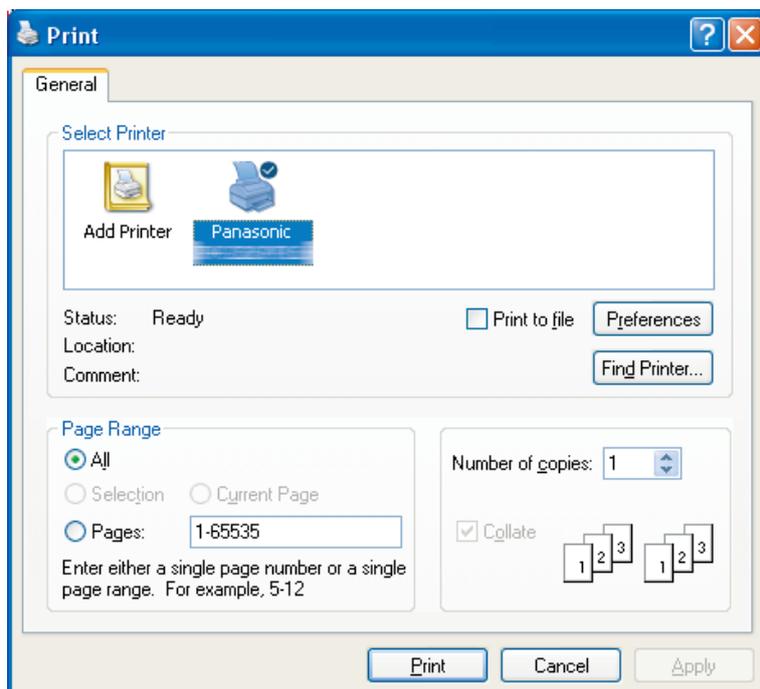


- Basic Tab** : See page 11
- Output Tab** : See page 21
- Job Type Tab** : See page 24
- Quality Tab** : See page 26
- Effects Tab** : See page 34
- Profile Tab** : See page 39
- Support Tab** : See page 41

# Basic Tab


Basic tab is used for configuring basic printing settings.

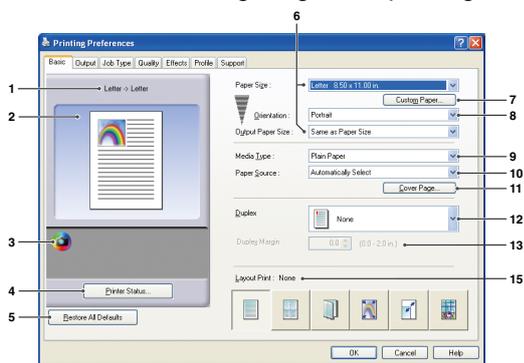


(For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265)

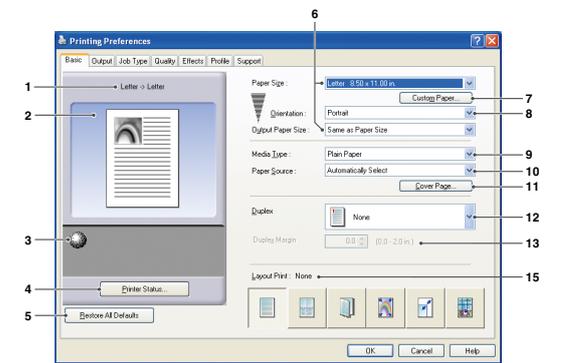

(For DP-8060/8045/8035, DP-8020E/8020P/8016P)

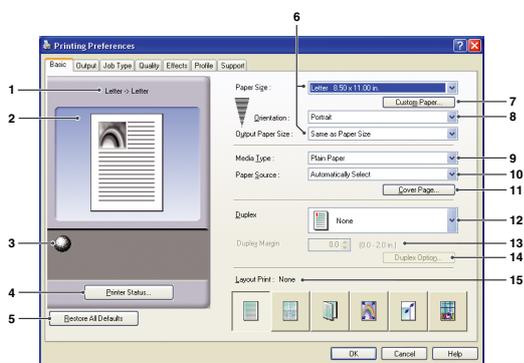

(For DP-8032/8025, DP-3030/2330)

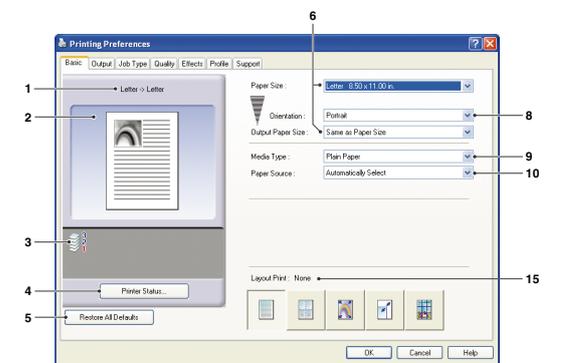

(For UF-8200/7200, UF-8300/7300, UF-7960)

1. **Paper Size**  
Displays the current **Paper Size** and **Output Paper Size** settings.
2. **Paper Image**  
Represents the current settings, along with the icons shown below.
3. **Icons**  
Represent the current settings, along with the paper image shown above.
4. **Printer Status... button**  
Used to check the printer status, launch the **Device Monitor**, which displays the status. This feature is only available when the printer is connected over a TCP/IP network.
5. **Restore All Defaults button**  
Restores all the settings to the default value.
6. **Paper Size/Output Paper Size**  
There are two settings for paper size. They are **Paper Size** and **Output Paper Size**. **Paper Size** denotes the document size created by the software applications. **Output Paper Size** denotes the size of paper used by the printer.

Custom paper sizes can be selected in the **Paper Size** and **Output Paper Size** settings.  
**Note:**

- Choosing envelope paper sizes, automatically switches the **Media Type** to **Envelope**.
- The **Media Type** and **Paper Source** settings differ depending on the **Paper Size** setting.

7. **Custom Paper... button**

(Available for PCL 6 Emulation Printer Driver only)

You can create, edit and delete custom papers. Up to 50 custom papers can be registered.

**Note:**

- Custom paper size is saved for individual users who are logged on.
- The saved Custom Papers will not be deleted when the PCL 6 Emulation Printer Driver is uninstalled. The Custom Paper files will be automatically recognized if the PCL 6 Emulation Printer Driver is installed again.
- Use Long Paper  
(For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265)  
Creates Long Paper as a custom paper size. Choose from the following paper sizes for long paper.  
Width: 210.0mm-297.0mm (8.27"-11.69")  
Length: 457.3mm-900.0mm (18.01"-35.43")
- For some software applications, you may be able to print the image by changing the paper settings.
- When Long Paper is set for the custom paper size, use thick Paper for the media type.

Continue on the next page...

8. **Orientation**

Specifies the direction of the image to be printed.

9. **Media Type**

Specifies the type of paper.

**Note (For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265):**

- Verify that the media type selection in the control panel matches the media loaded on the trays. (Ex: Select "Transparency" when Transparencies are loaded in the **Multi-Purpose Tray**)
- **Transparency** is only available if the selected **Paper Size** is **A4** or **Letter**.
- **Envelope** is only available if one of the envelope paper sizes is selected.
- If the **Media Type** is other than **Plain Paper**, **Glossy/Photo Paper** or **Recycled Paper**, then the **Multi-Purpose Tray** is the only selectable **Paper Source**.

10. **Paper Source**

Specifies the tray to be used for printing.

<b>Automatically Select</b>	Paper is supplied from the tray that is loaded with the specified paper. If the specified paper is loaded in multiple trays, it is supplied from the upper tray first. If a tray runs out of paper, paper is supplied from the next tray containing the specified paper, and continues in this sequence.
<b>Multi-Purpose Tray</b>	As its name suggest, this tray is used for all supported sizes and media types that can fit in this tray.
<b>Tray 1/Tray 2</b>	This is the standard paper tray, and the first tray the specified paper is fed from.
<b>Tray 3/Tray 4</b>	These trays are the second paper source tier and optional trays thereafter. The optional trays are only displayed if they are installed on the machine.

**Note:**

- Be sure to specify on the printer what paper is loaded in the trays. If the settings are wrong, paper will not be supplied correctly when the printer driver is set to **Automatically Select**. Furthermore, be sure to set the paper on the Sheet Bypass properly when **Multi-Purpose Tray** is selected.
- After installing the optional paper feeders, you must change the **Number of Paper Tray** on the **Device** tab of the printer driver. For details, see "**Device Tab**" on page 43.
- (For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330) If the selected paper size tray is not set, **Multi-Purpose Tray** will be selected.
- The **Tray 3**, and **Tray 4** are not available for DP-8016P, UF-8200/7200, UF-8300/7300, and UF-7960.

11. **Cover Page...** button

(Available for PCL 6 Emulation Printer Driver only)

You can configure the settings for cover pages.

To use a cover page, select **Front Cover** or **Back Cover**.

Specify the **Cover Type** either **Blank** or **Printed**.

**Blank** : Produces a blank cover page from the specified paper source.


**Printed** : Prints the first or last page as the cover page from the specified paper source.

In **Other Pages** section, specifies the media type and paper source used for pages other than the Front and Back covers. Configure the same way as carried out for **Media Type** and **Paper Source** in the **Basic** tab.


**Note:**

- Cover pages are not available with **Reverse Page Order**.
- Cover pages are not available with **Poster**.
- **Back Cover Page** is not available with **Booklet**.

(For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265, DP-8020E/8020P/8016P)



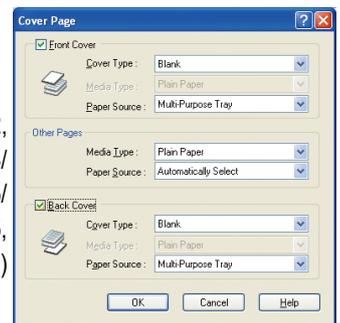


(For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330)

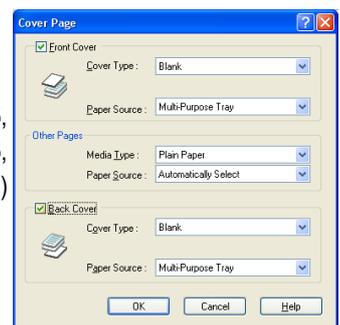

## 12. Duplex

Duplex (double-sided) is the process of printing on both sides of a piece of paper.
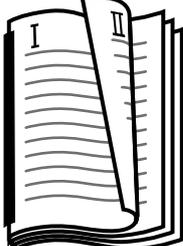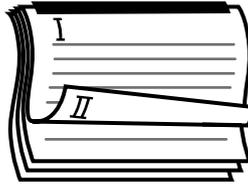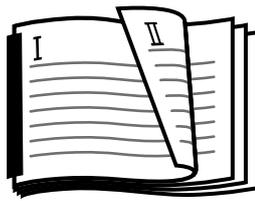
<p><b>None</b> Select this for single-sided printing. The default is None.</p>			
<p><b>Flip on Long Edge</b> Perform double-sided printing, flipping the paper along its long edge (sometimes called Long Edge Binding).</p>		<p><b>Flip on Short Edge</b> Perform double-sided printing, flipping the paper along its short edge (sometimes called Short Edge Binding).</p>	
Portrait format	Landscape format	Portrait format	Landscape format
			

**Note:**

Duplex printing is only available if **Media Type** is set to **Plain Paper**, **Glossy/Photo Paper**, **Recycled Paper**.

## 13. Duplex Margin (Available for PCL 6 Emulation Printer Driver only)

Specifies the gutter for duplex printing.

Set the gutter in a range of **0mm-50mm (0.0"-2.0")**.

## 14. button

Used to activate the **Duplex Notice** function.


## 15. Layout Print

Allows printing of documents in a variety of layouts.

	<b>Pages per Sheet</b>	Save paper by printing several pages reduced onto a single sheet.
	<b>Booklet</b>	This feature is handy for creating your own booklets. After printing, fold sheets in half to create booklets.
	<b>Fit to Output Paper Size</b>	Scales the source document to fit it onto the specified paper.
	<b>Zoom</b>	Prints documents at the specified magnification.
	<b>Poster</b>	Enlarges single-page documents for printing on several sheets. Assemble the printed documents to make posters.

## ■ Pages per Sheet

Several pages are reduced in size and printed next to each other on single sheets. This feature is convenient for printing test sheets and conserving paper.

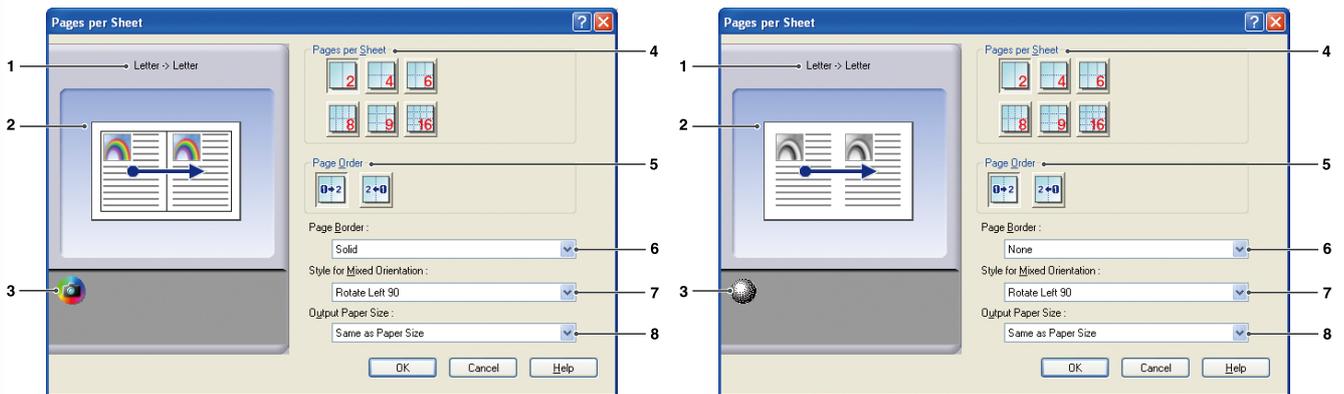

(For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265)

(For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960)

### 1. Paper Size

Displays the current **Paper Size** and **Output Paper Size** settings.

### 2. Paper Image

Represents the current settings, along with the icons shown below.

### 3. Icons

Represent the current settings, along with the paper image shown above.

### 4. Pages per Sheet

Specifies how many pages to reduce and print on single sheets.

Choose from **2 up**, **4 up**, **6 up**, **8 up**, **9 up**, or **16 up**.

### 5. Page Order

Specifies the order in which multiple pages are arranged on single sheets.

2 up Portrait	2 up Landscape	4, 6, 8, 9, 16 up
 : Left to Right	 : Up to Down	 : Right, then Down
		 : Down, then Right
 : Right to Left	 : Down to Up	 : Left, then Down
		 : Down, then Left

### 6. Page Border

Select this option to print a border around each page.

<b>Solid</b>	Print a solid line around each page.
<b>None</b>	Do not print page borders.

### 7. Style for Mixed Orientation

In print jobs with different paper orientations, this option specifies in which direction the printed image is rotated.

<b>Rotate Left 90</b>	Rotates the printed image counter-clockwise 90°
<b>Rotate Right 90</b>	Rotates the printed image clockwise 90°
<b>Not Rotate</b>	Do not rotate the image.

### 8. Output Paper Size

Specify the size of paper used by the printer.


The settings are the same as for **Output Paper Size** configured in the **Basic** tab.

## ■ Booklet


Fold printouts in half to make booklets. This feature is handy for creating your own booklets. If you create booklets from a large number of pages, you can increase the Unit number to divide them into several booklets.

**Note (For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265):**

**Booklet selection is only available if the Media Type is set to Plain Paper, Glossy/Photo Paper, or Recycled Paper.**

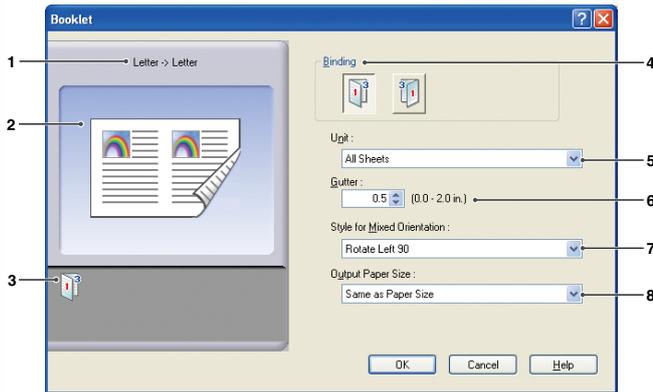

(For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265)

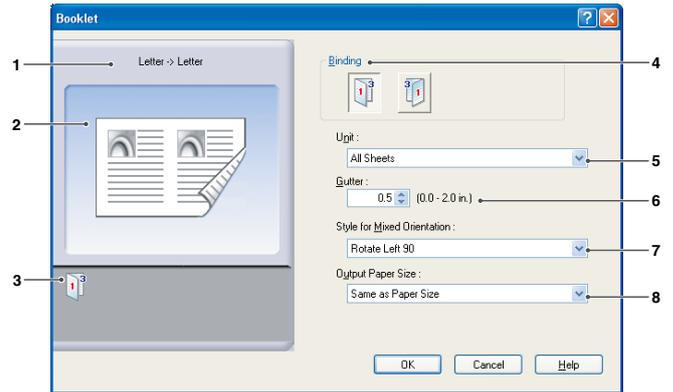

(For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E)

**Note:**

The Booklet option function is not available for DP-8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960.

**1. Paper Size**

Displays the current **Paper Size** and **Output Paper Size** settings.

**2. Paper Image**

Represents the current settings, along with the icons shown below.

**3. Icons**

Represent the current settings, along with the paper image shown above.

**4. Binding**

Specifies the side that is closed after folding printouts in half.


	<b>Left Binding</b>
	<b>Right Binding</b>

**5. Unit**

Specifies the unit (sheet quantity) to be folded in half.

Choose from **All Sheets**, **1 Sheet**, **2 Sheets**, **4 Sheets**, or **8 Sheets**.

For example, printing a 64-page document as a booklet in 4-sheet units produces four separate blocks, as shown in the illustration.

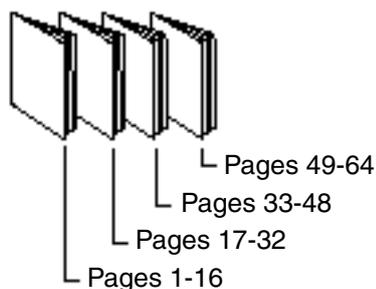

**6. Gutter**

Specifies the space added between the center and the printing area when the printout is folded in half.

Set the gutter in a range of **0mm-50mm (0.0"-2.0")**.

Be aware that the margin added by the software application will be appended to the gutter, so the actual gutter will be wider than the gutter you specify.

**7. Style for Mixed Orientation**

In print jobs with different paper orientations, this option specifies which direction the printed image is rotated.

<b>Rotate Left 90</b>	Rotates the printed image counter-clockwise 90°
<b>Rotate Right 90</b>	Rotates the printed image clockwise 90°
<b>Not Rotate</b>	Do not rotate the image.


**8. Output Paper Size**

Specify the size of paper used by the printer.


The settings are the same as for **Output Paper Size** configured in the **Basic** tab.

## ■ Fit to Output Paper Size

Scales the source document to fit the specified paper. For example, this feature is convenient for printing A3/Ledger source documents on A4/Letter paper.

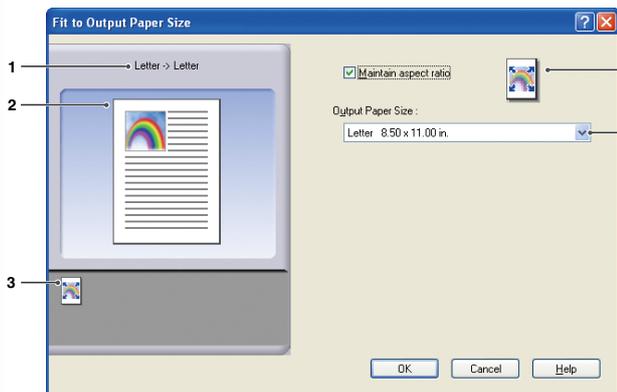

(For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265)

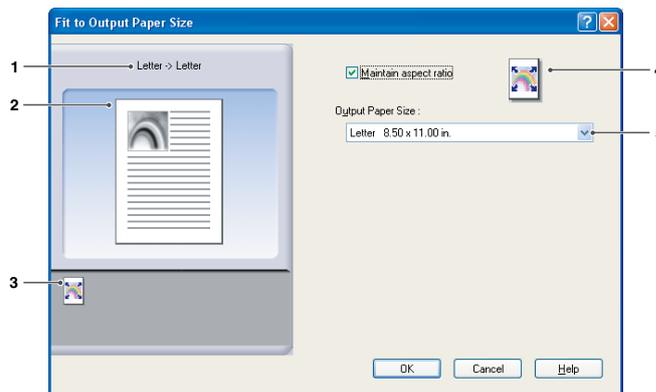

(For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960)

### 1. Paper Size

Displays the current **Paper Size** and **Output Paper Size** settings.

### 2. Paper Image

Represents the current settings, along with the icons shown below.

### 3. Icons

Represent the current settings, along with the paper image shown above.

### 4. Maintain aspect ratio



Selecting this option preserves the aspect ratio (the ratio of height to width) when documents are scaled.



When the check mark is removed, documents will be scaled to fill up the maximum print area on the page.


If you want to ensure the document is not distorted, select **Maintain aspect ratio**.

### 5. Output Paper Size


Specify the size of paper used by the printer. The settings are the same as for **Output Paper Size** configured in the **Basic** tab.

## ■ Zoom

You can reduce or enlarge documents by specifying the desired magnification. You can also specify where scaled documents are positioned on the page.

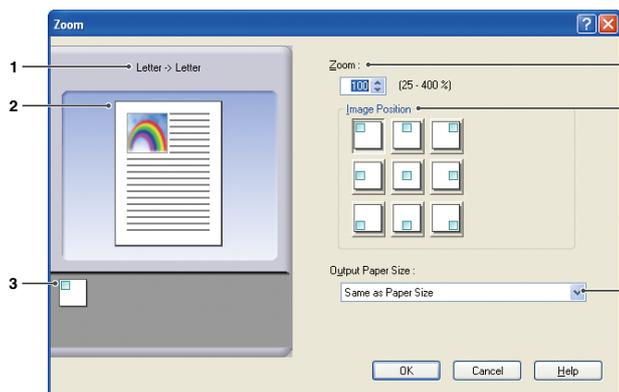

(For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265)

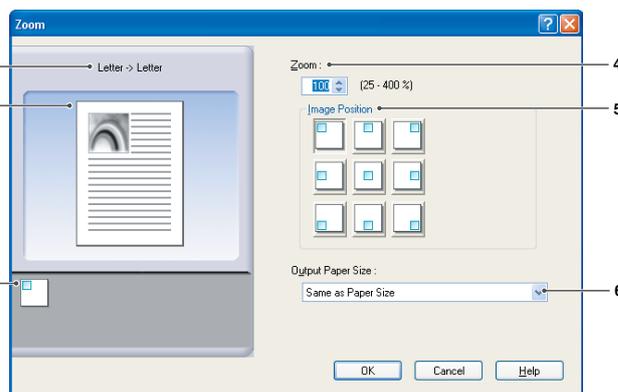

(For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960)

### 1. Paper Size

Displays the current **Paper Size** and **Output Paper Size** settings.

### 2. Paper Image

Represents the current settings, along with the icons shown below.

### 3. Icons

Represent the current settings, along with the paper image shown above.

### 4. Zoom

The magnification range can be adjusted between **25-400%**.

#### Note:

*Depending on the **Paper Size** setting, 400% enlargement may not be available.*

### 5. Image Position


Specifies the image position after scaling.

### 6. Output Paper Size


Specify the size of paper used by the printer. The settings are the same as for **Output Paper Size** configured in the **Basic** tab.

## ■ Poster

Enlarges a single-page source document for printing in a specified number of sheets. You can use this feature to print large posters, just assemble the printed sheets.

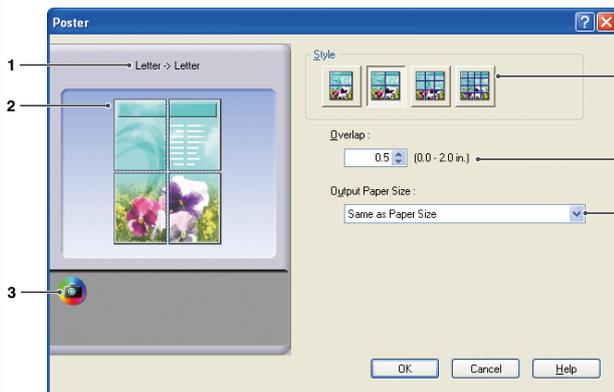

(For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265)

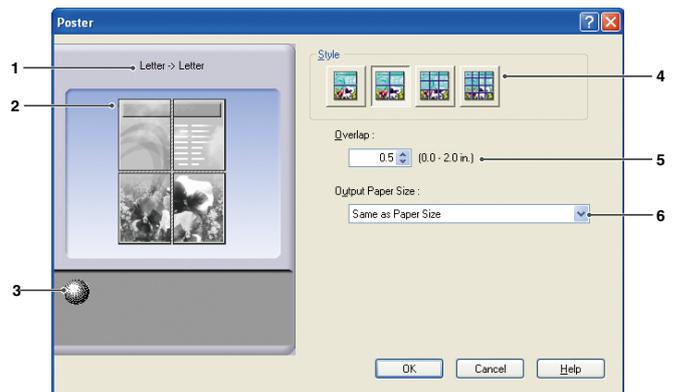

(For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960)

### 1. Paper Size

Displays the current **Paper Size** and **Output Paper Size** settings.

### 2. Paper Image

Represents the current settings, along with the icons shown below.

### 3. Icons

Represent the current settings, along with the paper image shown above.

### 4. Style

Specifies the number of sheets to print the image on.

#### Note:

*Depending on the **Paper Size** setting, the selectable styles are shown as image icon.*

### 5. Overlap


Specifies the amount of overlap involved when printed sheets are assembled.  
0mm-50mm (0.0"-2.0").

### 6. Output Paper Size


Specify the size of paper used by the printer. The settings are the same as for **Output Paper Size** configured in the **Basic** tab.

# Output Tab

Output tab is used for configuring output settings.

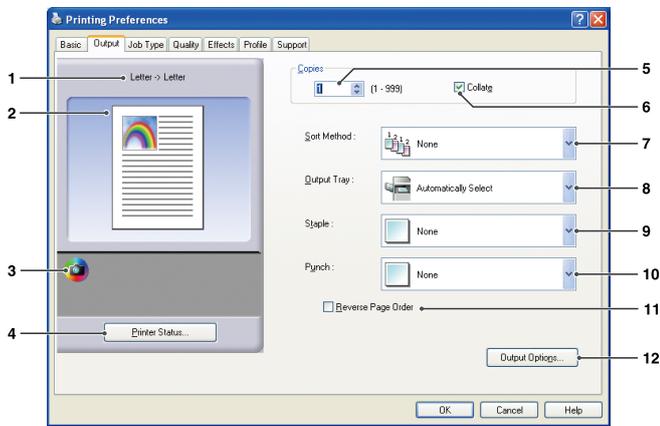


(For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265)

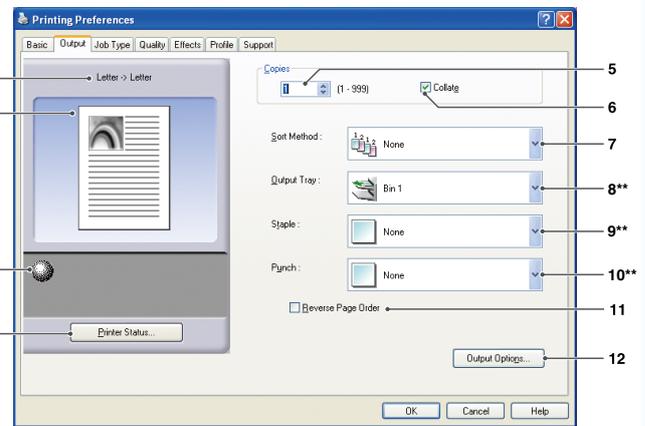


(For DP-8060/8045/8035, DP-8020E/8020P/8016P)

\*\* 8: Output Tray, 9: Staple, and 10: Punch functions are not available for DP-8020E/8020P/8016P.

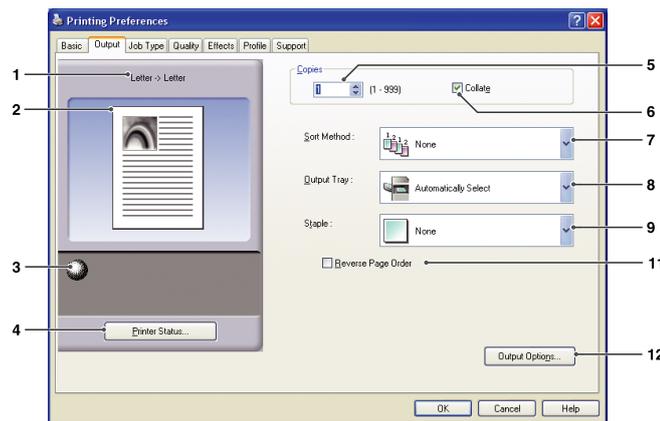

(For DP-8032/8025, DP-3030/2330)

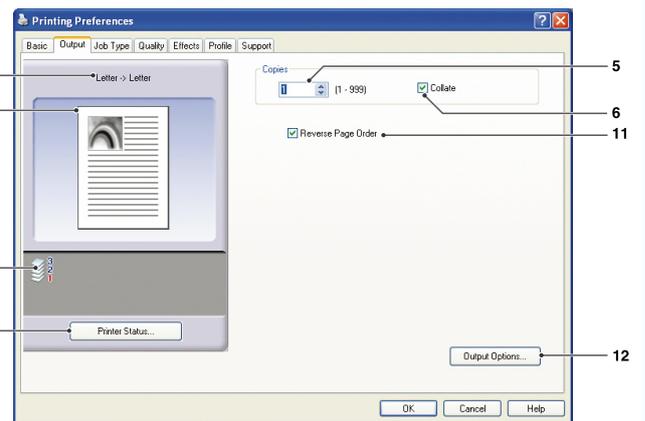

(For UF-8200/7200, UF-8300/7300, UF-7960)

1. **Paper Size**  
Displays the current **Paper Size** and **Output Paper Size** settings.
2. **Paper Image**  
Represents the current settings, along with the icons shown below.
3. **Icons**  
Represent the current settings, along with the paper image shown above.

4. **Printer Status...** button  
Used to check the printer status, launch the **Device Monitor**, which displays the status. This feature is only available when the printer is connected over a TCP/IP network.
5. **Copies**  
Specifies the number of copies to be printed.

6. **Collate**

	Copies are stacked in the order they are printed. Multiple copies are printed in separate sets in the specified quantity. For example, if you print three copies of a five-page document, the printer prints pages 1-5 three times.
	Remove the check mark to print individual pages in the specified quantity. For example, if you print three copies of a five-page document, the printer prints page 1 three times before printing page 2 and so on.

**Note:**

Collated printing may take some time if the **Printer Driver** is selected in **Copy Controlled by**. See "**Output Options...**" **button**" on page 23. Document data is processed repeatedly, as many times as the number of copies specified.

7. **Sort Method**

Specifies how pages are sorted when multiple copies are printed.

<b>None</b>	Printouts are stacked uniformly, one on top of another.
<b>Rotate</b>	Each set is rotated.
<b>Shift</b>	Each set is shifted.

**Note:**

- **Shift** is only available if the printer is equipped with a finisher.
- **Rotate** is only available when **Paper Source** is set to **Automatically Select**.
- **Rotate** requires paper of the specified size to be loaded in two trays, loaded for landscape and portrait printing.

8. **Output Tray**

Specifies the output tray.

<b>Automatically Select</b>	Automatically selects one of the following output trays.
<b>Inner Tray</b>	Sends printed jobs to the inner tray.
<b>Outer Tray</b>	Sends printed jobs to the outer tray. (Selection only displays if the printer is equipped with an outer tray)
<b>Finisher</b>	Sends printed jobs to the finisher. (Selection only displays if the printer is equipped with a finisher)

**Note:**

(For DP-8060/8045/8035)  
 You can only select **Bin 1/ Bin 2** for the output tray.  
 (For DP-8032/8025, DP-3030/2330)  
 You can select from **Automatically Select/ Inner Tray1 (Lower) / Inner Tray2 (Upper) / Finisher / Outer Tray**.

9. **Staple**

Specifies the position of the staple.

Choose the position from **Left 1, Left 2, Right 1, Right 2, Top 2** or **Saddle Stitch**.

**Note:**

- **Staple** is only available if the printer is equipped with an optional finisher.
- Available staple position may be different depending on the finisher.
- The staple capacity differ depending on the types of finisher and the paper size. (**Ex:** up to 50 sheets, Letter or A4 size, 1-Bin Saddle Stitch Finisher) Refer to Specifications in another provided booklet, the Operating Instructions (For Basic Function).
- When setting the staple position to **Saddle Stitch** with the **Booklet** printing, set paper in Landscape position.
- **Top 2** staple position is not available for DP-8032/8025, DP-3030/2330.

10. **Punch**

Specifies the hole punch position.

**Note:**

- **Punch** is only available if the printer is equipped with an optional finisher and puncher unit.
- Hole punching can be performed on the following paper sizes.  
**A3, A4, B4(JIS), B5(JIS), Ledger, Legal, Letter and FLS2** (FLS2 is only available for For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/ C265)

## 11. Reverse Page Order

Select this option to print in reverse (first page prints last) order.

**Note:**

*Reverse Page Order cannot be used when **Pages per Sheet**, **Booklet** or **Poster** is selected.*

*(For UF-8200/7200, UF-8300/7300, UF-7960 Pages per Sheet or Poster can be selected with Reverse Page Order.)*

## 12. button

### Copy Controlled by:

Specifies how collated printing is carried out when **Collate** is on.

• **Printer:**

Collated printing is controlled by the printer.

• **Printer Driver:**

Collated printing is controlled by the printer driver. If the printer does not have enough memory for collated printing, try changing this setting.

**Note:**

- *Printing may take a while when **Printer Driver** is selected because collation is processed internally by the printer driver.*
- *The **Printer Driver** is not selectable if the **Front Cover** or **Back Cover** is specified on the **Basic** tab. (See page 11)*

### Check Printer Status Prior to Printing:

Selecting this option obtains the printer status before printing to ensure printing is possible.

If printing is not possible, a warning dialog box is displayed.

### Print Blank Pages:


Selecting this option will enable printing blank pages.

**Note:**


- *The **Print Blank Pages** is not selectable if the **Duplex**, **Pages per Sheet** or **Booklet** is set to be enabled on the **Basic** tab. (See pages 13, 14, 16)*
- *If the **Watermark** or **Overlay** is set to be enabled on the **Basic** tab, the device prints a blank page even the **Print Blank Pages** is set off.*

# Job Type Tab

Job Type tab is used for configuring and identifying print jobs.

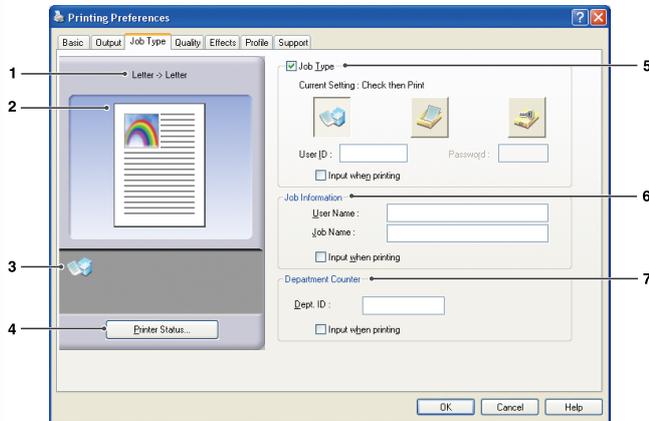

(For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265)

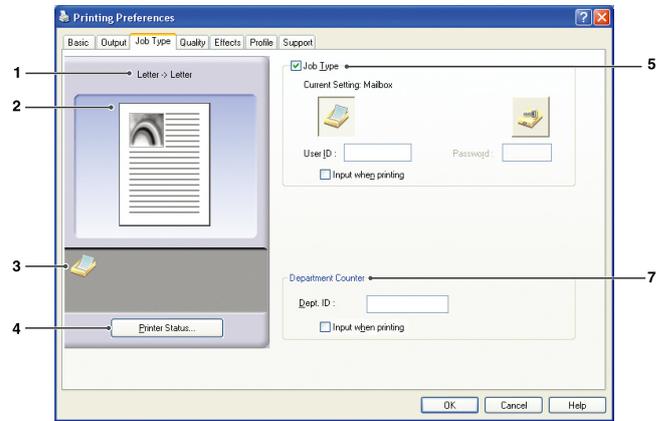

(For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960)

1. **Paper Size**  
Displays the current **Paper Size** and **Output Paper Size** settings.

2. **Paper Image**  
Represents the current settings, along with the icons shown below.

5. **Job Type**  
Printed documents can be saved on the printer's hard disk drive (HDD) if the printer is equipped with one. Saved documents can be printed via the printer control panel. See "**Mailbox**" on page 59.

3. **Icons**  
Represent the current settings, along with the paper image shown above.

4. **Printer Status... button**  
Used to check the printer status, launch the **Device Monitor**, which displays the status. This feature is only available when the printer is connected over a TCP/IP network.

 <p><b>Check then Print</b></p>	<p>Allows you to print one proof set, before proceeding to print a large multi-set with various settings. The documents data will be deleted from the printer after printing.</p>
 <p><b>Mailbox</b></p>	<p>Saves print data in the printer, in the mailbox specified by the <b>User ID</b>. The <b>User ID</b> must be entered to print documents saved in Mailbox. The document data will remain in the printer until it is deleted.</p>
 <p><b>Secure Mailbox</b></p>	<p>Saves print data in the printer, in the mailbox specified by the <b>User ID</b>. The <b>User ID</b> and <b>Password</b> must be entered to print confidential documents saved in Secure Mailbox. The document data will remain in the printer until it is deleted.</p>

**Note:**

- Using **Job Type** requires that the optional **Hard Disk Drive Unit** or **SD Memory Card** is installed in the printer, and the **HDD Unit** or **SD Memory Card** must be **Installed in Device tab**. See "**Device Tab**" on page 43.
- Enter the **User ID** (up to 8-digit).
- Enter the **Password** (4-digit).

## 6. Job Information

Most print jobs are identified by associated job information. Job names are specified by the software application, and user names correspond to the Windows logon account name. However, these names are often hard to recognize. They may be made up of long or blank job names and logon account names that are numbers. To prevent confusion from this, users can customize a **User Name** and **Job Name**. This makes the job information easy to understand.

The specified **Job Information** is shown on the Control Panel of the printers when printing a file.

### User Name:

Enter up to 20 characters. The entered user name will be the **User Name** for that job. If left blank, the Windows logon account name will be applied.

### Job Name:

Enter up to 80 characters. The entered job name will be the **Job Name** for that job. If left blank, the job name specified by the software application will be applied. (**Ex:** File name)

### Note:

- Specify the **User Name** and **Job Name** using only in letters and numbers, because the control panel only capable of displaying letters and numbers for the **User Name** and **Job Name**.
- The following characters are not available for the **User Name** and **Job Name**.

\ / \* ? ; ; . " < > |

### Input when Printing:

Selecting this option under each item in the Job Type tab (**Job Type/Job Information/Department Counter**) will display the screen below. Only the items selected will become active. Once you click OK, the value selected under this tab will automatically be set as the default value of the printer driver.

Also, if different options are selected at the same time using different applications, the setting will be overwritten to the most recently selected value and printing will proceed.

(For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265)

(For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960)

### Note:

If the property of your OS is set to **Windows XP Style**, the tabs displayed in the driver menu and the font color and the button designs displayed in the **Input Job Type** screen may show up differently.


## 7. Department Counter

If the printer has been set up with **Department Codes**, the **Dept. ID** must be provided before printing. (Printing is not permitted without an ID.)


Enter the **Dept. ID** assigned by the administrator.

# Quality Tab


Quality tab configures the settings that determine the print quality.

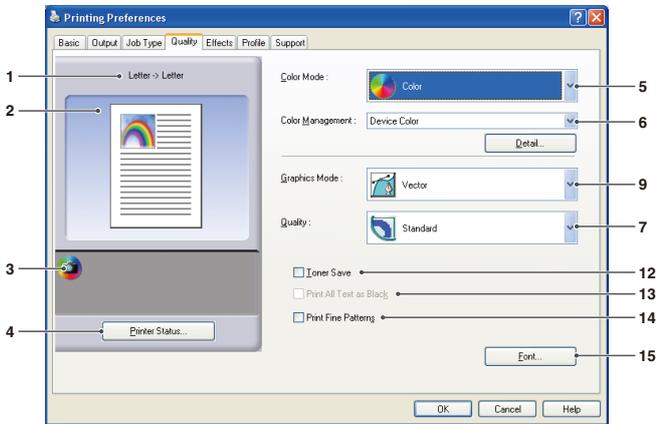


(For DP-C354/C323/C264/C263/C213, DP-C405/C305/C265)

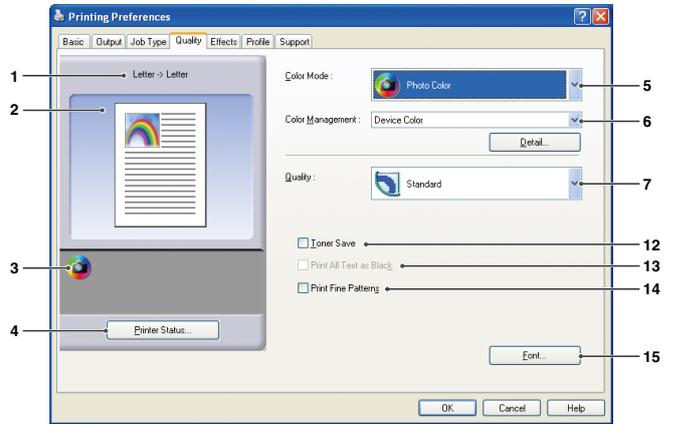

(For DP-C322/C262)

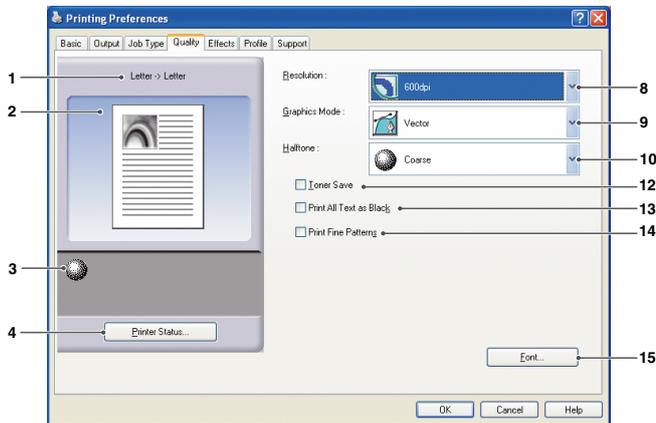

(For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P)

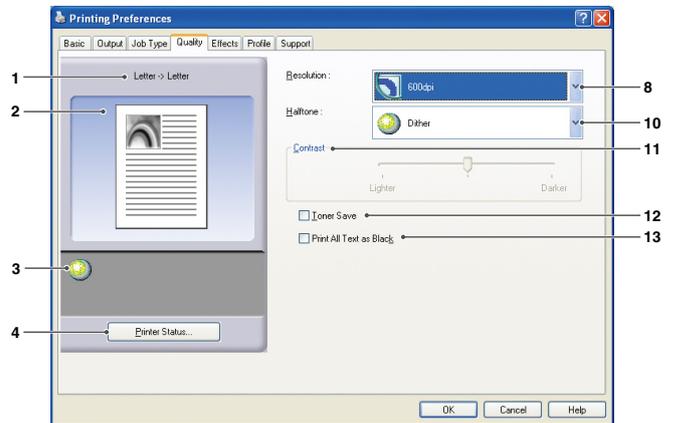

(For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P: Standard Printer Driver, UF-8200/7200, UF-8300/7300, UF-7960)

1. **Paper Size**  
Displays the current **Paper Size** and **Output Paper Size** settings.
2. **Paper Image**  
Represents the current settings, along with the icons shown below.
3. **Icons**  
Represent the current settings, along with the paper image shown above.
4. **Printer Status... button**  
Used to check the printer status, launch the **Device Monitor**, which displays the status. This feature is only available when the printer is connected over a TCP/IP network.

5. **Color Mode**  
Specifies whether to print in color or grayscale.

<b>Color</b>	Prints documents in color.
<b>Photo Color</b>	Prints photos with the optimal settings.
<b>Grayscale</b>	Prints documents in monochrome.

**Note:**  
*Photo Color mode takes more time to print a file.*

## 6. Color Management

To fine-tune color reproduction, click the  button and adjust the settings as desired.

### • When printing documents in color:

<b>Device Color</b>	Choose this option to adjust the original color settings. For more detailed adjustment, click the <input type="button" value="Detail..."/> button and adjust the colors as desired. See " <b>Color Space</b> " on page 29 and " <b>Adjustment</b> " on page 30.
<b>ICM</b>	Choose this option to use <b>ICM</b> (Image Color Matching). For more detailed adjustment, click the <input type="button" value="Detail..."/> button and adjust the rendering intent. See " <b>Rendering Intent</b> " on page 32 and " <b>Adjustment</b> " on page 31.

### • When printing documents in grayscale:

<b>Brightness Adjustment</b>	You can adjust the brightness for grayscale printing. See " <b>Brightness Adjustment</b> " on page 33.
------------------------------	--

**Note:**

The **ICM** is not available when the **Photo Color** is selected on the **Color Mode** menu.

## 7. Quality

Specifies the printing resolution.

Choosing a higher resolution improves the print quality but slows printing.

<b>Draft</b>	Prints at a print engine resolution of <b>300×300 dpi</b> .
<b>Standard</b>	Prints at a print engine resolution of <b>600×600 dpi</b> .
<b>Enhance</b>	Prints at a print engine resolution of <b>1200×1200 dpi</b> .

**Note:**

- Printing takes twice as long when **Enhance** is selected.
- When the **Media Type** is **Transparency**, the quality is automatically set to **Standard**.
- When the customized paper size to be set with **Use Long Paper (over 18 in)** is printed, the quality is automatically set to **Standard**. (See page 11)
- **Enhance** is not available unless the 512MB optional printer memory is installed. (See page 43)
- **Draft** is not available for DP-C322/C262.

### 8. Resolution

Specifies the printing resolution.

Choosing a higher resolution improves the print quality but slows printing.

<b>1200 dpi</b>	Prints at a print engine resolution of <b>1200×1200 dpi</b> .
<b>600 dpi</b>	Prints at a print engine resolution of <b>600×600 dpi</b> .
<b>300 dpi</b>	Prints at a print engine resolution of <b>300×300 dpi</b> .

**Note:**

1200 dpi Print is not available for Standard printer Driver.

### 9. Graphics Mode (Available for PCL 6 Emulation Printer Driver only)

<b>Vector</b>	Treat line information as Graphic data.
<b>Raster</b>	Treat all information as Bitmap data.

### 10. Halftone

- PCL 6 Emulation Printer Driver  
**Normal**, **Fine**, and **Coarse** can be selected.
- Standard Printer Driver  
**None**, **Dither**, and **OS Halftone** can be selected.

### 11. Contrast

Defines the darkness of the dots printed on the paper.

**12. Toner Save**

Choose this option to conserve toner. The overall effect is lighter, so this feature is recommended for test printing or producing documents for which appearance is not critical.

**13. Print All Text as Black**

Prints all colored text in black. In grayscale mode, colored text may appear faint when printed. When this option is on, the printer prints all text in black for better legibility.

**Note:**

- Only available when **Color Mode** is set to **Grayscale**.
- This does not change the color of text created as graphics.
- When the Text color is in white, it does not change its color to black if you are using the Standard Printer Driver. However, if you are using the PCL 6 Emulation Printer Driver, the text color will change to black if **Print All Text as Black** is enabled. Please disable the checkbox if the background of a printing document is in black.


**14. Print Fine Patterns**

Change this option if you are getting unexpected result with print files and patterns.

If this option is set "ON", it may cause difference between on-screen appearance and printed out.

**15.  button**

Allows you to configure the font settings.

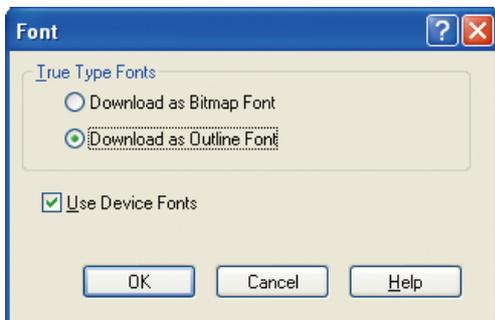

(For DP-C322/C262)



(For DP-C354/C323/C264/C263/C213, DP-C405/C305/C265, DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P: PCL 6 Emulation Printer Driver)

**TrueType Fonts:**

Specifies how TrueType® fonts are downloaded by the printer.

<b>Download as Bitmap Font</b>	Download fonts as Bitmaps.
<b>Download as Outline Font</b>	Download fonts as Outlines. If the document includes a lot of text in large fonts, this may reduce the amount of print data.

**Note:**

Depending on the type of characters, in some cases, even if **Download as Outline Font** is selected, fonts may be downloaded as bitmaps.


**Use Device Fonts:**

Selecting this option makes the printer use resident fonts matching the document fonts. In this case, printing is faster because only the character code is transferred, without downloading fonts.

**Note:**


- A list of the available device fonts can be printed via the **Printer Settings No. 07 on the Function Mode**.
- Even if the fonts installed in Windows and on the printer have the same typeface name, they may be slightly different. Thus, do not select this option if you want printouts to match the appearance on screen exactly.

**Font Substitution Table**

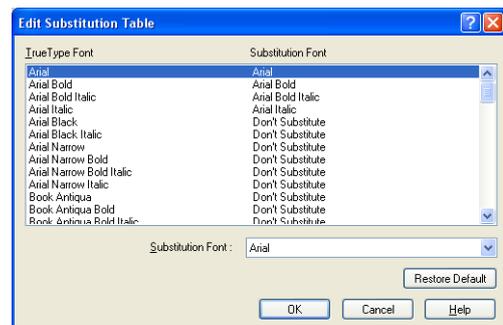

**■ Color Space (When Device Color Selected in Color Management)  
(Available for For DP-C322/C262, DP-C354/C323/C264/C263/C213,  
DP-C405/C305/C265 only)**

Click the **Detail...** button of **Quality** tab, you can configure color and grayscale reproduction differently for text, graphics and images.

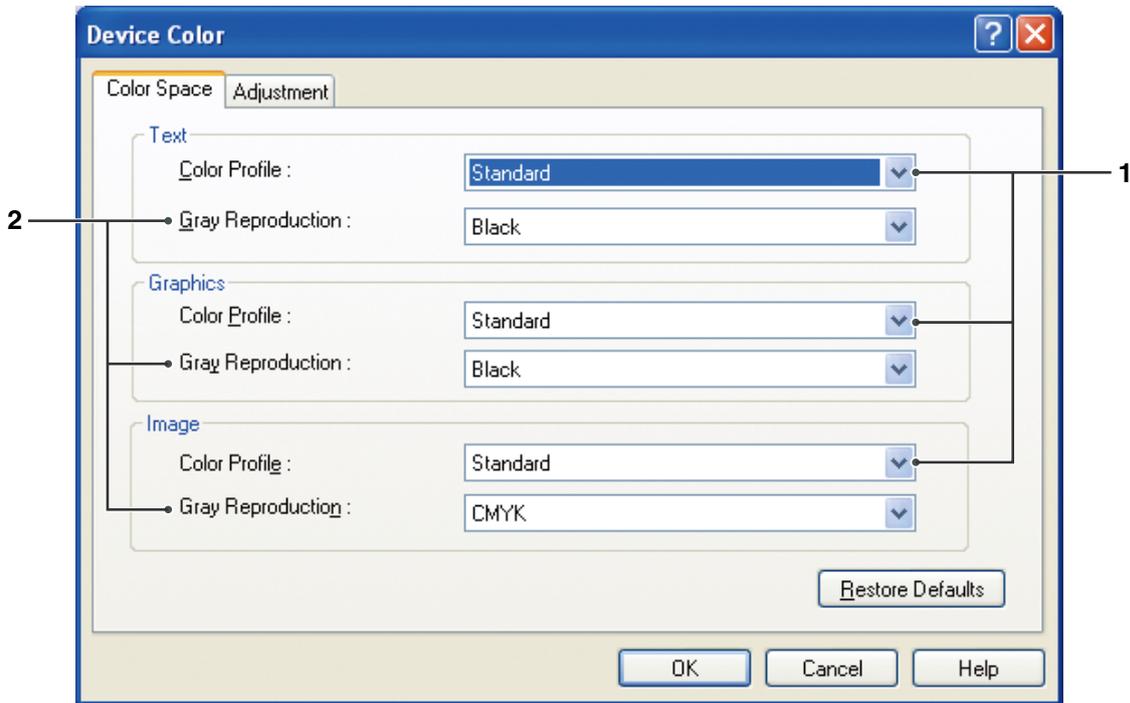

**1. Color Profile**

Specifies color reproduction for text, graphics, and images.

<b>Standard</b>	Print with color reproduction close to standard color monitors.
<b>Vivid</b>	Print with more vivid color reproduction. A good choice for line art and graphics.


**2. Gray Reproduction**

Specifies black output for text, graphics, and images.

<b>CMYK</b>	Use the four colors of CMYK to reproduce intermediate shades of gray.
<b>Black</b>	Use only black to reproduce intermediate shades of gray.

■ **Adjustment (When Device Color Selected in Color Management)**  
 (Available for For DP-C322/C262, DP-C354/C323/C264/C263/C213,  
 DP-C405/C305/C265 only)

Click the **Detail...** button of **Quality** tab, to adjust the saturation and brightness.

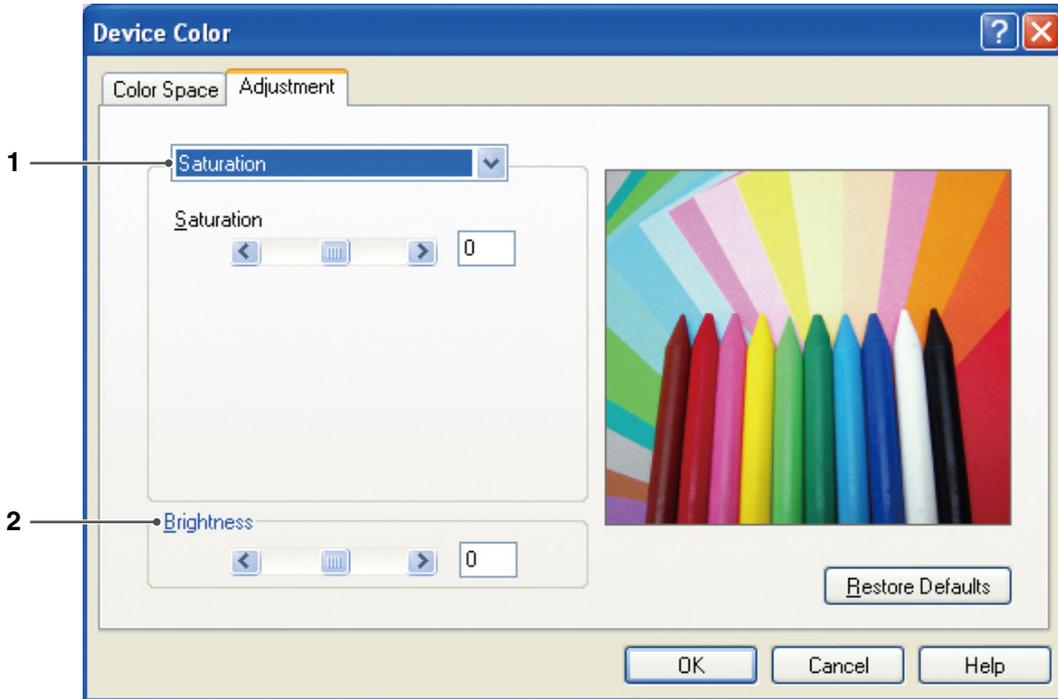


1. **Adjustment** (Available only when **Device Color** is selected)  
 Adjusts the colors in each settings.

<b>Saturation</b>	Color saturation is adjustable. The adjusted output image is represented on the sample window (reference only).
<b>RGB Balance</b>	The color levels are adjustable for red, green and blue. The adjusted output image is represented on the sample window (reference only).
<b>CMYK Balance</b>	The color levels are adjustable for cyan, magenta, yellow and black. The adjusted output image is represented on the sample window (reference only).

2. **Brightness**  
 Color brightness is adjustable. The adjusted output image is represented on the sample window (reference only).

■ **Adjustment (When ICM Selected in Color Management)**  
(Available for For DP-C322/C262, DP-C354/C323/C264/C263/C213,  
DP-C405/C305/C265 only)

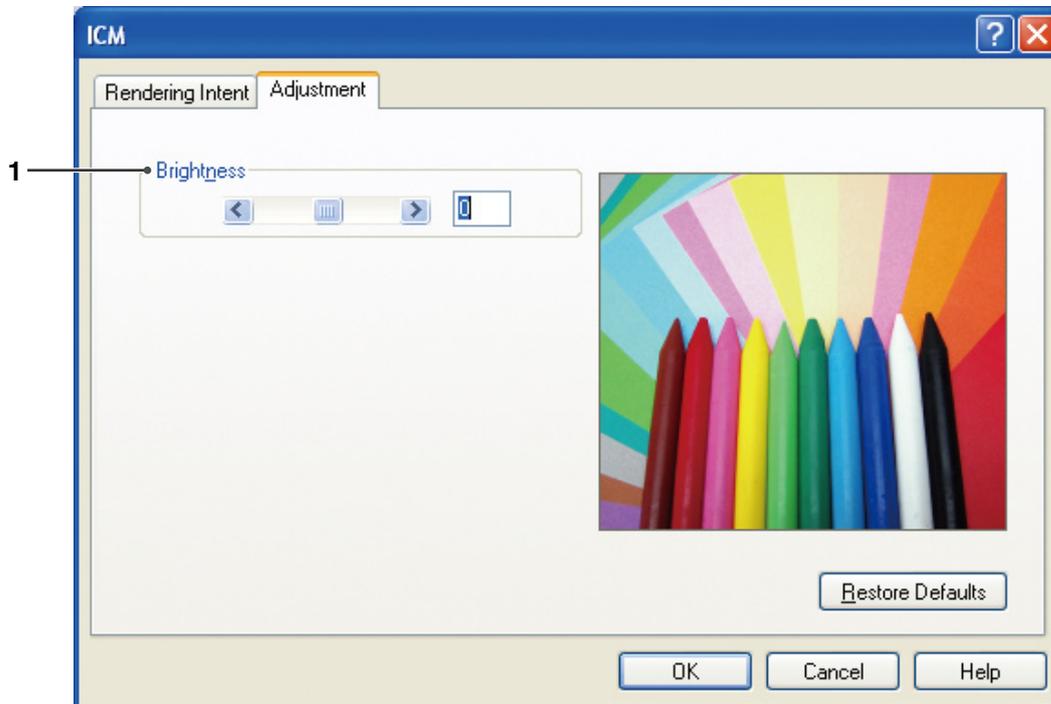


1. **Brightness**

Color brightness is adjustable. The adjusted output image is represented on the sample window (reference only).


■ **Rendering Intent (When ICM Selected in Color Management)**  
**(Available for For DP-C322/C262, DP-C354/C323/C264/C263/C213,**  
**DP-C405/C305/C265 only)**

Click the  button of **Quality** tab, to select the rendering intent.

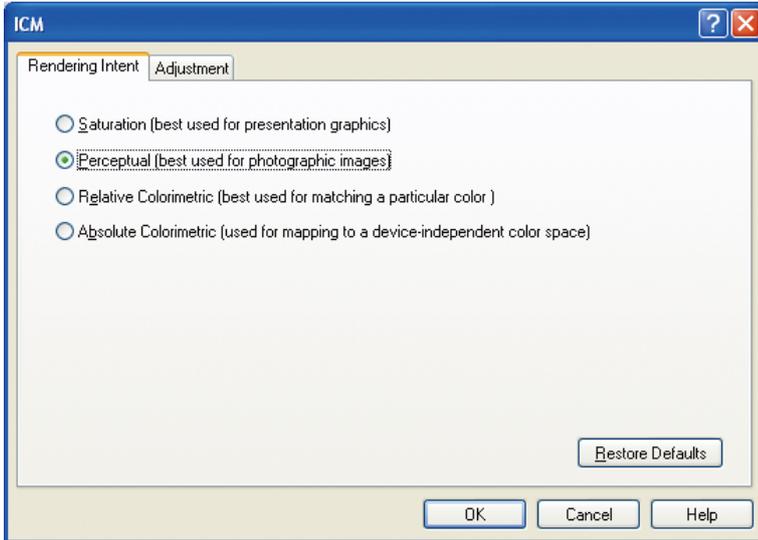

■ **Brightness Adjustment (When Grayscale Selected in Color Mode)**  
(Available for For DP-C322/C262, DP-C354/C323/C264/C263/C213,  
DP-C405/C305/C265 only)

Click the  button of **Quality** tab, to adjust the brightness.

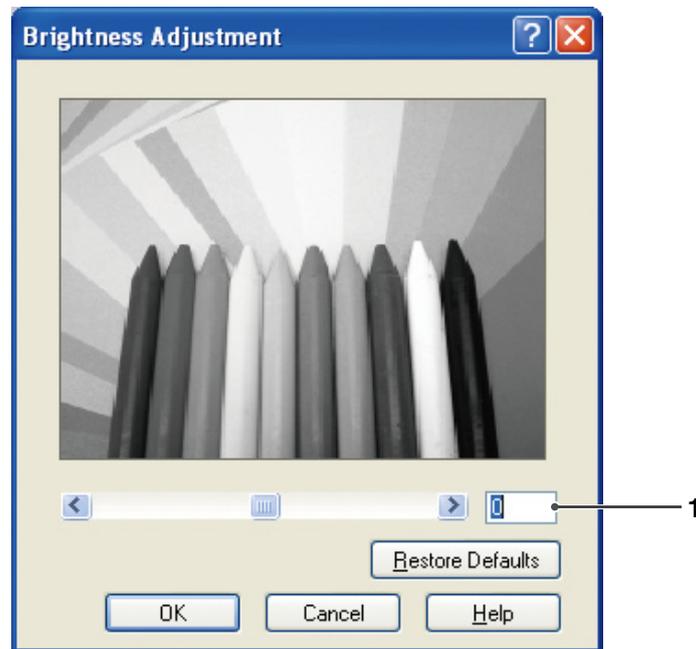


1. **Brightness**


Grayscale brightness is adjustable. The adjusted output image is represented on the sample window (reference only).

# Effects Tab


Add **Watermark** and/or **Overlay** to put your own signature on documents. To use these features, click the appropriate check box and configure the settings.

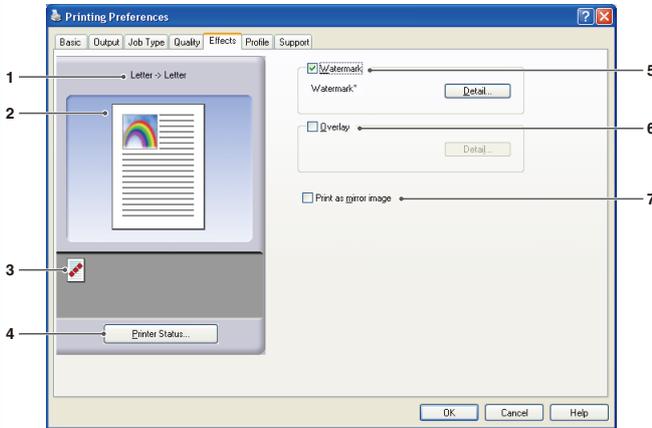

(For DP-C405/C305/C265)

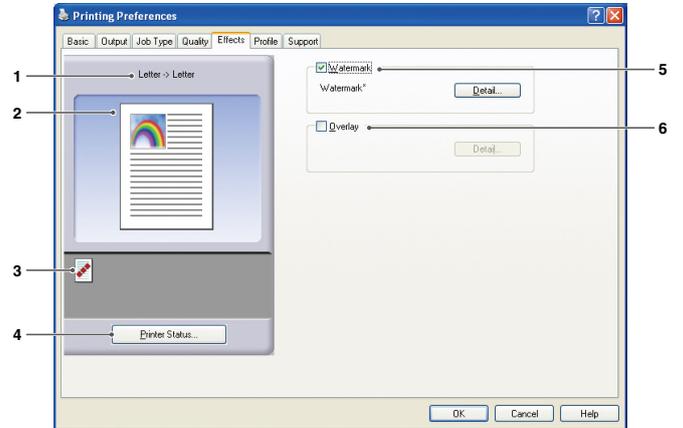

(For DP-C322/C262, DP-C354/C323/C264/C263/C213)

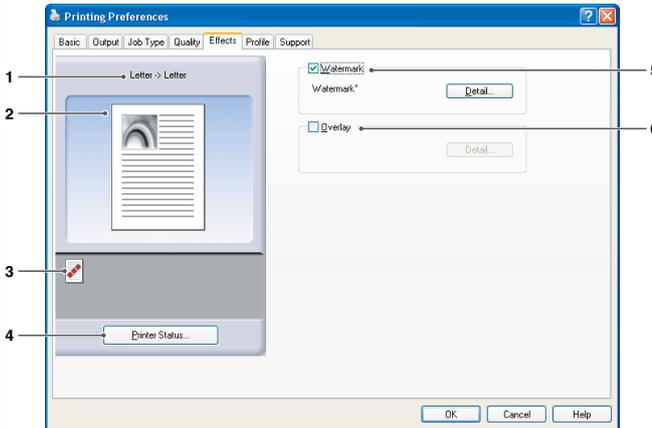

(For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960)

## 1. Paper Size

Displays the current **Paper Size** and **Output Paper Size** settings.

## 2. Paper Image

Represents the current settings, along with the icons shown below.

## 3. Icons

Represent the current settings, along with the paper image shown above.

## 4. **Printer Status...** button

Used to check the printer status, launch the **Device Monitor**, which displays the status. This feature is only available when the printer is connected over a TCP/IP network.

## 5. Watermark

Check the check box to activate the Watermark settings, click the **Detail...** button to open the setting window. (See Page 35)

## 6. Overlay

Check the check box to activate the Overlay settings, click the **Detail...** button to open the setting window. (See Page 37)

### Note:


*If 5 & 6 above are not set, the buttons for these features will be deactivated. To activate these features, check the check box of each feature to move to the settings screen.*

## 7. Print as mirror image

Performs the mirror printing. The current settings are printed as a mirror image of the documents.

## ■ Watermark

Your choice of text can be printed in the document foreground or background as a watermark. You can also specify the pages for watermark printing.

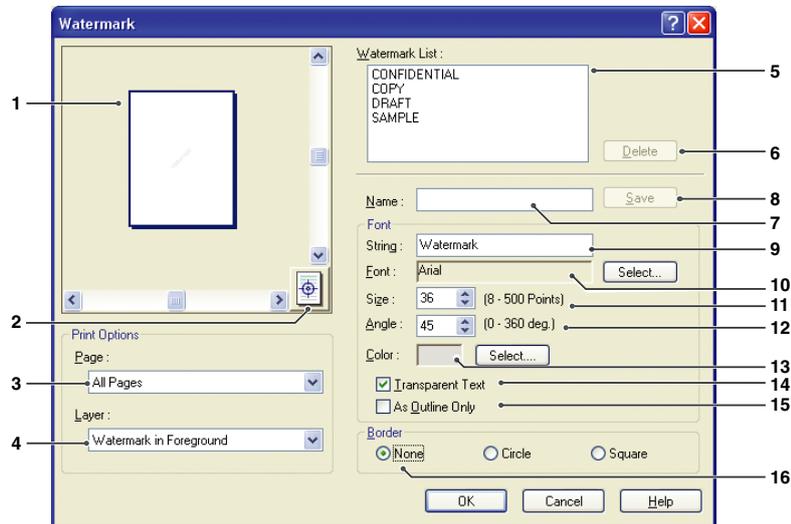

### 1. Preview

For previewing the watermark selected in the list.

### 2. Move to center

Specifies to center the watermark on the page.

### 3. Page

Specifies which pages to print.

<b>All Pages</b>	Print the watermark on all pages.
<b>1st Page Only</b>	Print the watermark only on the first page.
<b>All but 1st Page</b>	Print the watermark on every page except the first.
<b>Odd Pages</b>	Print the watermark only on odd pages.
<b>Even Pages</b>	Print the watermark only on even pages.

*Continue on the next page...*

4. **Layer**

Specifies the order to print layers (the watermark and the document).

<b>Watermark in Background</b>	Print it in the background of the document.
<b>Watermark in Foreground</b>	Print it in the foreground of the document.

5. **Watermark List**

Lists the watermarks that have been created. A preview of the selected watermark is displayed in the preview area.

6.  **button**

Deletes the watermark selected in the watermark list.

7. **Name**

Enter the name to identify the watermark.  
Enter 31 single-byte characters or less.

8.  **button**

Watermark names you enter in **Name** are saved in the current setting.  
The saved watermark is displayed in the watermark list.

9. **String**

Enter the text to be printed.  
Enter 63 single-byte characters or less.

10. **Font**

Select the font by clicking the  button to display the font selection dialog box.

11. **Size**

Specify the watermark size in a range of **8-500 Points**.

12. **Angle**

Specify the angle of watermark text in a range of **0-360 deg**.

13. **Color**

Select the color by clicking the  button to display the color selection dialog box.

14. **Transparent Text**

Select this option for clear watermark text that reveals the document underneath.

15. **As Outline Only**

Select this option to print the text as an outline.

16. **Border**

You can apply a border around the text.



<b>None</b>	No border.
<b>Circle</b>	Print the text in a circle.
<b>Square</b>	Print the text in a square.

**Note:**

- Watermark data is saved for individual users who are logged on. Those created by other users are not listed.
- The feature is not enabled if the **Poster** is selected on the **Basic** tab. (See page 20)
- The saved watermark lists will not be deleted when the PCL 6 Emulation Printer Driver, or the Standard Printer Driver is uninstalled. The watermark lists will automatically be recognized if the PCL 6 Emulation Printer Driver, or the Standard Printer Driver is installed again.
- The following characters are not available for the Watermark file name.  
`\ / * ? : ; . " < > |`
- DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P: Standard Printer Driver, UF-8200/7200, UF-8300/7300, UF-7960:  
 When using the Watermark function select **Dither** for the **Halftone** in the **Quality** Tab.
- DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P: PCL 6 Emulation Printer Driver:  
 When using the Watermark function, select **Vector** for the **Graphics Mode** in the **Quality** Tab.

## ■ Overlay

Your registered images can be printed in the document foreground or background. It's easy to enhance documents with your company name or logo.

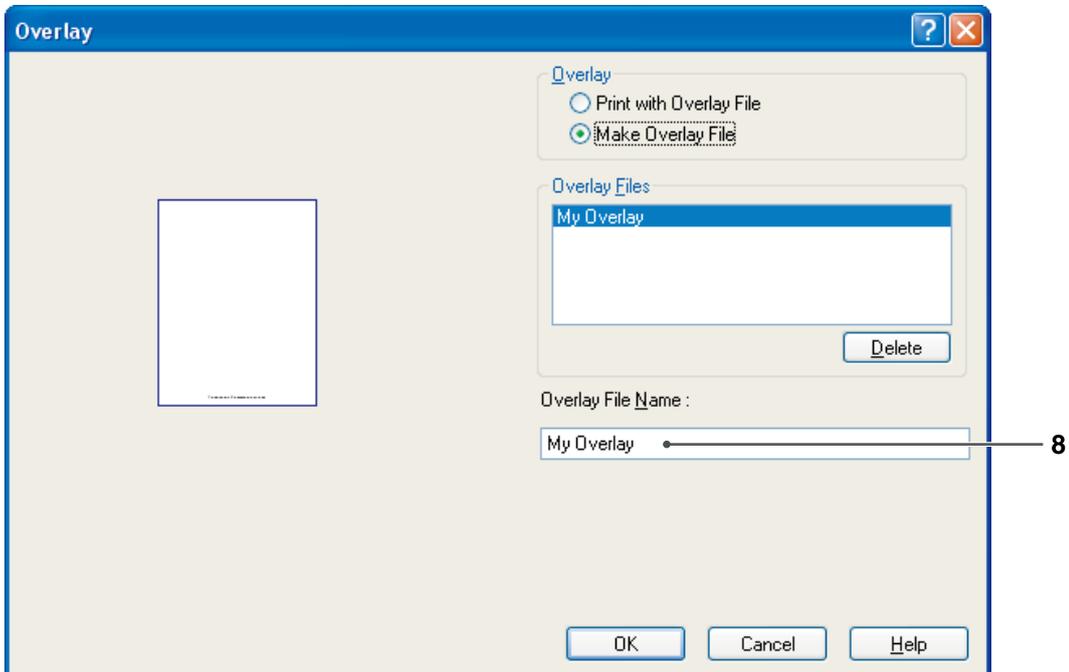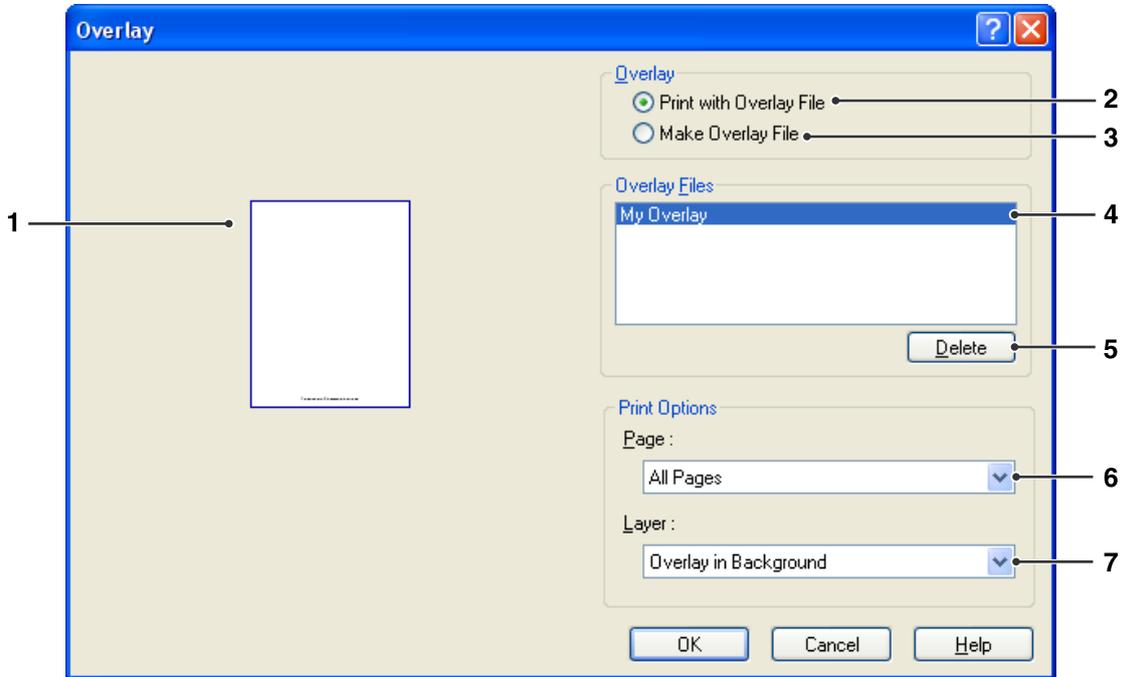

Continue on the next page...

1. **Preview**

For previewing the overlay file selected in the list.

The preview does not display until the overlay is created.

2. **Print with Overlay File**

Print with an overlay. Select an overlay file and configure the **Print Options** settings.

3. **Make Overlay File**

Make the new overlay file. The first page will be saved (without printing) as overlay data.

**Note:**

*Only the first page of multi-page documents can be used as overlay data.*

4. **Overlay Files**

List the overlay files that have been created.

A preview of the selected overlay file is displayed on the left of the dialog box.

5.  **button**

Delete the selected overlay file.

6. **Page**

Specifies which pages to print.

<b>All Pages</b>	Print the overlay on all pages.
<b>1st Page Only</b>	Print the overlay only on the first page.
<b>All but 1st Page</b>	Print the overlay on every page except the first.
<b>Odd Pages</b>	Print the overlay only on odd pages.
<b>Even Pages</b>	Print the overlay only on even pages.

7. **Layer**

Specifies the order to print layers (the overlay file and the document).

<b>Overlay in Background</b>	Prints the overlay in the background, under the document.
<b>Overlay in Foreground</b>	Prints the overlay in the foreground, over the document.

8. **Overlay File Name**


Enter the name of overlay file (up to 63 characters).

**Note:**


- *The following characters are not available for the Overlay File Name.  
 \ / \* ? ; : . " < > |*
- *Overlay file is saved for individual users who are logged on.*
- *The feature is not enabled if the **Poster** is selected on the **Basic** tab. (See page 20)*
- *The saved overlay files will not be deleted when the PCL 6 Emulation Printer Driver, or the Standard Printer Driver is uninstalled. The overlay files will automatically be recognized if the PCL 6 Emulation Printer Driver, or the Standard Printer Driver is installed again.*

# Profile Tab

Registering the current settings as a profile makes it easy to recall the settings next time you print. The frequently used settings you save as profiles are easily adjustable as required.

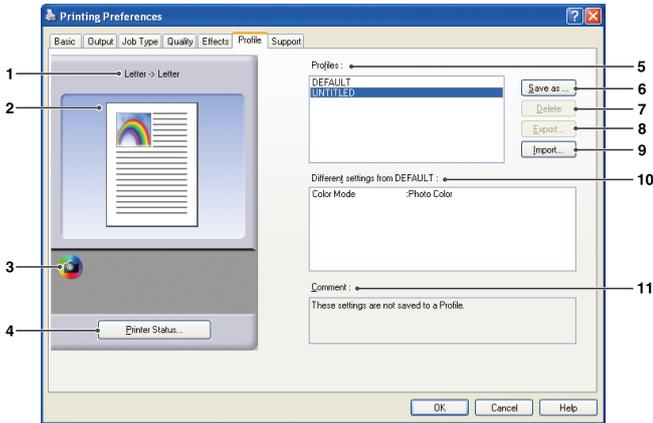

(For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265)

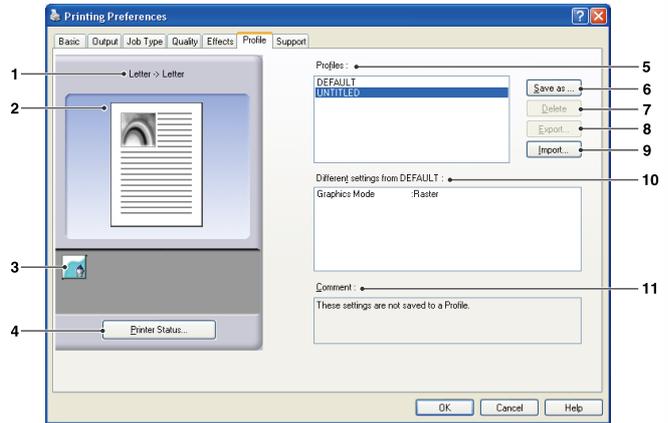

(For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960)

## 1. Paper Size

Displays the current **Paper Size** and **Output Paper Size** settings.

## 2. Paper Image

Represents the current settings, along with the icons shown below.

## 3. Icons

Represent the current settings, along with the paper image shown above.

## 4. button

Used to check the printer status, launch the **Device Monitor**, which displays the status. This feature is only available when the printer is connected over a TCP/IP network.

## 5. Profiles

List the profiles that have been created. **DEFAULT** is the factory setting. **UNTITLED** is the current setting that has not been saved.

## 6. button

Save the current settings. The profile is named and comments can be added before saving. If the name of an existing profile is used, that profile is overwritten.

Enter 31 single-byte characters or less for the profile name, 127 or less for the comment. If you select **Do not save Paper Size and Orientation**, **Paper Size** and **Orientation** will not be saved in the profile. These Paper settings are also configured in each software applications, so it is advisable to check the Profile box before saving the profiles.

### Note:

- **DEFAULT** and **UNTITLED** cannot be used as profile names.
- The saved profiles will not be deleted when the PCL 6 Emulation Printer Driver, or the Standard Printer Driver is uninstalled. The saved user profiles will automatically be recognized if the PCL 6 Emulation Printer Driver, or the Standard Printer Driver is installed again.

Continue on the next page...

7.  **button**

Deletes the selected profile.

Settings details of the deleted profile will be retained in the **UNTITLED** profile until the settings are changed.

**Note:**

*The profiles **DEFAULT** and **UNTITLED** cannot be deleted.*

8.  **button**

Saves the selected profile as a file.

**Note:**

*The profiles **DEFAULT** and **UNTITLED** cannot be exported.*

9.  **button**

Loads an exported profile and adds it to the list of profiles.

10. **Different settings from DEFAULT**


Displays the differences between the current setting and the default setting.

11. **Comment**


Displays comments about the profile.

# Support Tab

Displays the printer driver version and various support information.

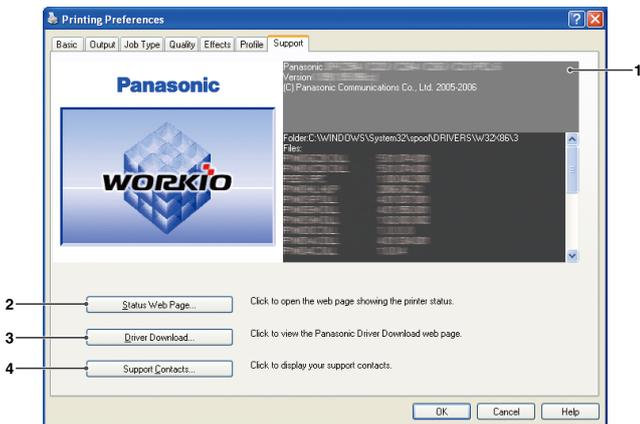

(For DP-C322/C262, DP-C354/C323/C264/  
C263/C213, DP-C405/C305/C265)

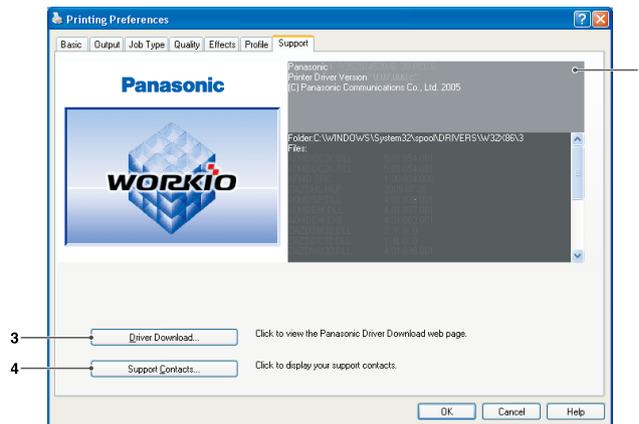

(For DP-8060/8045/8035, DP-8032/8025,  
DP-3030/2330, DP-8020E/8020P/8016P,  
UF-8200/7200, UF-8300/7300, UF-7960)

## 1. Version Information

Displays the version of printer driver configuration files.

## 2. Status Web Page... button

To check the current printer status, you can launch a default web browser and access the **Embedded Web Server** of the connected printer.

### Note:

*Make sure that your printer is connected on your network properly (TCP/IP only) to access the **Embedded Web**.*


*The button is not selectable if the **Enable printer pooling** is set to ON and multiple ports are selected on the **Ports** tab.*

## 3. Driver Download... button

Launches the default web browser and accesses the manufacturer's download site to download the latest Printer Driver.


## 4. Support Contacts... button

Displays the dialog box with support information registered in the driver.

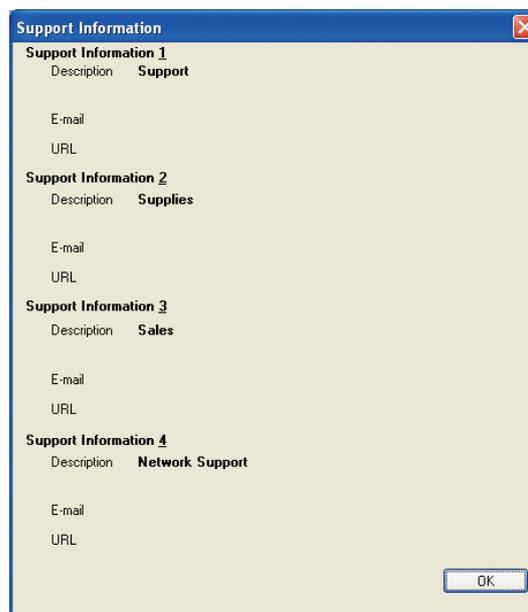


# Form/Tray Tab


Assigning media to specific trays can prevent printing mistakes and instances when the printer stops because of paper mismatches.

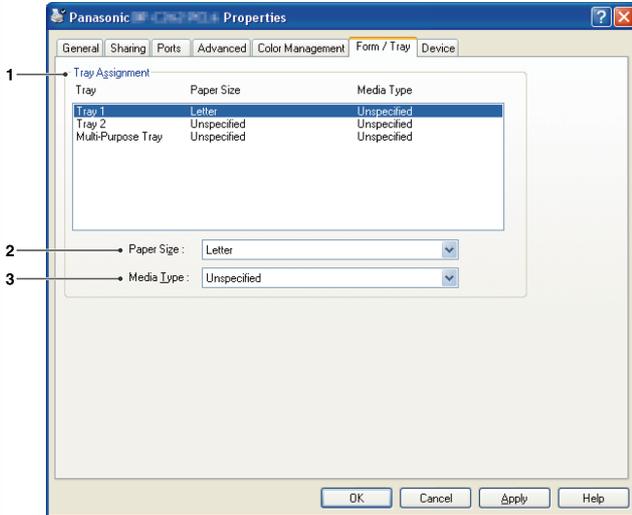

(For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265)

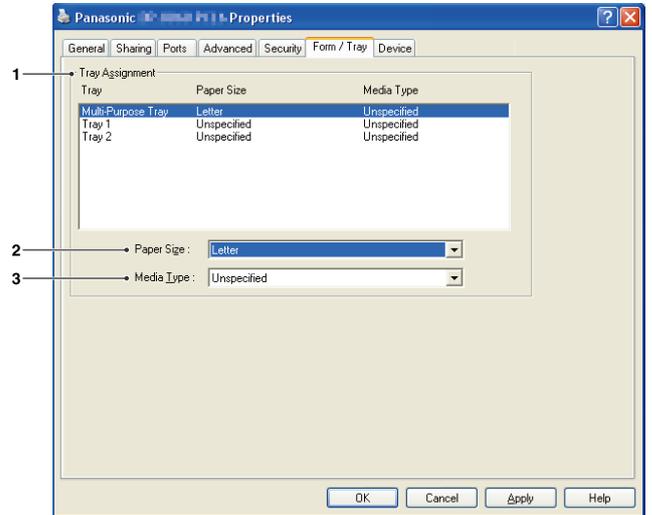

(For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960)

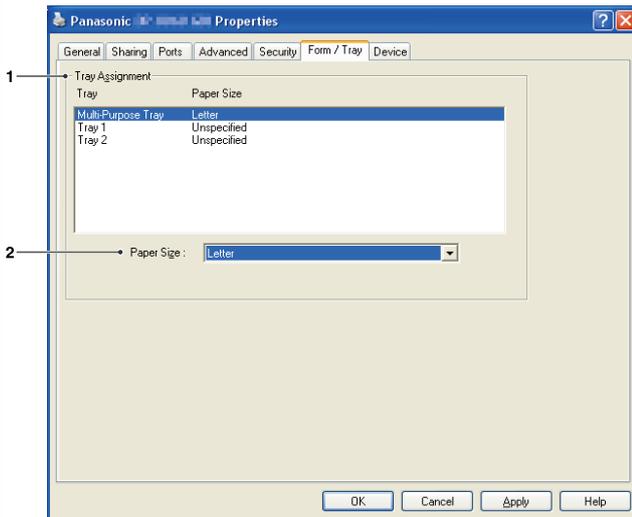

(For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330: Standard Printer Driver)

1. **Tray Assignment**  
Specifies the **Paper Size** and **Media Type** assigned to the printer's **Tray**.  
Select the paper tray from the list box, and then choose the paper size and media type.
2. **Paper Size**  
Specify the paper sizes loaded in each tray.  
If you do not want to assign the paper size, select **Unspecified**.
3. **Media Type**  
Specify the type of media loaded in each tray.  
If you do not want to assign the media type, select **Unspecified**.


**Note:**

- If the **Multi-Purpose Tray** was selected, ensure that the media type selection in the control panel matches the media loaded on the tray.
- After specifying the paper size and media type loaded in each tray, the settings are not yet initiated on the printer and require activation.  
To activate the settings, click the **Advanced** tab and select **Hold mismatched documents**. This ensures printing jobs are held in the case of mismatches between the specified tray and the type of paper loaded.


# Device Tab

Used for configuring optional devices installed on the printer.


It is possible to auto configure the optional devices installed on the printer or obtain information on the printer driver settings.

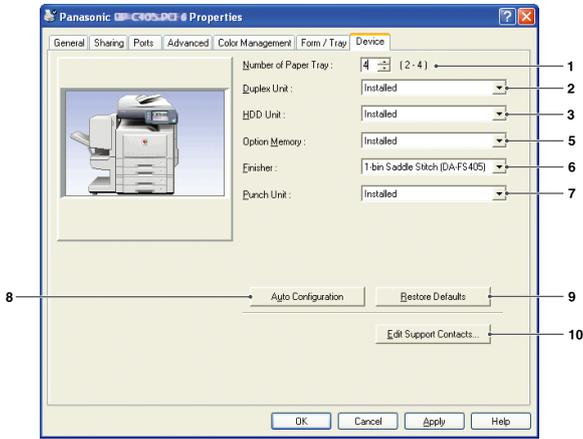


(For DP-C405/C305/C265)

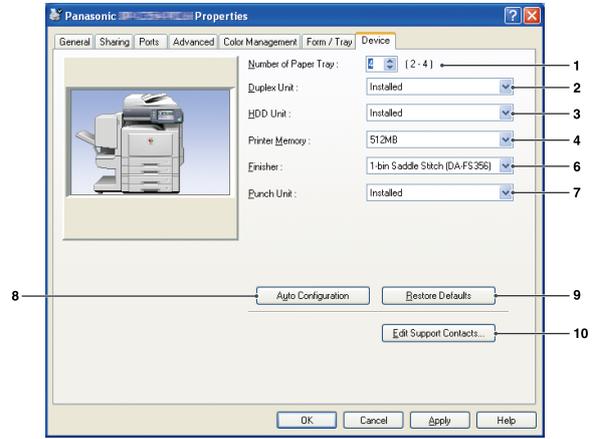


(For DP-C322/C262, DP-C354/C323/C264/C263/C213)

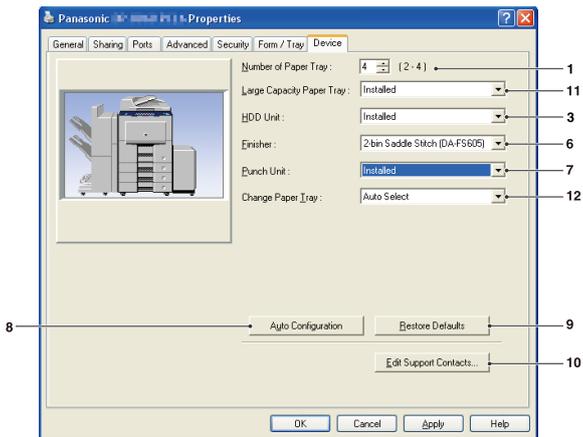


(For DP-8060/8045/8035)

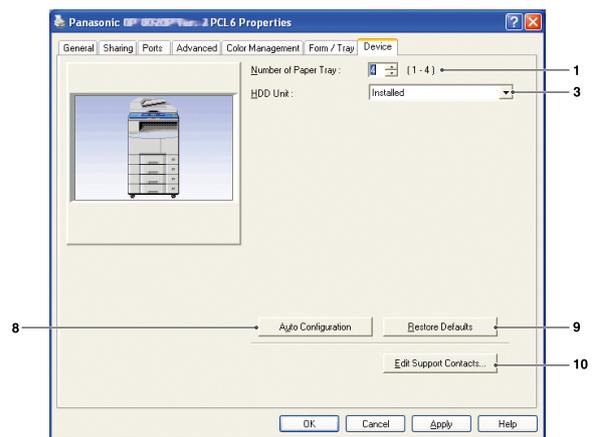

(For DP-8020E/8020P/8016P)

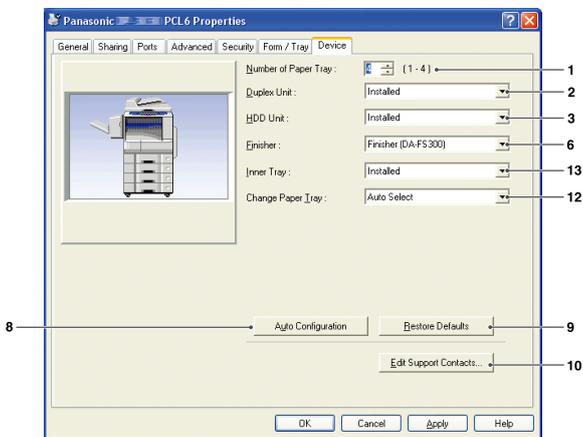

(For DP-8032/8025, DP-3030/2330)

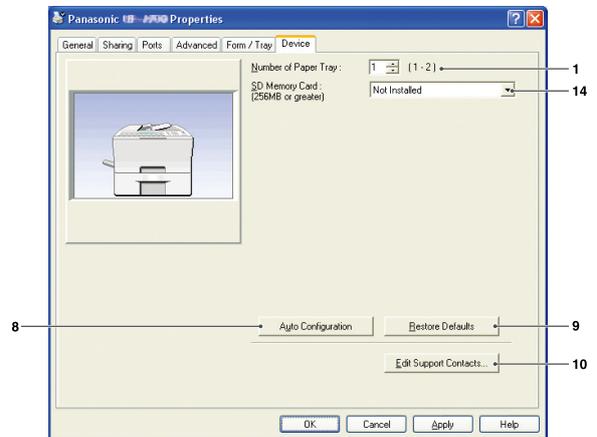

(For UF-8200/7200, UF-8300/7300, UF-7960)

1. **Number of Paper Tray**  
Specifies the number of paper trays installed on the device.
2. **Duplex Unit**  
Select **Installed** if a duplex unit is installed.
3. **HDD Unit**  
Select **Installed** if a hard disk drive unit is installed.
4. **Printer Memory**  
Select and specify the total amount of memory installed on the printer (standard + optional memory).
5. **Option Memory**  
When there is an option memory installed, select **Installed**.
6. **Finisher**  
If the printer is equipped with a **Finisher**, select it from the list.
7. **Punch Unit**  
Select **Installed** if a punch unit is installed.
8. **Auto Configuration** button  
Clicking this button will search for installed printer options, which are automatically detected and configured. (Network or USB Connection)  
  
**Note:**  
*For some models, Auto Configuration with the USB connection is not available.  
The button is not selectable if the **Enable printer pooling** is set to ON and multiple ports are selected on the **Ports** tab.*
9. **Restore Defaults** button  
Restores all **Device** tab settings to the factory default values.

10. **Edit Support Contacts...** button  
Allows the entry and editing of support information.

The screenshot shows a dialog box titled "Support Information". It contains four sections, each with a "Description" field and two empty fields for "E-mail" and "URL".

- Support Information 1:** Description: Support
- Support Information 2:** Description: Supplies
- Support Information 3:** Description: Sales
- Support Information 4:** Description: Network Support

At the bottom right of the dialog box are "OK" and "Cancel" buttons.

11. **Large Capacity Paper Tray**  
Select **Installed** if the Large Capacity Paper Tray is installed.
12. **Change Paper Tray (For PCL 6 Emulation Printer Driver)**  
**Auto Select**, when chosen, allows the paper to be fed continuously if the same size of paper is loaded in another paper tray (Auto Tray Switching). If **Specified Tray** is selected, the machine will stop if paper runs out in the chosen paper tray.
13. **Inner Tray**  
Select **Installed** if the Inner Tray is installed.
14. **SD Memory Card**  
Select **Installed** if the SD Memory Card (256MB or 512MB) is installed.


# Print Operation (for PC)

## Printing from Windows Applications

If the printer driver installed properly and is selected as the default printer in the printer setup, printing from any Windows application is a simple operation.

To print from most Windows applications, use the **Print** command in the **File** menu.

Selecting the **Print** command typically displays the following Print dialog box:

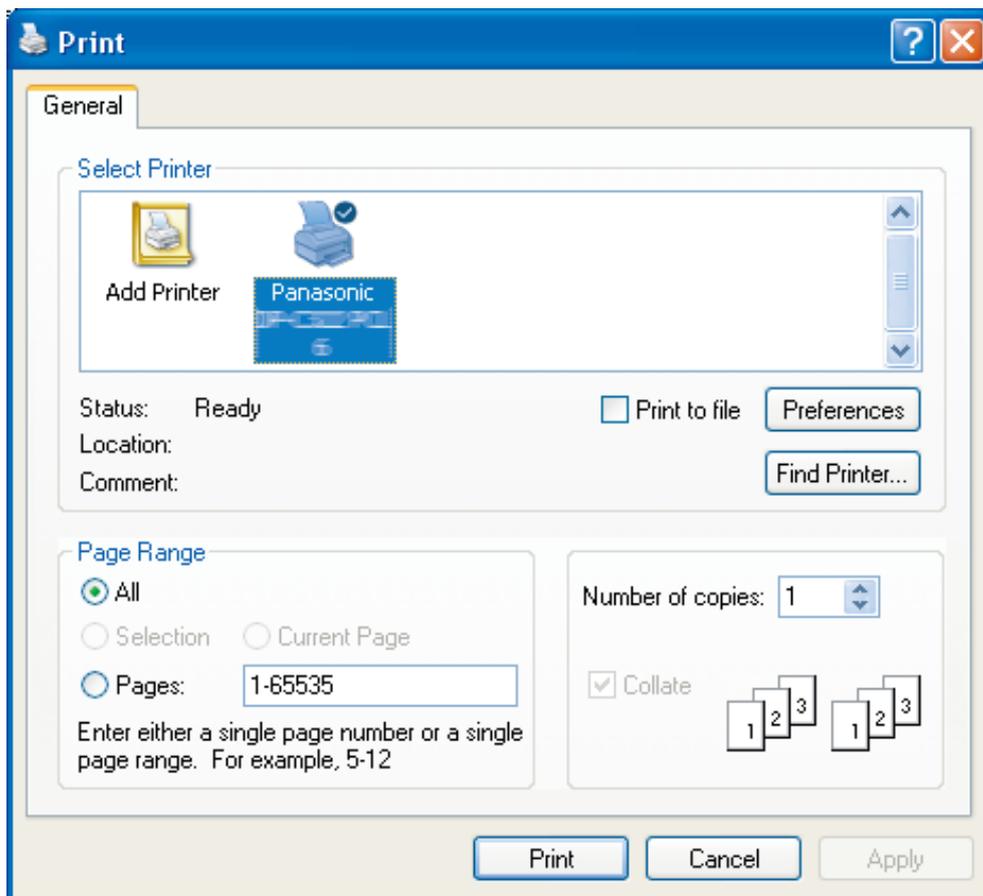

Setup your preferred configuration (page range, number of copies, etc.) first, and then click the **Print** button to start printing.

While documents are being printed, a printer icon appears in the System Tray near the clock in the bottom right hand corner of the screen. The icon disappears when printing is completed.

You may double-click the printer icon in the system tray to open and verify the details of the print queue.

**Note:**

*If more than one printer is installed on your PC, follow the steps below to set a default printer:*

1. Click the **Start** button, select **Settings(Control Panel)**, and then click the **Printer** icon.
2. Right-click on the desired printer icon, and then select **Set as Default Printer** in popup menu. The check mark next to the printer icon denotes a Default Printer.

## Printing on Network

When sharing a printer by connecting two or more computers via a crossover cable or using a hub, a connection among computers must be established.

Connection between the computers can be verified by displaying the connected computers in the **Network Neighborhood** on the desktop.

---


**NOTE**

*Refer to the instructions in the Network Card's and Windows User's Guide manuals for connecting between computers.*

# IPP (Internet Printing Protocol) Printing

## ■ General Description

Prints documents from a machine located in a remote area via the Internet without its access being blocked by a proxy server.

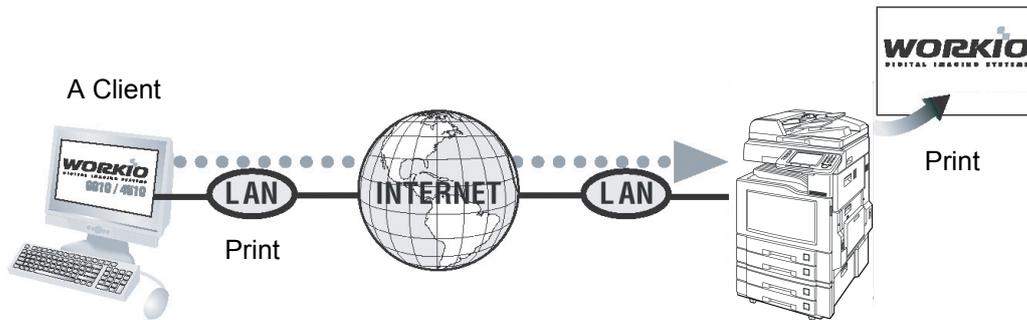

### NOTE

IPP (Internet Printing Protocol) Printing is not available for DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960: Standard Printer Driver.

## ■ Setting the IPP Printing

The setting method varies depending on your model.

### ● Setting the IPP Printing (A) (Pages 48-49):


For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265 or the PCL6 emulation printer driver of DP-8060/8045/8035, DP-3030/2330.

### ● Setting the IPP Printing (B) (Pages 50-53):


For all the other models.

## Setting the IPP Printing (A)


- 1 In the **Printers and Faxes** (For Windows 2000/Windows Server 2003/Windows Vista), right click the printer icon to open the printer properties screen.

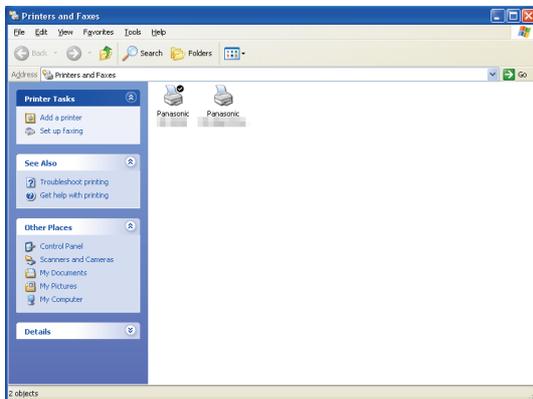


- 2 On the **"Ports"** Tab, click the **Add Port...** button.

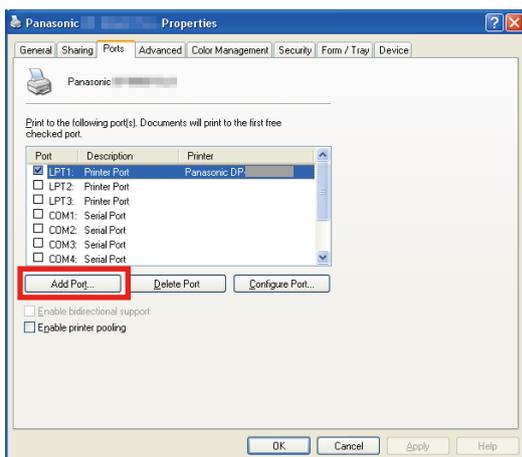

- 3 **Printer Ports** screen appears. Select **RPT Network Printer Port**, and click the **New Port...** button.

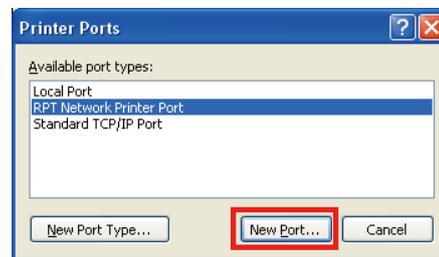

- 4 Select **Print using IPP**, and click the **Next >** button.

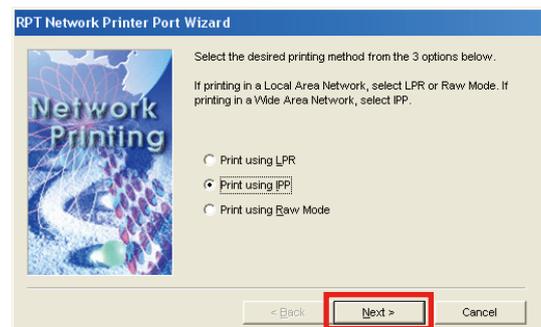


- 5 Select **Connect using a local area network**, and click the **Next >** button.




- 6 Select **Do not print using a proxy server**, and click the **Next >** button.



- 7 Input the Printer's IP address after the "http://", and add "/printer" at the end. Click the **Next >** button to proceed.

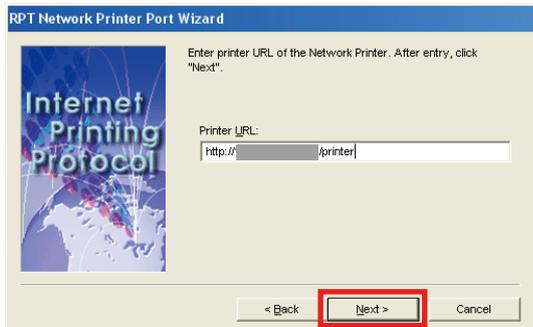



- 8 Verify that the Destination print port name is OK (change if necessary), and click the **Next >** button.

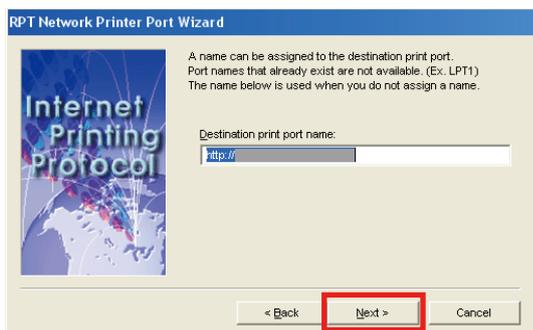

- 9 Click the **Finish** button.



- 10 Close the **Printer Ports** Screen, and check the new port has been added.

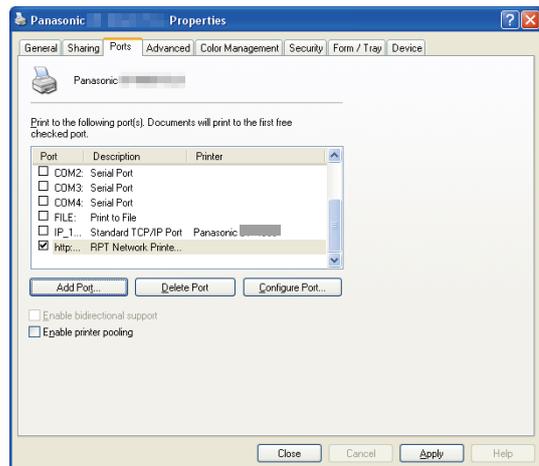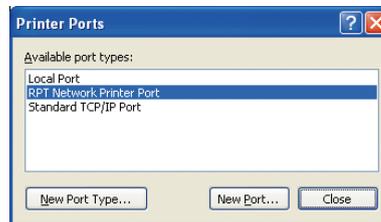

## Setting the IPP Printing (B) (for Windows 2000, Windows XP, Windows Server 2003)


- 1 Copy the printer driver on the desktop.  
Execute PrnCpy.exe in the following order.  
PrnCpy.exe is a tool to compile a printer driver for all Windows OS.

1. Open the **Panasonic Document Management System** CD-ROM in Explorer.
2. Open the **Tools** folder and then the **"PrnCpy"** folder.
3. Double-click **"PrnCpy.exe"**.
4. Press the <Y> key and then the <Enter> key on the keyboard on the displayed screen.  
The printer driver is compiled in the folder on the desktop.

- 2 Select **Printers and Faxes** from **Control Panel** and click **Add Printer**.


The **Add Printer Wizard** dialogue is displayed.

Click **Next >**.

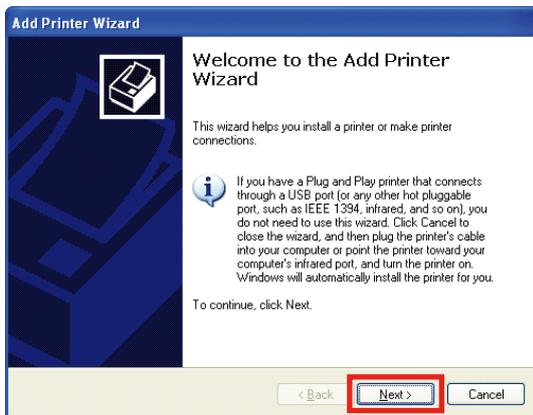

- 3 Select **A network printer, or a printer attached to another computer** and click


**Next >**.

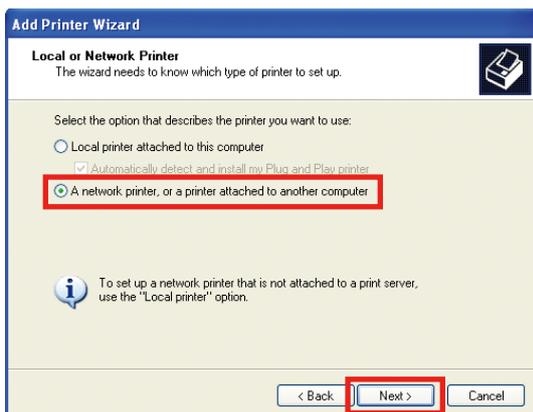


- 4 Select **Connect to printer on the Internet or on a home or office network**:

Input the Printer's IP address after the **"http://"**, and add **"/printer"** at the end in URL.

Click **Next >**.

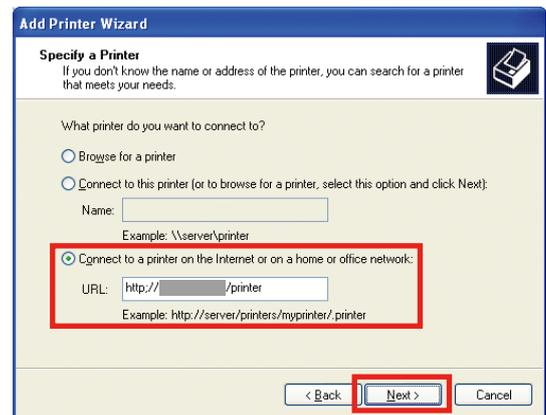


- 5 Click **Have Disk**.

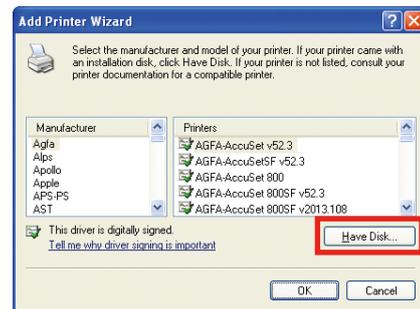


- 6 Select INF file.

- 6a Click **Browse**.

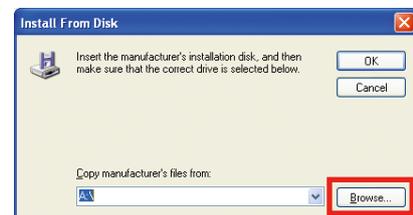


**6b** Select INF file from folder copied on the desktop and click **Open** .  
PrinterDriver → PCL → 32bit (or 64bit)

**Note:**  
If the OS you are using is the x64 edition, select the INF file from the 64 bit folder.  
If not clear, check with the network administrator.

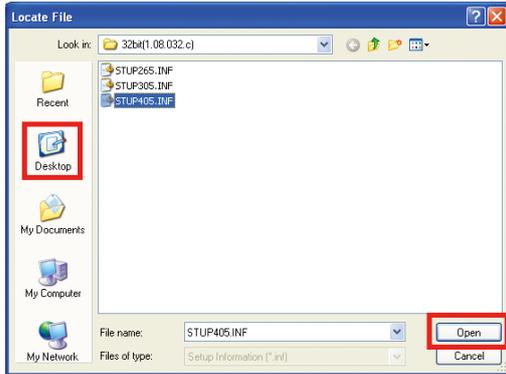

**6c** Click **OK** .

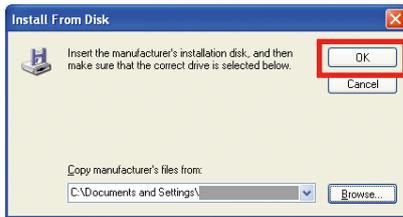

**7** Chose the model you are using and click **OK** .




**8** Click **Continue Anyway** .




● This screen is not displayed if the printer driver is already installed, or if it is a WHQL signed driver.

**9** If another printer is already set as the printer you normally use, the following screen is displayed.

To add as default printer select **Yes** and click **Next >** .

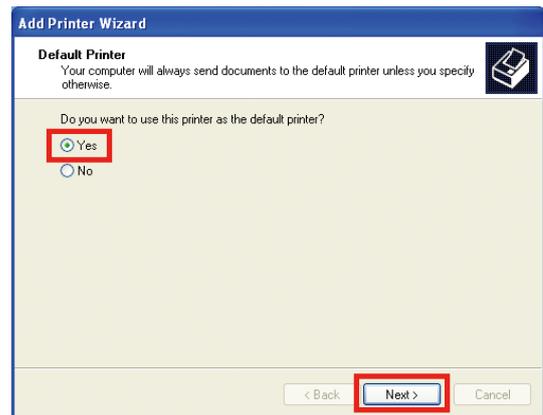

**10** Click **Finish** . The printer is added.

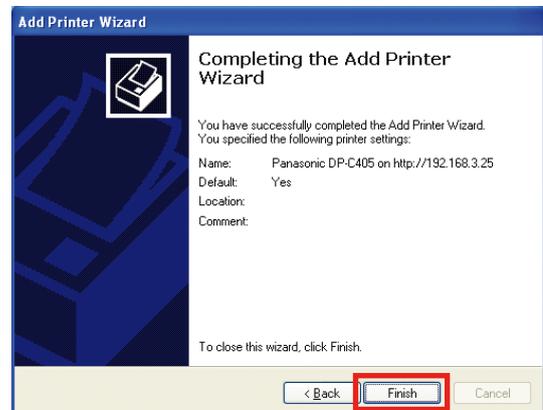


## Setting the IPP Printing (B) (for Windows Vista)


- 1 Copy the printer driver on the desktop.  
Execute PrnCpy.exe in the following order.  
PrnCpy.exe is a tool to compile a printer driver for all Windows OS.

1. Open the **Panasonic Document Management System** CD-ROM in Explorer.
2. Open the **Tools** folder and then the **"PrnCpy"** folder.
3. Double-click **"PrnCpy.exe"**.
4. Press the <Y> key and then the <Enter> key on the keyboard on the displayed screen.  
The printer driver is compiled in the folder on the desktop.


- 2 Click **Add Printer** on **Printer**.  
The **Add Printer** dialogue is displayed.  
Click **Add a network, wireless or Bluetooth printer**.

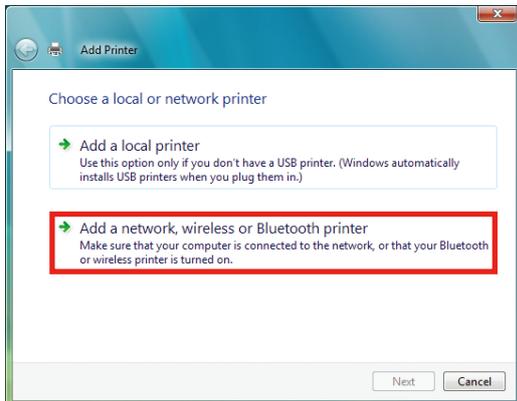


- 3 Click **The printer that I want isn't listed**.

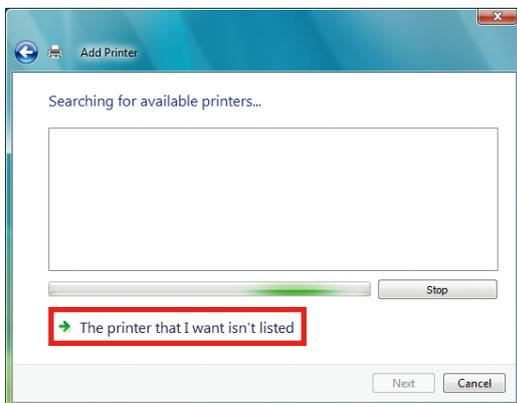

- 4 Select **Select a shared printer by name**.  
Input the Printer's IP address after the **"http://"**, and add **"/printer"** at the end in URL.  
Click **Next >**.

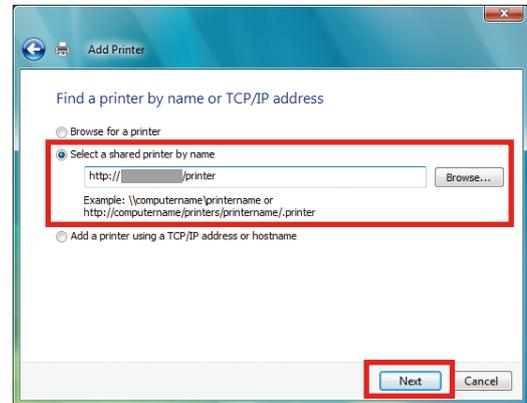


- 5 Click **Have Disk**.

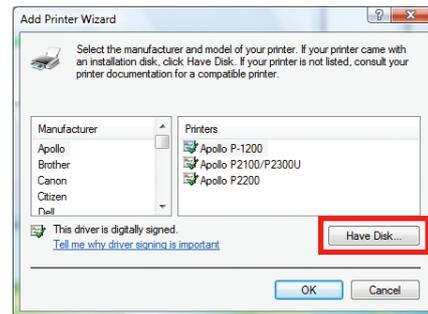


- 6 Select INF file.

- 6a Click **Browse**.

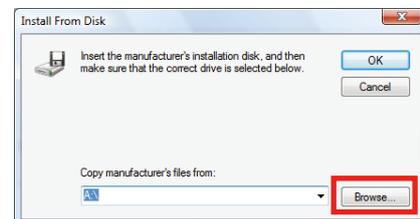


- 6b** Select INF file from folder copied on the desktop and click  .  
PrinterDriver → PCL → 32bit (or 64bit)

**Note:**  
If the OS you are using is the x64 edition, select the INF file from the 64 bit folder.  
If not clear, check with the network administrator.

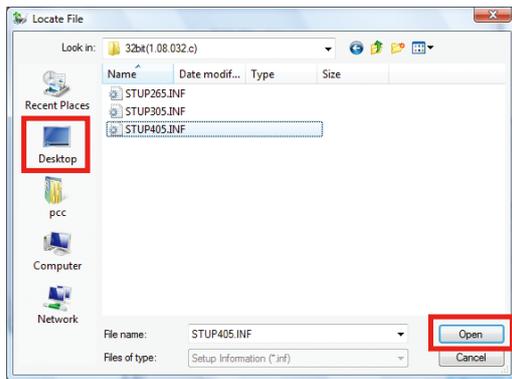

- 6c** Click  .

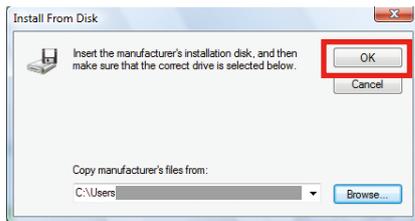


- 7** Chose the model you are using and click  .



- 8** The user account control screen is displayed.  
Click  .


- 9** Click **Install this driver software anyway**.

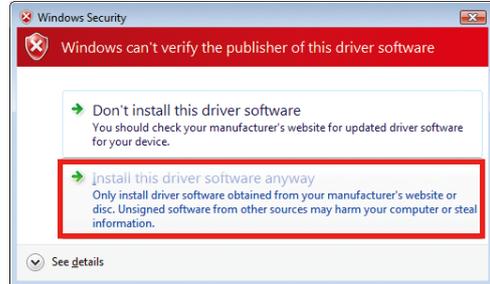


- This screen is not displayed if the printer driver is already installed, or if it is a WHQL signed driver.

- 10** If another printer is already set as the printer you normally use, the following screen is displayed.

In order to add as the default printer, click  with a checkmark inserted in **Set to printer normally used**.

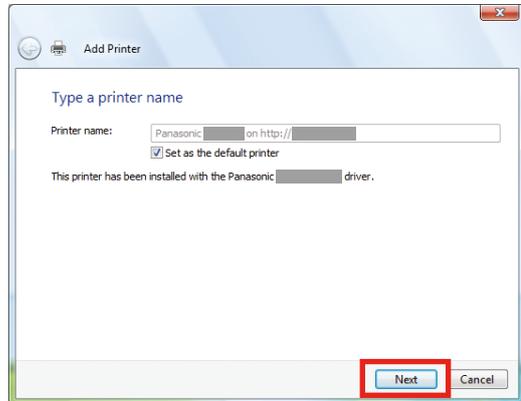

- 11** Click  . The printer is added.

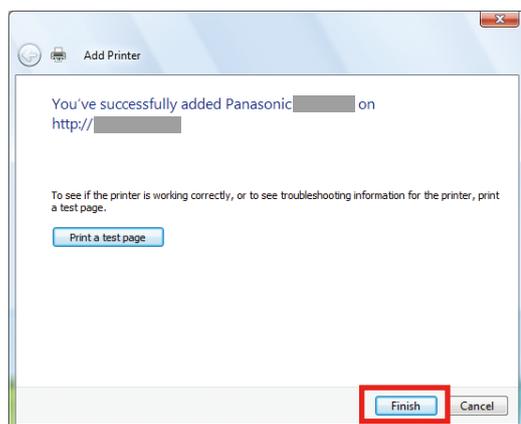

# Job Status Utility


The **Job Status Utility** software will display the popup notice on your PC screen when finishing the Print, PC Fax, Copy, and Fax jobs.

The information displayed in the **Completion Notice** vary according to the type of job being performed.

## ■ Completion Notice

After a job completes, you will receive a notice like the illustrations shown below on the PC screen.


### Print Completion Notice

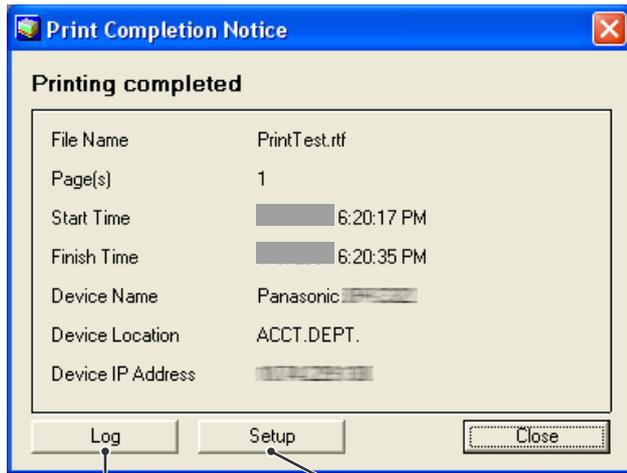

Opens **Log** window.

Opens **Setup** window.

### PC Fax Completion Notice

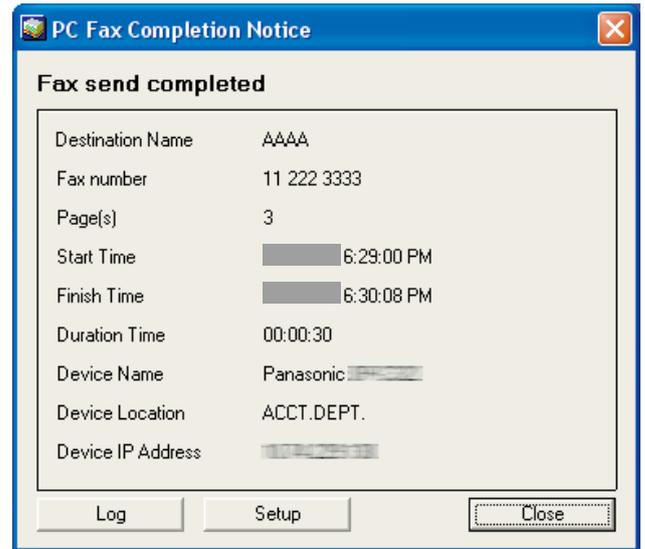

Print Operation  
(for PC)

## ■ Job Status Utility Log

To help you maintain records of the documents you send or print, the **Job Status Utility** is equipped to list the transaction result as a Log file. The latest 100 transactions are recorded on the log.

To start **Job Status Utility Log** window, click  button on the **Completion Notice** window or right-click the Job Status Utility icon  on the taskbar, and then select from the menu.




The **Job Status Utility Log** window appears.

**Note:**

When the Job Status Utility icon  is not on the taskbar, select **Programs** → **Panasonic** → **Job Status Utility** → **Job Status Utility** from the **Start** menu to activate the Job Status Utility icon.


Refreshes the Job Status Window

Opens the Select Printer Window (See Below)

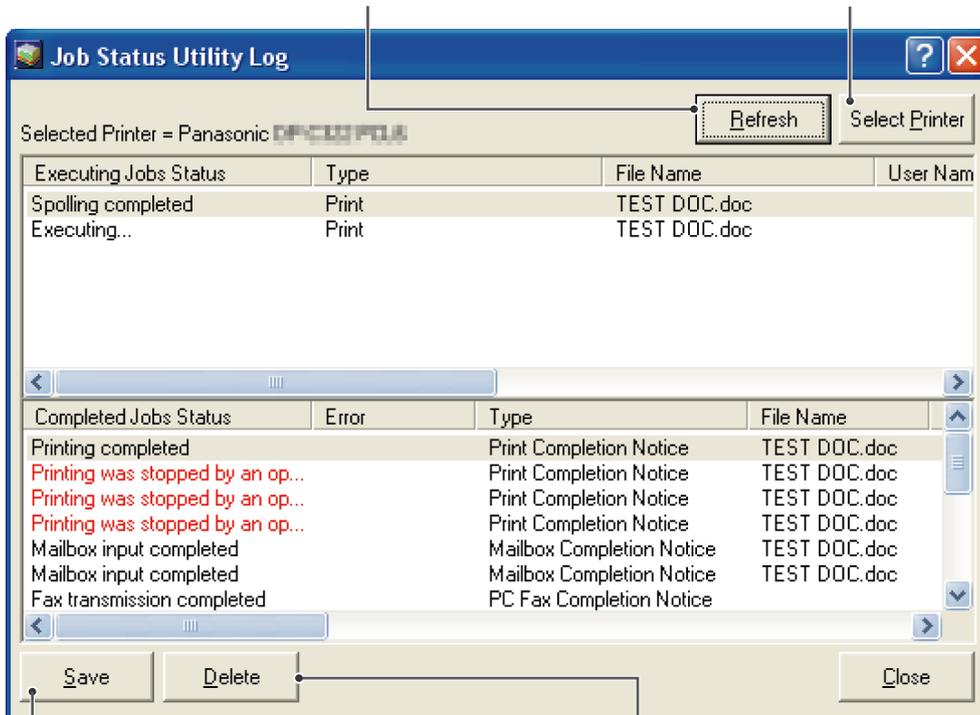

Saves the displayed Log as a CSV format file.  
(Only for Completed Job Status)

Deletes the Selected Print Jobs, or  
all Completed Jobs in the Log.

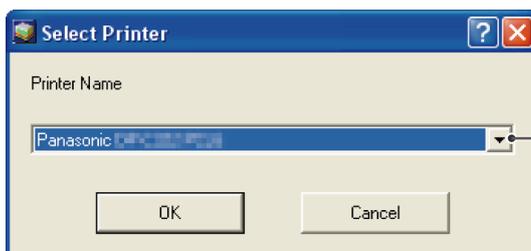

Chooses the printer name to monitor.

**NOTE**

Completion Notice does not appear if the device is connected with a USB/Parallel cable.

## ■ Setup

You may set the condition to display the **Completion Notice** window after completion of the job.


To start **Setup** window, click  button on the **Completion Notice** window, or right-click the Job Status Utility icon  on the taskbar, and then select the **Setup** from the menu.



The **Setup** window appears.

### Note:

When the Job Status Utility icon  is not on the taskbar, select **Programs** → **Panasonic** → **Job Status Utility** → **Job Status Utility** from the **Start** menu to activate the Job Status Utility icon.

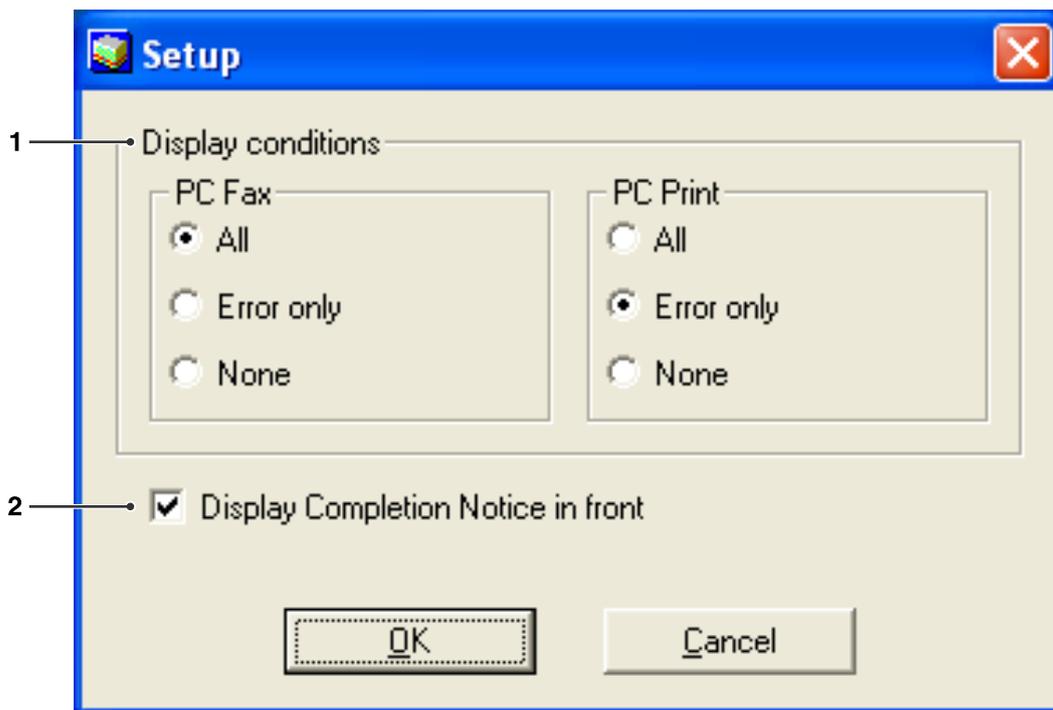

### 1. Display Conditions

Selects the condition to display the **Completion Notice** window.

<b>All</b>	Always display after each transmission.
<b>Error only</b>	Displays when an error occurs.
<b>None</b>	Do not display.

### 2. Display Completion Notice in front

Specify whether the **Completion Notice** window is displayed on the front of other windows. When this option is not selected, the **Completion Notice** window is displayed in the back of other windows. When the **Completion Notice** is displayed, the  icon on the taskbar blinks. Click the  icon to bring the **Completion Notice** to the front.

Information displayed in the Completion Notice and the Job Status Utility Log. (See page 55)

<b>Status</b>	Indicates status of the job as completed, canceled, etc...
<b>Error</b>	Indicates error information if available as information code, error message, etc...
<b>Type</b>	Indicates type of job. The Completion Notice is used in common with PC Fax job, PC Print job, Copy job, and Fax job (Sent from the device).
<b>File Name</b>	Indicates the PC printed file name.
<b>Page(s) (Print)</b>	Indicates the number of pages of PC Print job, and Copy job.
<b>Page(s) (Fax)</b>	Indicates the number of pages of PC Fax job, and Fax job (Sent from the device).
<b>Start Time</b>	Indicates the start date and time of the job. The format of the date and time depends on the setting of Windows of your PC.
<b>Finish Time</b>	Indicates the finish date and time of the job. The format of the date and time depends on the setting of Windows of your PC.
<b>Duration Time</b>	Indicates the duration time of the job. (hh:mm:ss)
<b>Fax Number/Email Address</b>	Indicates the Fax Number, or Email Address (Fax job only) of the Fax transmission.
<b>Destination Name</b>	Indicates the registered Destination Name in the fax driver's phonebook when using the phonebook of the fax driver to transmit a document.
<b>Device Name</b>	Indicates the Device Name registered in the device that is used for the fax transmission.
<b>Device Location</b>	Indicates the Device Location registered in the device that is used for the fax transmission.
<b>Device IP Address</b>	Indicates the Device IP Address that is used for the fax transmission.
<b>User Name</b>	Indicates the logon user name which is executing the current job.
<b>Machine Name</b>	Indicates the Computer Name/ IP Address that is executing the current job.

# Print Operation (for Printer)

## SD Print

The features and operations are described on the Operating Instructions for Basic Operations.

Refer to **Printing from SD Memory Card / PC** in the Operating Instructions (For Basic Operations) of the provided booklet.

---

**NOTE**

*SD Print is not available for DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960.*

# Mailbox

To save printed documents into the printer's mailbox for later printing, the printer must be equipped with the optional Hard Disk Drive. Saved documents can be printed from the printer's control panel. The following three types of mailbox printing are available.

**Check then Print** : Saves print data in the printer, in the mailbox specified by the **User ID**. Allows you to print one proof set, before proceeding to print a large multi-set with various settings. The document data will be deleted from the printer after printing.

**Mailbox** : Saves print data in the printer, in the mailbox specified by the **User ID**. The **User ID** must be entered to print documents saved in the Mailbox. The document data will remain in the printer until it is deleted.

**Secure Mailbox** : Saves print data in the printer, in the mailbox specified by the **User ID**. The **User ID** and **Password** must be entered to print confidential documents saved in the Secure Mailbox. The document data will remain in the printer until it is deleted.

## NOTE

- This feature is available if the **Hard Disk Drive Unit** or **SD Memory Card** is installed in the printer unit, and the **Hard Disk Drive Unit** or **SD Memory Card** is set to **Installed** in **Device Settings** or **Device Options** tab of the printer driver. See "**Device Tab**" on page 43.
- Turning the Power Switch **OFF** while a print file is being stored into the Mailbox/Secure Mailbox may cause all files in it to be lost.

## ■ Saving a Print Job (from a PC)

- 1 Select **Print** in the **File** menu of the application.
- 2 Click the  button in the **Print** dialog box.
- 3 Click the **Job Type** tab and check the **Job Type** check box.
- 4 Select the following **Job Type** icons and enter the relevant **Job Information**.

	<b>Check then Print</b>
	<b>Mailbox</b>
	<b>Secure Mailbox</b>

**Note:**

See "**Job Type Tab**" on page 24 for more detailed information.

Saves print data in the printer, in the mailbox specified by the **User ID**.

- 5 Click the  button, and then the  button to save the document data. The first proof set will start printing if **Check then Print** is selected.

# Mailbox

## (For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265)

### ■ Printing or Deleting Mailbox Data

1 Press the **Print** key if set in other function mode.



2 **Print** display appears on the printer control panel. Enter the mailbox User ID number (up to 8-digit).




3 Select **"OK"**.



4 The total number of saved jobs in each mailbox is displayed.

Select the desired mailbox.

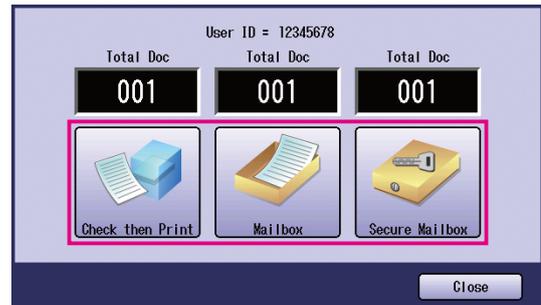


5 The display shows the saved print jobs in the selected mailbox.


Choose the job you want to print, and select **"Print"** or **"Delete"**.

<b>Select All button</b>	Selects all print jobs. (Mailbox only)
<b>Close button</b>	Closes the mailbox display.

#### Check then Print:

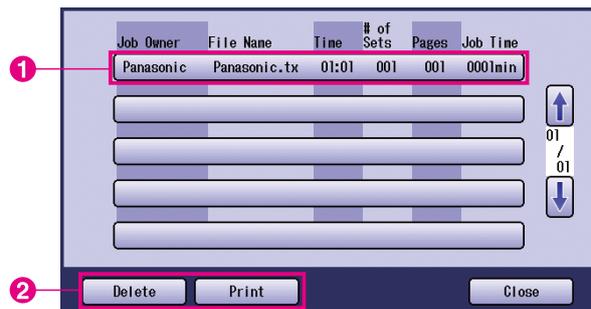


#### Mailbox:

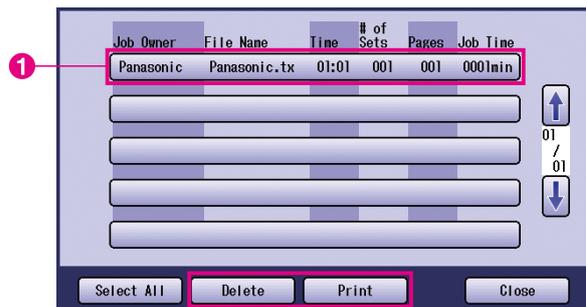

Continue on the next page...

### Secure Mailbox:

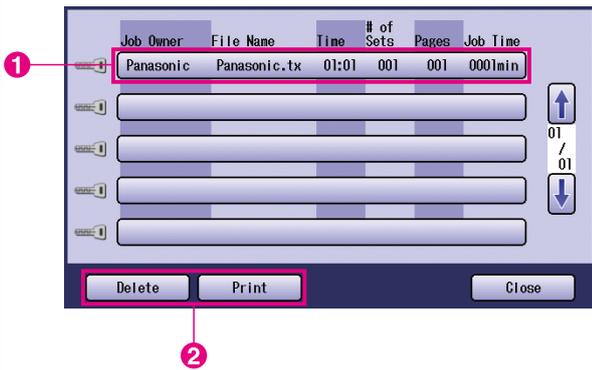


- 6 Secure Mailbox only**  
Password display appears if **Secure Mailbox** is selected.  
Enter the **Password**, and then select **"OK"**.




- 7 Check then Print, Mailbox, or Secure Mailbox**

Select whether to delete the print job after printing.

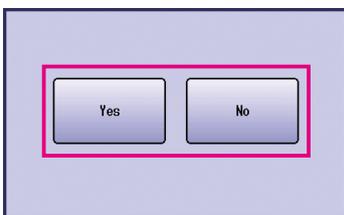

- 8 Check then Print only**  
The number of copies is displayed.  
Enter the number of copies, and then select **"OK"** to start printing.

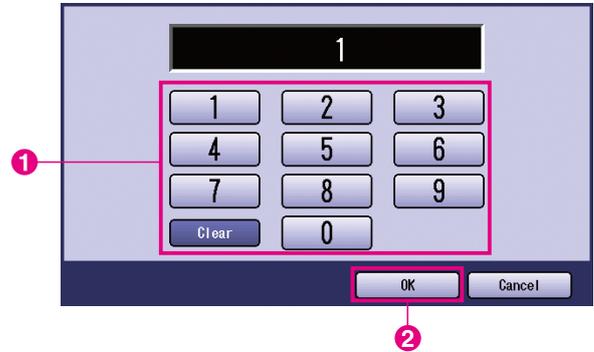

**Note:**  
After having finished printing the **Check then Print** job, it will be removed from the printer's hard disk drive.

# Job Control (Output Queue) (For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265)

The **Job Control** menu of the printer control panel contains four buttons with the following functions.

**On Line** button : Turns the printer on-line.

**Off Line** button : Turns the printer off-line.

**Cancel Print** button : Stops the current print job and deletes the job from the output queue.

**Output Queue** button : Checks the current print jobs.

This section describes how to use "**Output Queue**" to perform operations on the print jobs in the output queue.


- 1 Press the **Print** key if set to other function mode.




- 2 **Print** display appears on the printer control panel.  
Select "**Job Control**".




- 3 Select "**Output Queue**".

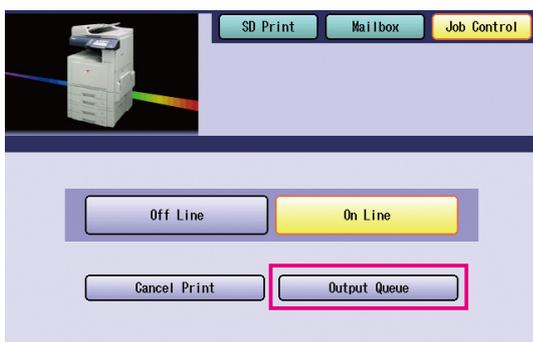

- 4 Displays a list of all pending output jobs that are usually processed on a first come first served basis.  
Select "**Print**".

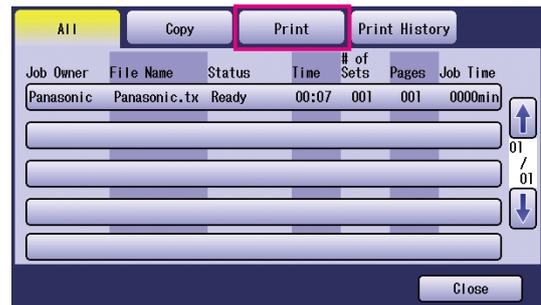

- 5 Enter the password (4-digit), and then select "**OK**".

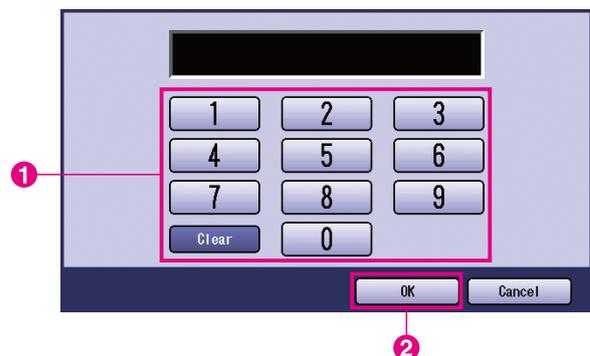

Continue on the next page...


- 6 Displays a list of current and pending **Print** jobs. Select the print job you want to manage, and choose one of the following tasks to perform.




<b>Select All button</b>	Selects all print jobs.
<b>Delete button</b>	Deletes the selected job from the <b>Output Queue</b> .
<b>Priority button</b>	Set or change the printing order of the selected job(s) in the <b>Output Queue</b> .
<b>Close button</b>	Close the <b>Output Queue</b> display.

# Mailbox (For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330)

- 1 Press the **Print** key on the Control Panel.
- 2 **Print** display appears on the Control panel. Enter the mailbox User ID number (up to 8-digit).

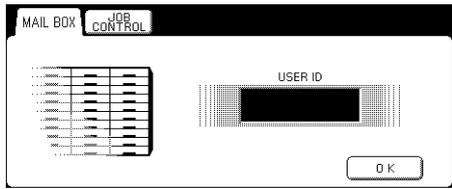


- 3 Select **"OK"**.
- 4 The total number of saved jobs in each mailbox is displayed. Select the desired mailbox.

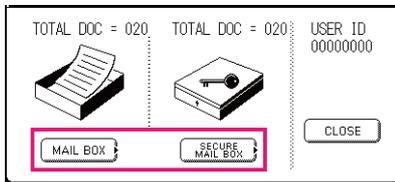


- 5 The display shows the saved print jobs in the selected mailbox. Choose the job you want to print, and select **"PRINT"** or **"DELETE"**.

<b>SELECT ALL button</b>	Selects all print jobs. (Mailbox only)
<b>CLOSE button</b>	Closes the mailbox display.

### Mailbox:

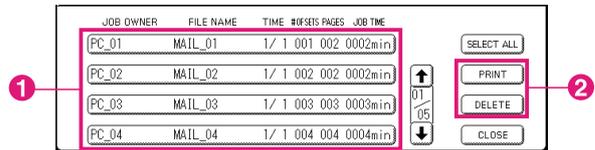


### Secure Mailbox:

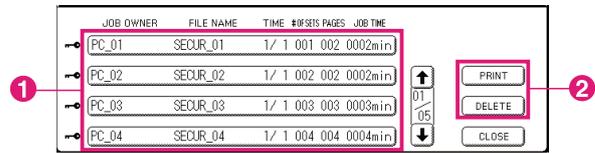


- 6 **Secure Mailbox only**  
**Password** display appears if **Secure Mailbox** is selected. Enter the **Password**, and then select **"OK"**.

# Job Queue (For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330)


1 Press the **Print key** on the Control Panel, then select the **"PRINT JOB QUEUE"** in the **Job Control Tab**.

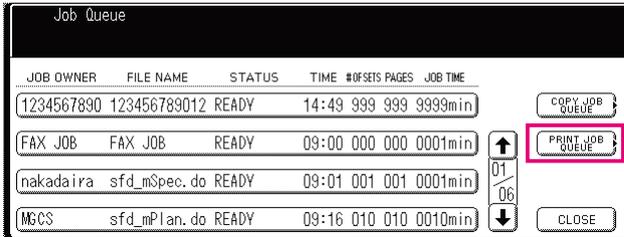

2 Enter the password (4-digit), and then select **"OK"**.

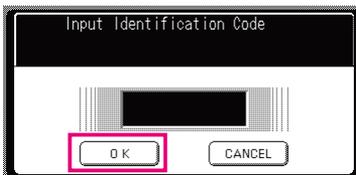

3

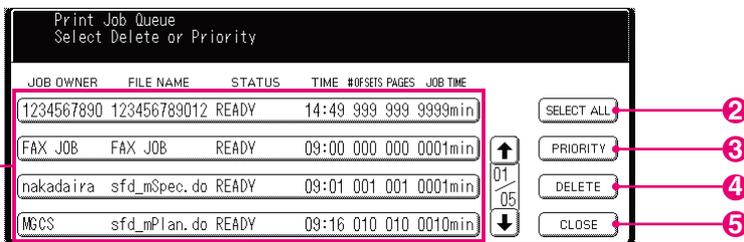

1. **Print Jobs**  
Indicates all current and/or pending print jobs.
2. **SELECT ALL button**  
Selects all print jobs.
3. **PRIORITY button**  
Set or change the print job(s) priority. This feature is only available if the Hard Disk Drive Unit is installed.

4. **DELETE button**  
Deletes print job(s).
5. **CLOSE button**  
Closes this screen.

# MailBox (For DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960)

Follow the procedure below to print a file from a Mailbox on your machine.

- 1 Print a file to the Mailbox using the User ID.  
(Up to 20 mailboxes per each User ID)

- 2 Press  .

- 3 Press    .

- 4 Enter the User ID (up to 8 digits) from the keypad  
(Ex: 12345678)

- 5 Press  .

- 6  or  repeatedly until the display shows the file you want to print.

- 7 Press  .

- 8  to print the displayed file.

- 8  to print all files for the User ID.

- 9 Your machine will print the file. The file is automatically deleted after printing.

PRINTER ON LINE

ENTER USER ID  
■

ENTER USER ID  
12345678

USE ∨ OR ∧ TO SCROLL  
TOTAL DOC=nn

(Panasonic) 10:11  
(Pana.doc)

1:PRINT 2:ALL PRINT  
3:DELETE 4:ALL DEL.

\* PRINTING \*  
PC DATA

PRINTER ON LINE

Print Operation  
(for Printer)

## ■ Deleting from the Mailbox

Follow the procedure below to delete a file from the Mailbox.

1 Press  .

PRINTER ON LINE

2 Press    .

ENTER USER ID  
■

3 Enter the User ID (up to 8 digits) from the keypad  
(Ex: 12345678)

ENTER USER ID  
12345678

4 Press  .

USE ∨ OR ∧ TO SCROLL  
TOTAL DOC=nn

5  or  repeatedly until the display shows the file you want to delete.

(Panasonic) 10:11  
(Pana.doc)

6 Press  .

1:PRINT 2:ALL PRINT  
3:DELETE 4:ALL DEL.

7  to delete the displayed file.

DELETE DOCUMENT?  
1:YES 2:NO

 to delete all files for the User ID.

8 Press   .

PRINTER ON LINE

### Note:

1. Turning the Power Switch OFF while a print file is being stored (DATA indicator lamp is flashing) into the Mailbox or Secure Mailbox may cause all files to be lost.
2. When using the Mailbox or Secure Mailbox feature, there is a limitation of 20 mailboxes per User ID. If more than 20 print jobs are sent to an User ID, jobs will be deleted from the memory. Jobs will also be deleted if the Hard Disk Drive Unit is full.

# Secure Mailbox (For DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960)

Follow the procedure below to print a file from a Secure Mailbox on your machine.

- 1 Print a file to the Secure Mailbox using the User ID and a Password.  
(Up to 20 mailboxes per each User ID)
- 2 Press  .
- 3 Press    .
- 4 Enter the User ID (up to 8 digits) from the keypad  
(Ex: 12345678)
- 5 Press  .
- 6  or  repeatedly until the display shows the file you want to print.
- 7 Press  .
- 8 Enter the Password (4 digits) from the keypad.
- 9 Press  .
- 10 Press  .
- 11 Your machine will print the file. The file is automatically deleted after printing.

PRINTER ON LINE

ENTER USER ID  
■

ENTER USER ID  
12345678

USE ∨ OR ∧ TO SCROLL  
TOTAL DOC=nn

(Panasonic) 10:11  
(Pana.doc)

ENTER PASSWORD  
■

ENTER PASSWORD  
\*\*\*\*

SECURE MAILBOX  
1:PRINT 2:DELETE

\* PRINTING \*  
PC DATA

PRINTER ON LINE

Print Operation  
(for Printer)

## ■ Deleting from the Secure Mailbox

Follow the procedure below to delete a file from a Secure Mailbox on your machine.

- 1 Press  .
- 2 Press    .
- 3 Enter the User ID (up to 8 digits) from the keypad  
(Ex: 12345678)
- 4 Press  .
- 5  or  repeatedly until the display shows the file you want to delete.
- 6 Press  .
- 7 Enter the Password (4 digits) from the keypad.
- 8 Press  .
- 9 Press  .
- 10 Press   .

PRINTER ON LINE

ENTER USER ID  
■

ENTER USER ID  
12345678

USE  $\nabla$  OR  $\blacktriangle$  TO SCROLL  
TOTAL DOC=nn

(Panasonic) 10:11  
(Pana.doc)

ENTER PASSWORD  
■

ENTER PASSWORD  
\*\*\*\*

SECURE MAILBOX  
1:PRINT 2:DELETE

DELETE DOCUMENT?  
1:YES 2:NO

PRINTER ON LINE

## Job Queue (For DP-8020E/8020P/8016P)

Follow the procedure below to verify the print jobs.

1 Press .

PRINTER ON LINE

2 Press  ③  ③.

3:JOB QUEUE ?  
PRESS SET TO SELECT

3 Press .

USE ∨ OR ^ TO SCROLL  
TOTAL DOC=nn

4  or  repeatedly until the display shows the file you want to print.

(Panasonic) 10:11  
(Pana.doc)

5 Press .

ENTER PASSWORD  
■

6 Enter the Password (3 digits) from the keypad.

ENTER PASSWORD  
\*\*\*

7 Press .

1:PRIORITY 2:DELETE  
3:DELETE ALL

8 ① to change the print job priority.  
② to delete the print file.  
③ to delete all print files.

Ex: ②

DELETE DOCUMENT?  
1:YES 2:NO

9 Press ① .

PRINTER ON LINE



## Specifications (For DP-8060/8045/8035)

Printing Speed (A4/Letter size plain paper, simplex printing)	<b>DP-8060</b> : 60 sheets/minute <b>DP-8045</b> : 45 sheets/minute <b>DP-8035</b> : 35 sheets/minute
Resolution (dots per inch)	300 x 300, 600 x 600, 1200 (Equivalent) x 600
Interface	Parallel Port Ethernet (10Base-T/100Base-TX)
Operating System Support	Windows 2000, Windows XP, Windows Server 2003, Windows Vista
Printer Working Memory	50MB

## Specifications (For DP-8032/8025)

Printing Speed (A4/Letter size plain paper, simplex printing)	<b>DP-8032</b> : 32 sheets/minute <b>DP-8025</b> : 25 sheets/minute
Resolution (dots per inch)	300 x 300, 600 x 600, 1200 (Equivalent) x 600
Interface	USB Port Ethernet (10Base-T/100Base-TX)
Operating System Support	Windows 2000, Windows XP, Windows Server 2003 , Windows Vista
Printer Working Memory	50MB

## Specifications (For DP-3030/2330)

Printing Speed (A4/Letter size plain paper, simplex printing)	<b>DP-3030</b> : 30 sheets/minute <b>DP-2330</b> : 23 sheets/minute
Resolution (dots per inch)	300 x 300, 600 x 600, 1200 (Equivalent) x 600
Interface	USB Port Ethernet (10Base-T/100Base-TX)
Operating System Support	Windows 2000, Windows XP, Windows Server 2003, Windows Vista
Printer Working Memory	50MB

## Specifications (For DP-8020E/8020P/8016P)

Printing Speed (A4/Letter size plain paper, simplex printing)	<b>DP-8020E</b> : 20 cpm (Letter size) <b>DP-8020P</b> : 20 cpm (Letter size) <b>DP-8016P</b> : 16 cpm (Letter size)
Resolution (dots per inch)	150 x 150, 300 x 300, 600 x 600
Interface	USB Port Ethernet (10Base-T/100Base-TX)
Operating System Support	Windows 2000, Windows XP, Windows Server 2003, Windows Vista
Printer Working Memory	20MB

## Specifications (For UF-8200/7200, UF-8300/7300, UF-7960)

<b>Printing Speed</b> (A4/Letter size plain paper, simplex printing)	<b>UF-8200</b> : 19 sheets/minute <b>UF-7200</b> : 19 sheets/minute <b>UF-8300</b> : 18 sheets/minute <b>UF-7300</b> : 18 sheets/minute <b>UF-7960</b> : 19 sheets/minute
<b>Resolution (dots per inch)</b>	300 x 300, 600 x 600
<b>Interface</b>	USB 1.1 Ethernet (10Base-T/100Base-TX)
<b>Operating System Support</b>	Windows 2000, Windows XP, Windows Server 2003, Windows Vista
<b>Printer Working Memory</b>	20MB

# Memo

# Troubleshooting

## Printing Operation Failure

If the printing operation fails, check the following items first:

- Ensure the connecting cable (USB, Parallel, or Ethernet LAN cable) is properly connected.
- Power of the device is turned ON.
- Paper is loaded properly in the device.
- An error message is not displayed on the device. (See Note)

The above points can be verified by printing a test page. Refer to the following pages for the procedures on test page printing:

Windows 2000/Windows XP/Windows Server 2003/Windows Vista    [General Tab]    (See page 9)

---

**NOTE**

*The status of the devices can be verified by the **Device Monitor**.  
Refer to the Operating Instructions (For Device Monitor).*

## Documents Not Printing Correctly (For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265)

Problem	Possible Cause / Solution(s)
Incorrect printing position or print is missing at the edge.	<ul style="list-style-type: none"> <li>• Paper size or printing orientation is mismatched between the application settings and the printer driver settings - Specify the settings again.</li> <li>• The specified paper has not been loaded into the device - Check the settings again or load the appropriate paper.</li> <li>• The document margin is not sufficient. (See page 82)</li> </ul>
Characters and symbols not used in documents are printed.	Verify that the correct machine has been selected by users as the printer driver.
Printing operation takes excessive time.	The wait time for printing operations depends on the spool settings.
Although print data is transferred to the device, it is not printed.	<ul style="list-style-type: none"> <li>• Make sure the printer is Online.</li> <li>• Make sure the USB printer cable is connected properly.</li> <li>• Restore the power if the On line LED is Off even if the USB printer cable is connected.</li> </ul>
Printing stops in the middle of the run.	<ul style="list-style-type: none"> <li>• Check whether there is a Network problem.</li> </ul>
Document is not printed from the Multi-Purpose tray (Sheet Bypass).	<ul style="list-style-type: none"> <li>• Verify the Paper Size set on the Multi-Purpose tray (Sheet Bypass).</li> <li>• Set the Paper Size by the following procedures.               <ol style="list-style-type: none"> <li>1. Press the <input type="button" value="Copy"/> key.</li> <li>2. Select "<b>Paper/Output Tray</b>".</li> <li>3. Select "<b>Change Size/Media</b>".</li> <li>4. Select the paper size, and then select "<b>OK</b>".</li> </ol> </li> </ul> <p><b>Note:</b> Select "<b>Auto</b>" in step 4 if the following paper size is loaded on the Multi-Purpose tray (Sheet Bypass). The Paper Size is automatically set properly.</p> <p><b>For USA and Canada users</b> : Ledger, Legal, Letter, Invoice  <b>Except for USA and Canada users</b> : A3, B4, FLS, A4, A5</p>
Incorrect Output Image.	<ul style="list-style-type: none"> <li>• When the custom paper size is set in the Basic Tab, configure the paper in portrait format.</li> </ul>

## Documents Not Printing Correctly (For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960)

Problem	Possible Cause / Solution(s)
Characters are not printed in the correct positions or the characters near the edges of the page are missing.	<ul style="list-style-type: none"> <li>• Check and specify the paper size and the orientation settings in the printer driver to coincide with the application.</li> <li>• The characters are set outside the printing area of the machine.</li> </ul>
Incorrect font type.	<ul style="list-style-type: none"> <li>• Check whether the selected font is installed on the PC.</li> <li>• Disable the "Use Device Fonts" on the <b>Font</b> dialog box. ( In the Quality tab of the printer properties dialog box.)</li> </ul>
Printing stops in the middle of the run.	<ul style="list-style-type: none"> <li>• Check whether there is a Network problem.</li> </ul>
Although print data is transferred to your machine, it does not print.	<ul style="list-style-type: none"> <li>• Make sure the printer is online.</li> <li>• Make sure the machine is not in the <b>Shutdown Mode</b>. Press <b>ENERGY SAVER</b> key to return to standby mode. See the Operating Instructions for Copy and Function Parameters for details.</li> <li>• Make sure the Printer cable is connected properly.</li> <li>• Restore the power if the On line LED is Off even if the USB printer cable is connected.</li> </ul>
Incorrect Output Image.	<ul style="list-style-type: none"> <li>• Set <b>Raster</b> for the <b>Graphics Mode</b> in the <b>Quality</b> Tab. (For PCL 6 Emulation Printer Driver.)</li> <li>• When the custom paper size is set in the Basic Tab, configure the paper in portrait format.</li> </ul>
Printing operation takes excessive time.	<p>The wait time for printing operations depends on the spool settings.</p> <ul style="list-style-type: none"> <li>• Reference : Windows 2000/Windows XP/Windows Server 2003/Windows Vista [Advanced Tab]</li> </ul>
Paper exits from the unexpected paper tray. (For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330 only.)	<p>If the paper runs out from the paper tray specified by the user, the machine automatically switches to the paper tray which contains the same paper size by default.</p> <p>To disable the automatic paper tray select function:</p> <ul style="list-style-type: none"> <li>• In the Function Mode of the Main Unit, set [<b>Printer Settings</b>] → [<b>No. 04 Auto Tray Selection</b>] to <b>OFF</b>. (For Standard Printer Driver.)</li> <li>• Set <b>Change Paper Tray</b> in the <b>Device Tab</b> to the <b>Specified Tray</b> (See Page 44). (For PCL 6 Emulation Driver.)</li> </ul>

## Error Messages Displayed on the Computer

Problem	Possible Cause / Solution(s)
Error writing to USB. Unable to write to the Specified device.	Verify that the device is connected to the computer correctly. Verify that the power of the device is turned On.
Error writing to USB. Printer timeout error occurred.	Verify that the power of the device is turned On. Excessive data volume or number of pages may overflow the device's memory, disabling data reception. Increase the timeout setting value in properties (for transmission retry).
Printing is disabled due to an error in the current printer settings.	Mismatch in settings such as paper size or printing orientation exist between the application and the printer driver. Correct the settings.

## Error Messages Displayed on Your Machine (For DP-C322/C262, DP-C354/C323/C264/C263/C213, DP-C405/C305/C265)

If a document does not print, an error may have occurred. From the error messages displayed on the Control Panel, it is possible to identify what caused the problem, and how the problem can be rectified.

**Checking Error Messages:** Press the Print key, select the **Job Control** button and the **Output Queue** button. Then, select the **Print History** tab. The error message(s) are shown on the Status column.

Once you identify the error message, check below for the cause and solution for the error.

Job Owner	File Name	Status	Time
Panasonic	Panasonic.txt	Mailbox Success	14:38
Panasonic	Panasonic.txt	Completed	14:36
Panasonic	Panasonic.txt	Print Canceled	14:34
12345678	00000000	Completed	09/05
12345678	00000000	Completed	08/30


Error Messages	Possible Cause	Solution(s)
Print Parameter Error (001)	The Duplex Unit does not function properly.	Contact to the Panasonic Authorized Dealer to repair your machine.
Print Parameter Error (002)	Specified a <b>Paper Source (Basic tab)</b> that is not installed on your machine.	<ul style="list-style-type: none"> <li>Verify the settings on the <b>Device</b> tab.</li> <li>Click the <b>Auto Configuration</b> button to configure the settings properly when your machine is connected to the network.</li> <li>When your machine is connected with USB cable, set the <b>Number of Paper Tray</b> on the <b>Device</b> tab correctly.</li> </ul>
Print Parameter Error (004) Print Parameter Error (005)	Specified the <b>Output Tray (Output tab)</b> to <b>Finisher</b> . However, the Finisher Unit is not installed on the machine. Specified the <b>Sort Method</b> to Shift ( <b>Output tab</b> ), or specified the position of the staple. ( <b>Output tab</b> )	<ul style="list-style-type: none"> <li>Verify the settings on the <b>Device</b> tab.</li> <li>Click the <b>Auto Configuration</b> button to configure the settings properly when your machine is connected to the network.</li> <li>When your machine is connected with USB cable, set the <b>Finisher</b> on the <b>Device</b> tab correctly.</li> </ul>

Error Messages	Possible Cause	Solution(s)
Print Parameter Error (006)	Specified the hole punch position ( <b>Output</b> tab). However, the Punch Unit is not installed on the machine.	<ul style="list-style-type: none"> <li>• Verify the settings on the <b>Device</b> tab.</li> <li>• Click the <b>Auto Configuration</b> button to configure the settings properly when your machine is connected to the network.</li> <li>• When your machine is connected with USB cable, set the <b>Punch Unit</b> on the <b>Device</b> tab correctly.</li> </ul>
Print Parameter Error (101)	Specified a Paper Source that is unable to print in Duplex Mode. ( <b>Basic</b> Tab) (Duplex printing is not possible from the tray set with A5 in Portrait format)	<ul style="list-style-type: none"> <li>• Specify the tray set with the A5 in Landscape format.</li> <li>• Select <b>Automatically Select</b> on the <b>Paper Source</b> menu.</li> </ul>
Print Parameter Error (104)	Specified a <b>Paper Source</b> that is unable to shift sort. ( <b>Basic</b> Tab & <b>Output</b> Tab) - Only when 1 Bin Finisher is in use. <b>DA-FS402</b> : DP-C405/C305/C265 <b>DA-FS350</b> : DP-C354/C323/C264/C263/C213 <b>DA-FS320</b> : DP-C322/C262	<ul style="list-style-type: none"> <li>• Click the <b>Auto Configuration</b> button to configure the settings properly when your machine is connected to the network.</li> </ul>
Print Parameter Error (106) Print Parameter Error (107)	Specified the wrong Paper Source when printing a document with stapling.	<ul style="list-style-type: none"> <li>• Verify the settings on the <b>Device</b> tab.</li> <li>• Click the <b>Auto Configuration</b> button to configure the settings properly when your machine is connected to the network.</li> <li>• When your machine is connected with an USB cable, set the <b>Finisher</b> on the <b>Device</b> tab correctly.</li> <li>• Verify whether stapling / punching is possible on the specified paper size.</li> </ul>
Print Parameter Error (108) Print Parameter Error (109)	Specified the wrong Paper Source when printing a document with punching.	<ul style="list-style-type: none"> <li>• Verify the settings on the <b>Device</b> tab.</li> <li>• Click the <b>Auto Configuration</b> button to configure the settings properly when your machine is connected to the network.</li> <li>• When your machine is connected with an USB cable, set the <b>Punch Unit</b> on the <b>Device</b> tab correctly.</li> <li>• Select <b>Automatically Select</b> on the <b>Paper Source</b> menu.</li> </ul>
Print Parameter Error (119)	Specified the wrong Media Type when printing a document with Rotate sorting.	<ul style="list-style-type: none"> <li>• Verify the Media Type setting on your machine.</li> <li>• Select the same media type on the <b>Basic</b> tab as set on your machine.</li> </ul>


# Appendix

## Printing Area

When printing to the device, there is a non-printable margin on all 4 sides.

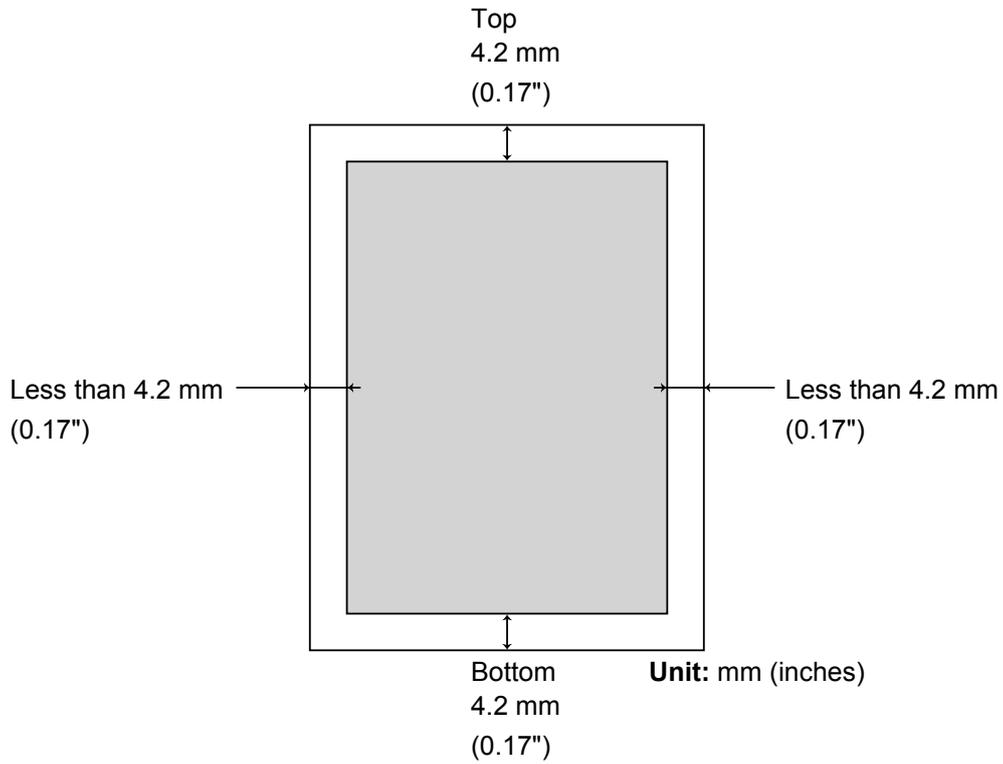

(For DP-C322/C262, DP-C354/C323/C264/C263/C213,  
DP-C405/C305/C265)

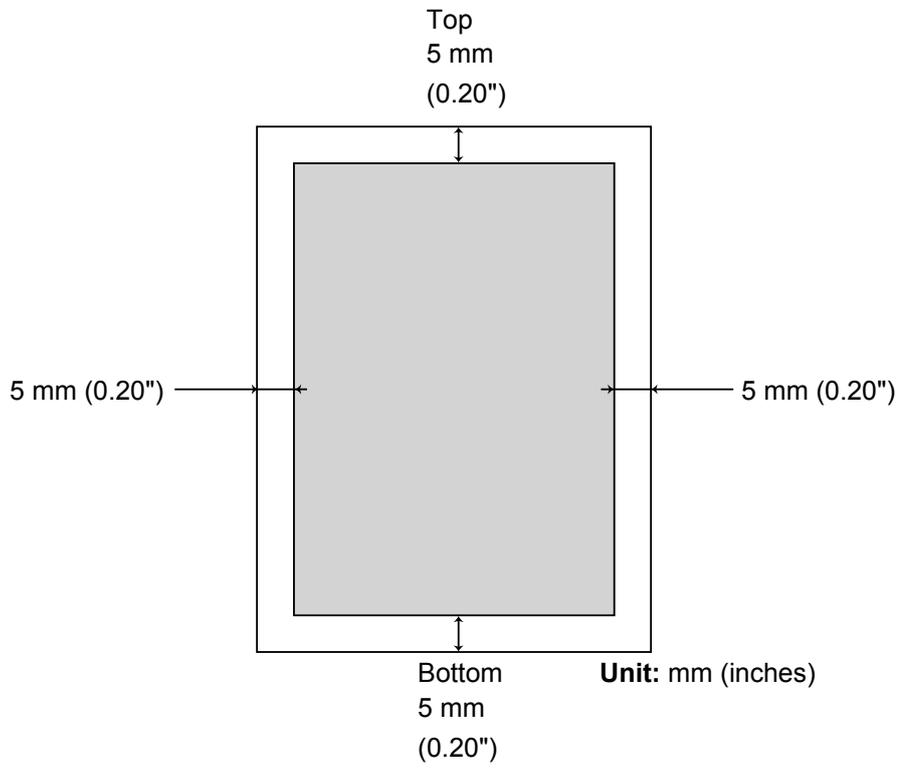

(For DP-8060/8045/8035, DP-8032/8025, DP-3030/2330, DP-8020E/8020P/8016P, UF-8200/7200, UF-8300/7300, UF-7960)

**USA Only**

## **WARRANTY**

PANASONIC COMMUNICATIONS COMPANY OF NORTH AMERICA MAKES NO WARRANTIES, GUARANTEES OR REPRESENTATIONS, EXPRESSED OR IMPLIED, TO THE CUSTOMER WITH RESPECT TO THIS PANASONIC MACHINE, INCLUDING BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

PANASONIC COMMUNICATIONS COMPANY OF NORTH AMERICA ASSUMES NO RISK AND SHALL NOT BE SUBJECT TO LIABILITY FOR ANY DAMAGE, INCLUDING, BUT NOT LIMITED TO DIRECT, INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSS OF PROFITS SUSTAINED BY THE CUSTOMER IN CONNECTION WITH THE USE OR APPLICATION OF THIS PANASONIC MACHINE. SEE YOUR DEALER FOR DETAILS OF DEALER'S WARRANTY.

For Service, Call: \_\_\_\_\_

Panasonic Communications Company of North America,  
Unit of Panasonic Corporation of North America  
One Panasonic Way  
Secaucus, New Jersey 07094  
<http://panasonic.co.jp/pcc/en/>

Panasonic Canada Inc.  
5770 Ambler Drive  
Mississauga, Ontario L4W 2T3  
<http://www.panasonic.ca>

For Customer Support (Except for  
USA and Canada Users):  
Panasonic Communications Co., Ltd.  
Fukuoka, Japan  
<http://panasonic.net>

I0305-19098 (01)  
PJQMC0348TB  
September 2008  
Published in Japan