


Windows Vista® / Windows Server® 2008 “Printer Driver Installation Guide”

* For the Windows Server 2008 users : Windows Vista screens are used in the examples where the installation process is common to the Windows Vista and the Windows Server 2008.

1

Click “Control Panel” from Windows Start menu.

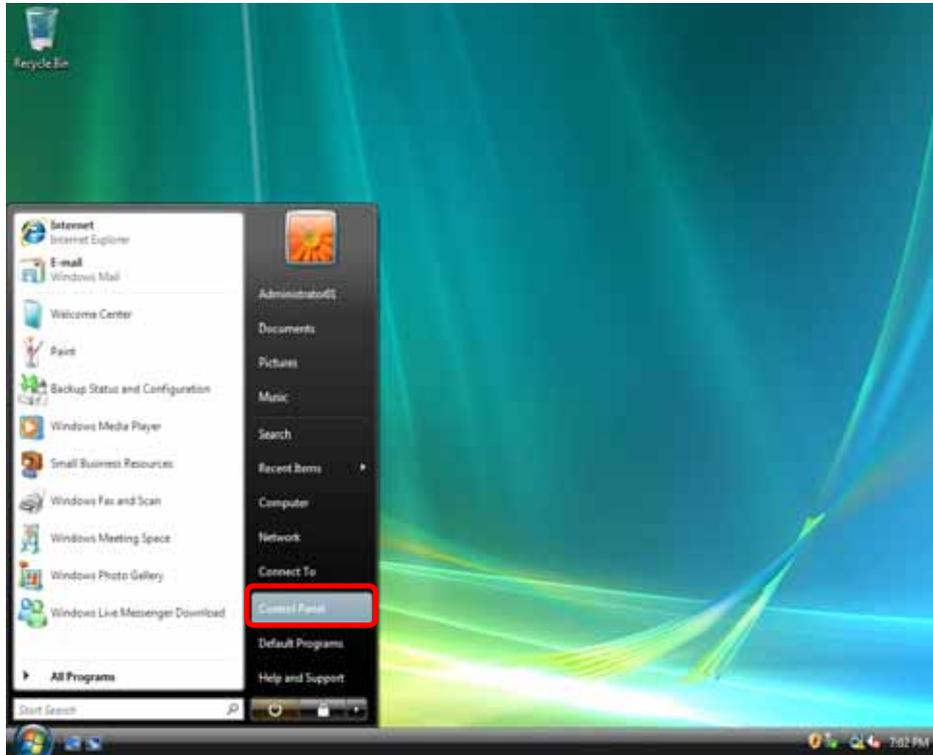


2

Opening the Printer Window

Click “Printer” from under the <Hardware and Sound> menu.


* For Classic View Click “Printers”.

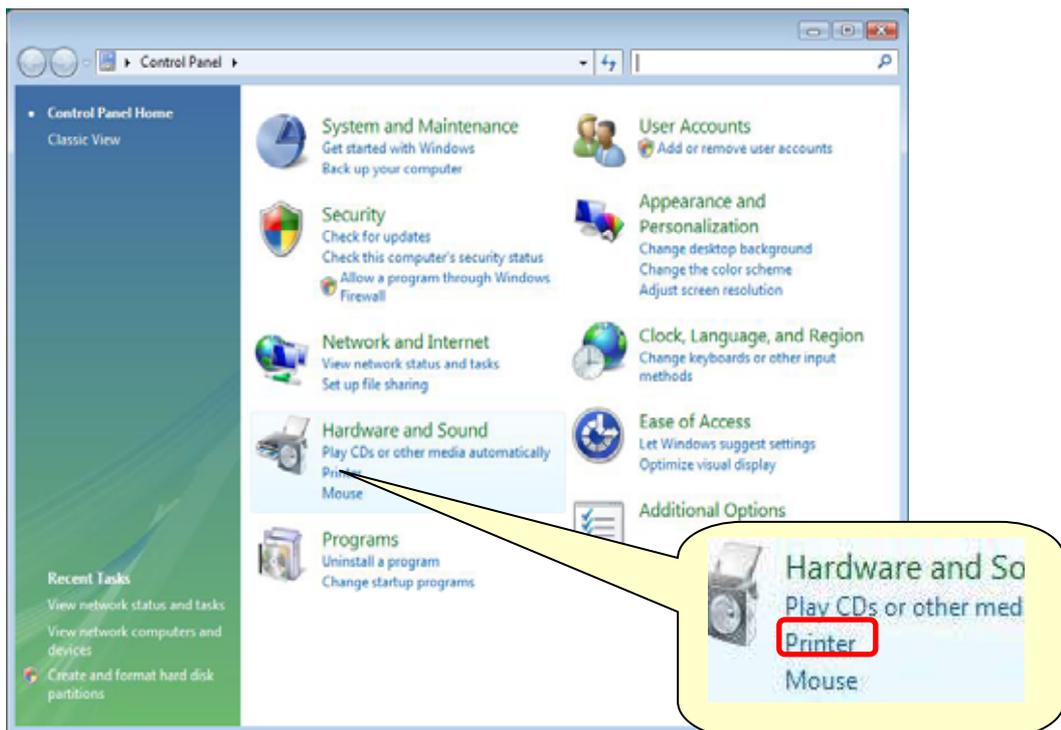

3


<< For Windows Vista >>

Click “Add a printer”.

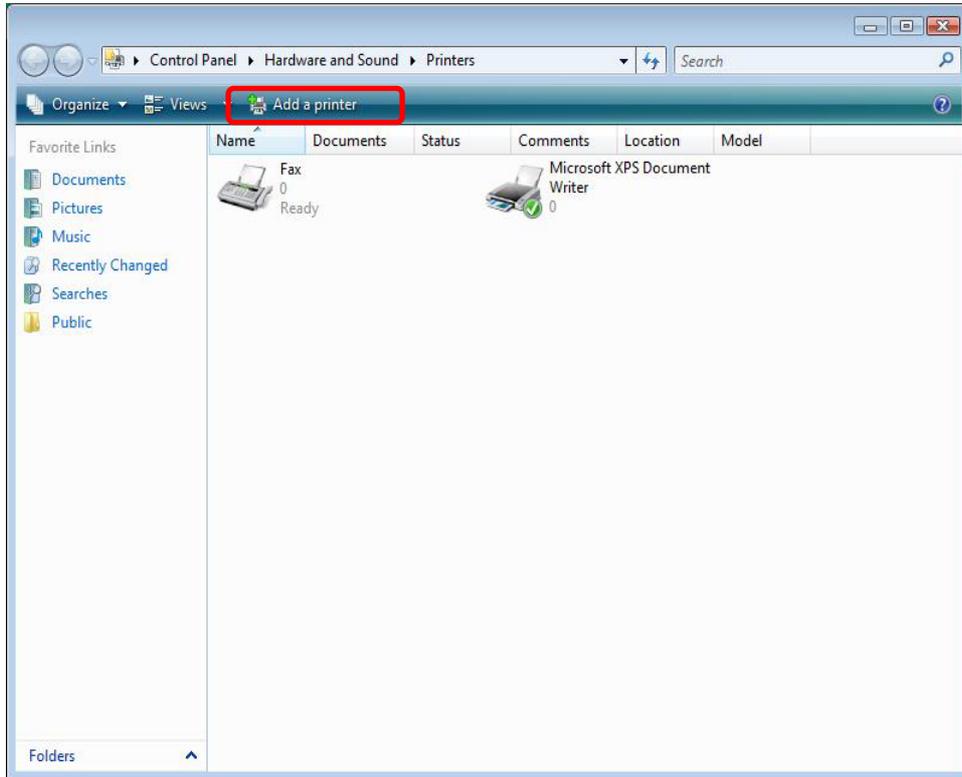


<< For Windows Server 2008 >>

Right click the mouse in the Printers window, select [Run as administrator] -> [Add Printer...].

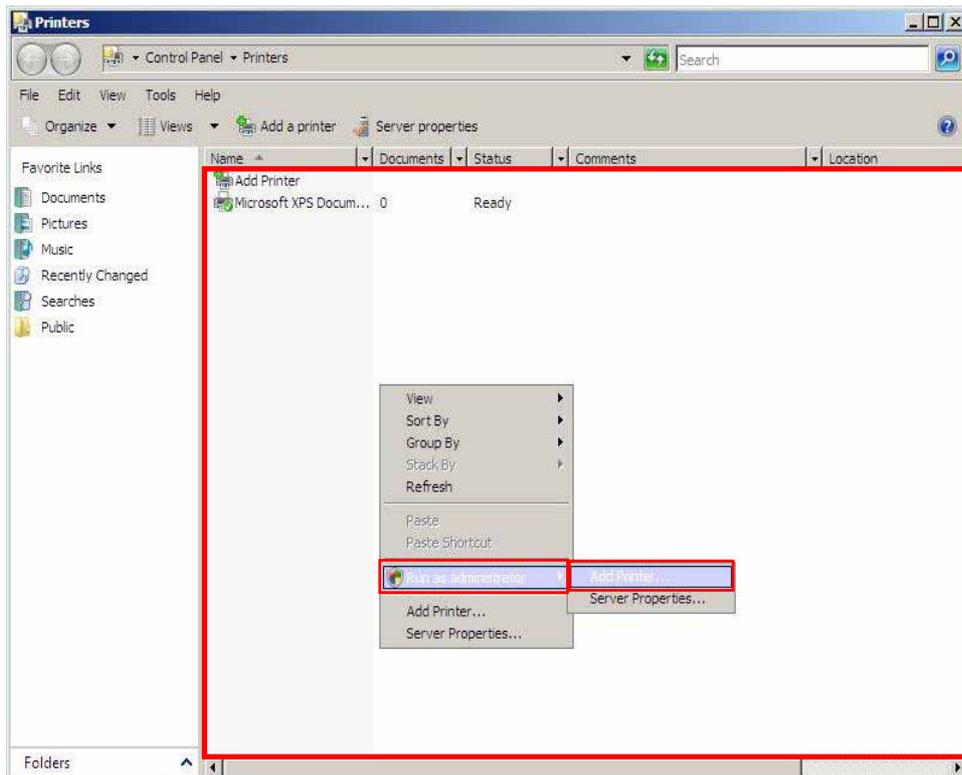

<< For Windows Server 2008 >>


If this screen appears, click “Continue” .

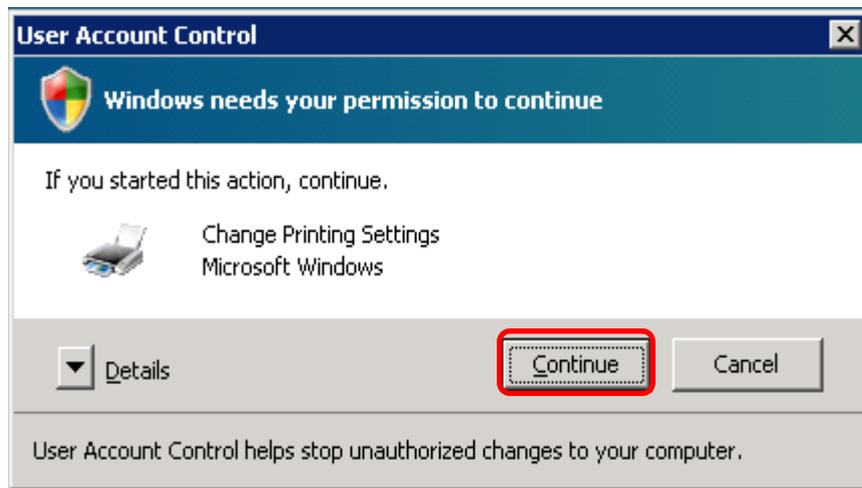

4

Add a Printer

Click “Add a local printer”.

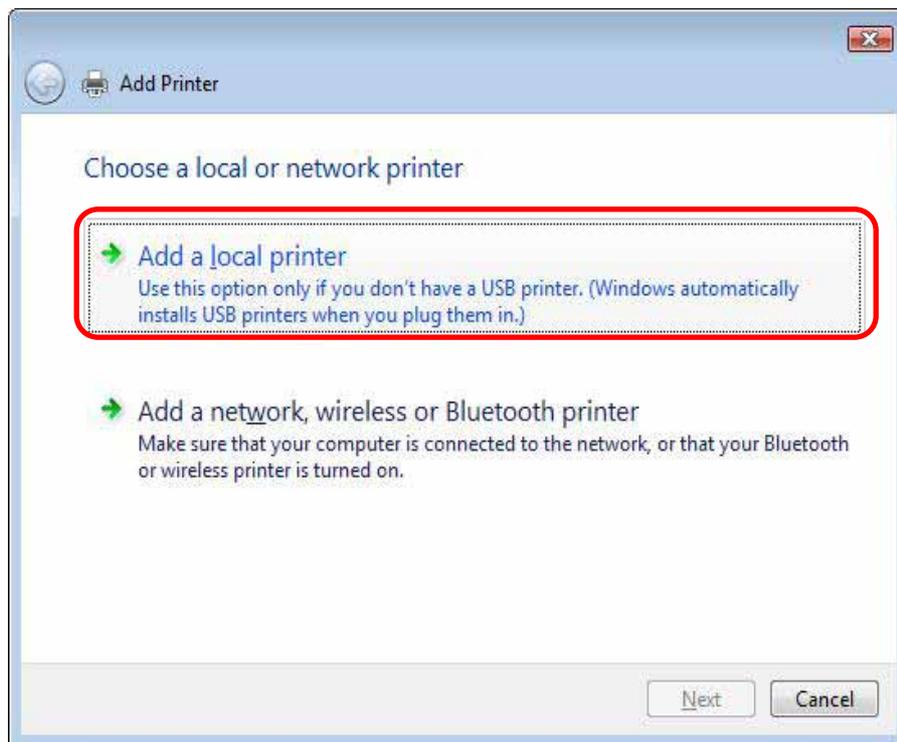


*For USB setup, see the Windows Vista® : “USB Print Driver Installation Guide”.

5

Choose a printer port

Choose “**Create a new port**” and, select “**Standard TCP/IP Port**” from the Pull-down menu, then click “**Next**”.


*For Parallel Port installation, Choose “**Use an existing port**”, and select the LPT port you want to use, then click “**Next**” and Skip to **Step 8**.

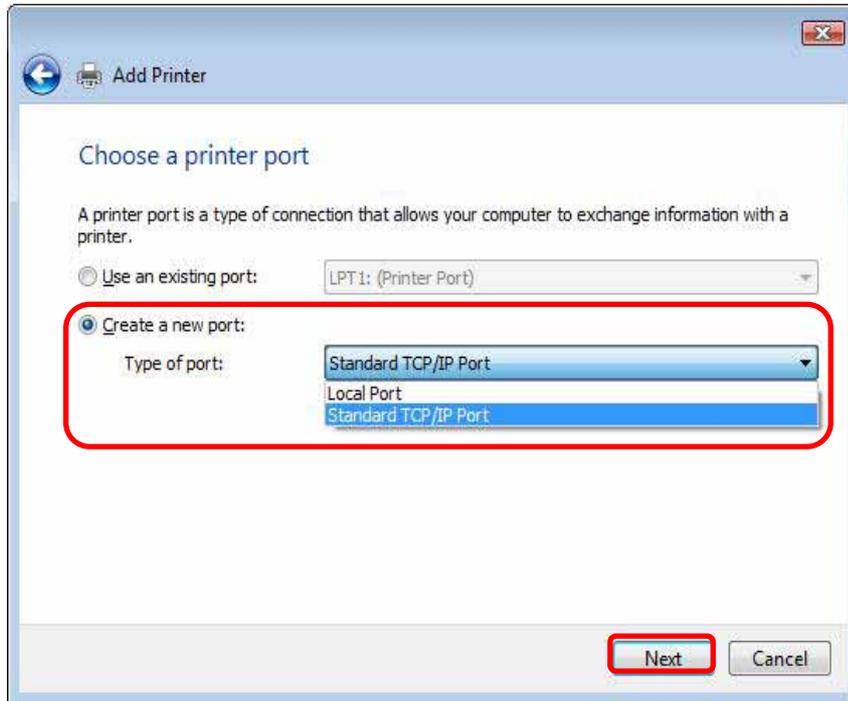

6

Add Port

Choose “**TCP/IP Device**” from <Device type>. Enter the Hostname or IP address. -After entering the Hostname or IP address, The “**Port name**” will be set automatically. Click “**Next**”.

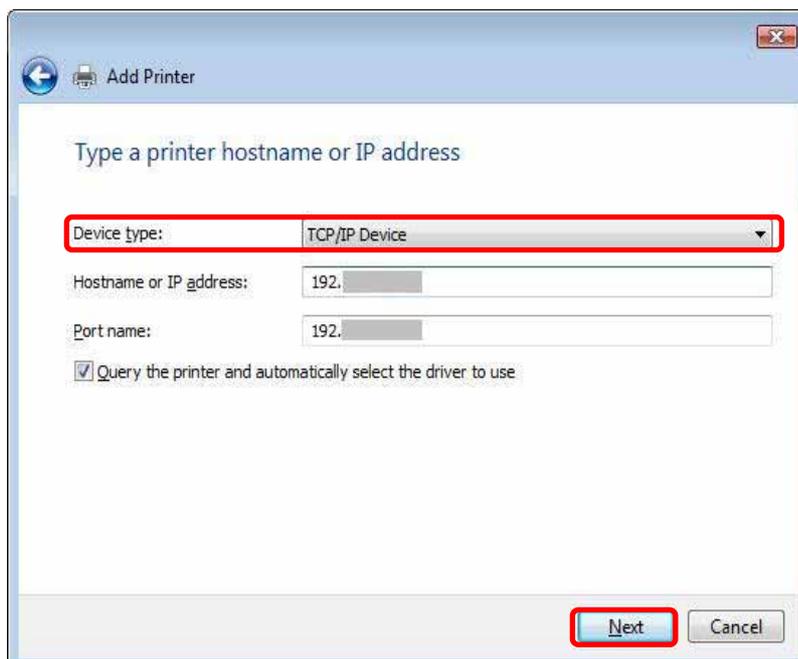


7

Following screens may appear for some Printer Drivers.
Set the Port Information according to your network environment.


- Setting the Raw port :

Select the “**Standard**” and make sure the “**Generic Network Card**” is selected from the pull-down menu, then click “**Next**”.

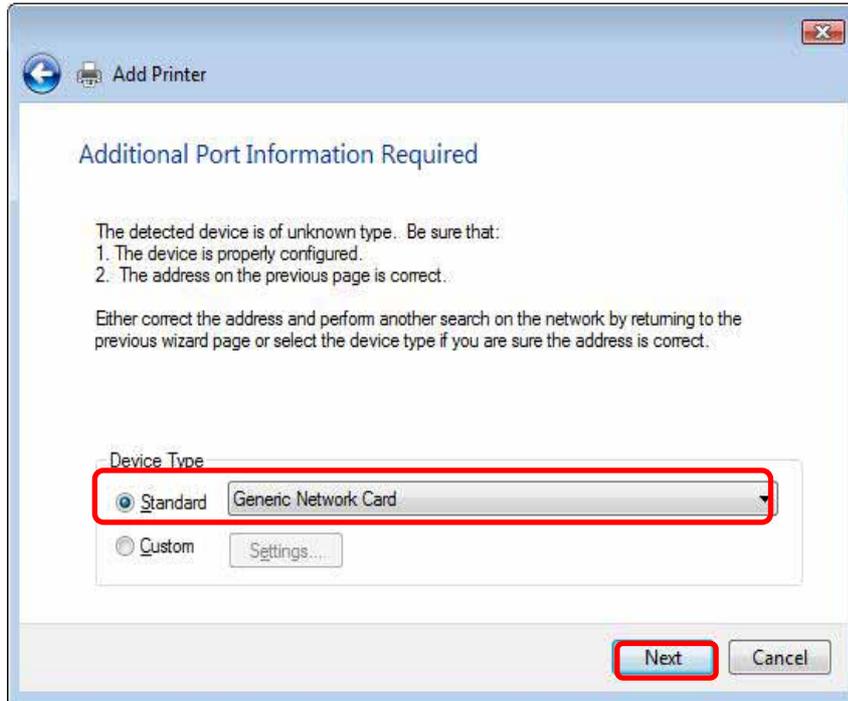


- Setting the LPR port :

Select “**Custom**” and press the “**Settings....**” button as illustrated. (See next page)
When the additional port settings are configured, click “**Next**”

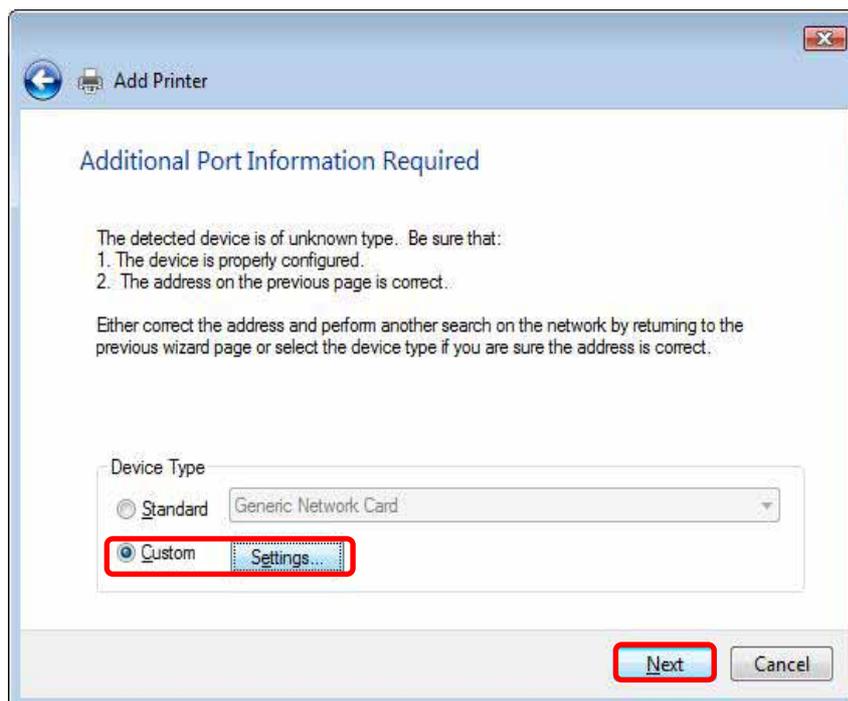


Configure Std. Port Monitor

- Choose the “LPR” protocol and enter the “Queue Name”.
- Choose “LPR Byte Counting Enabled” then click “OK”.

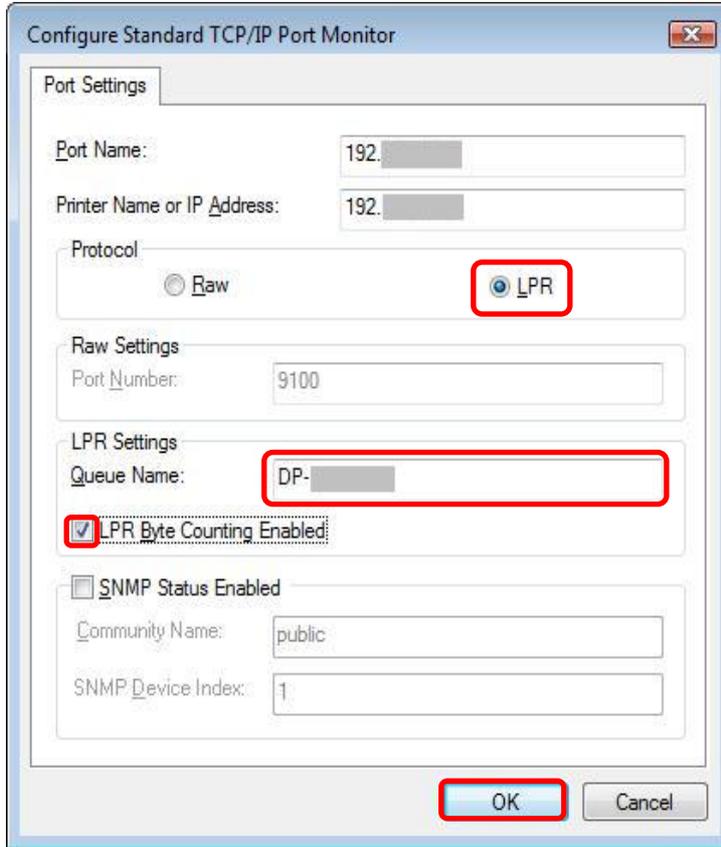


8

Click “Have Disk...”

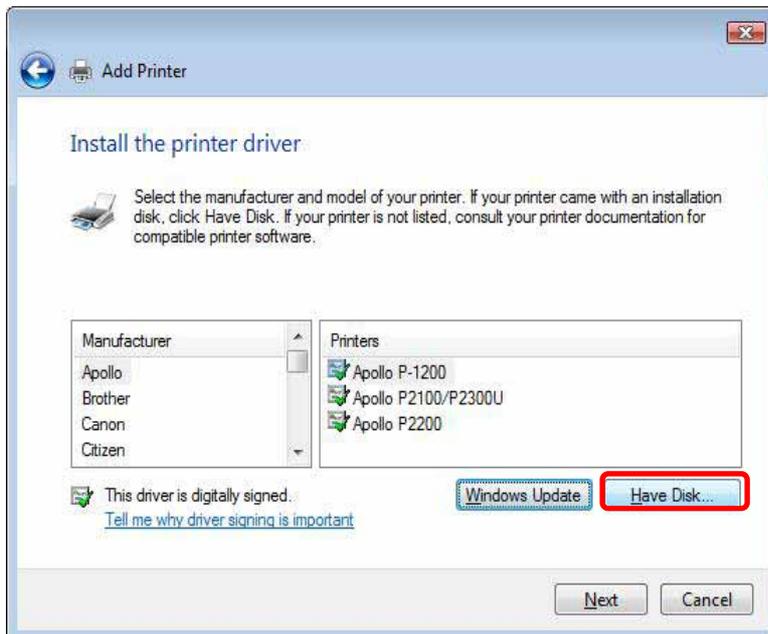


9

Click “Browse...”

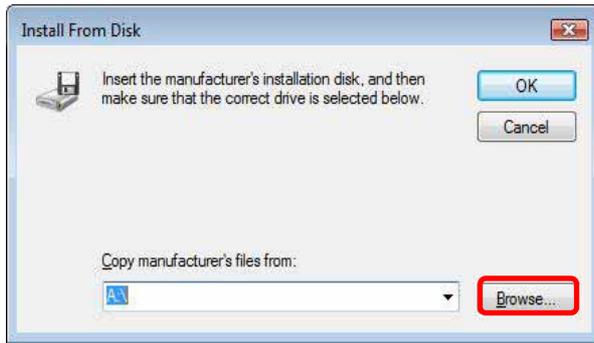


10

Browse to the location where the driver files are located on the PC. Click “Open”.

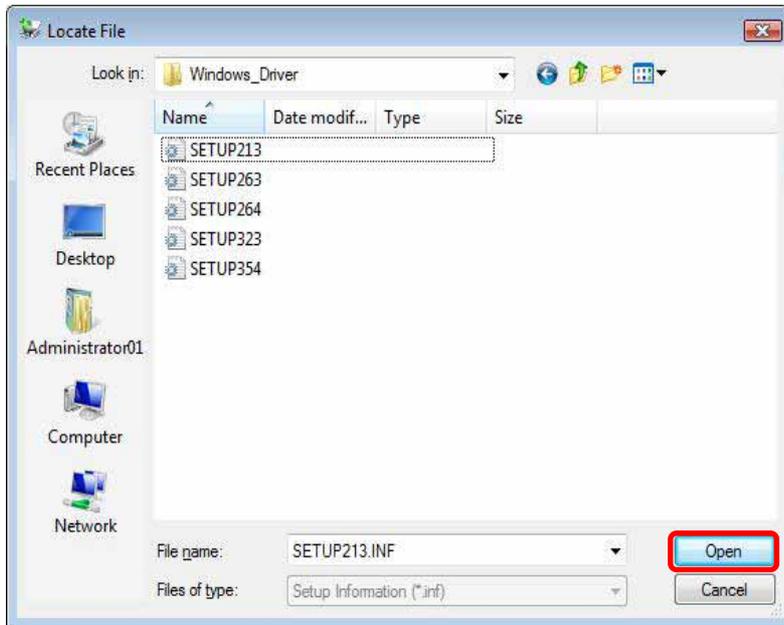


11

Click “OK”

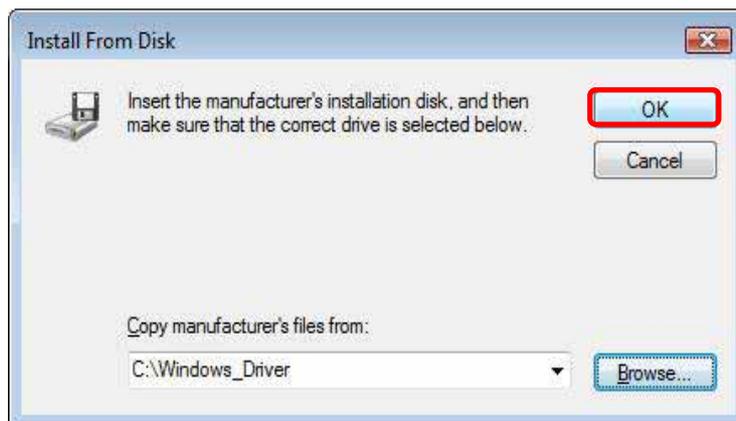


12 Select the printer Model from the list, then, click “Next”.

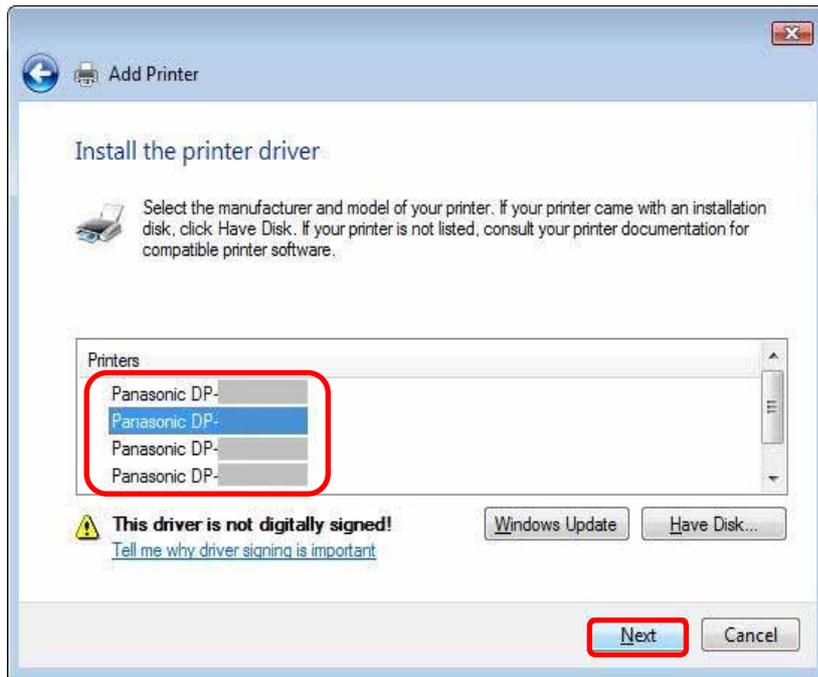


13 Type a printer name
Enter a Printer name in the Textbox, then click “Next.”

- If you wish to set this printer as the default, select “Set as the default printer”.

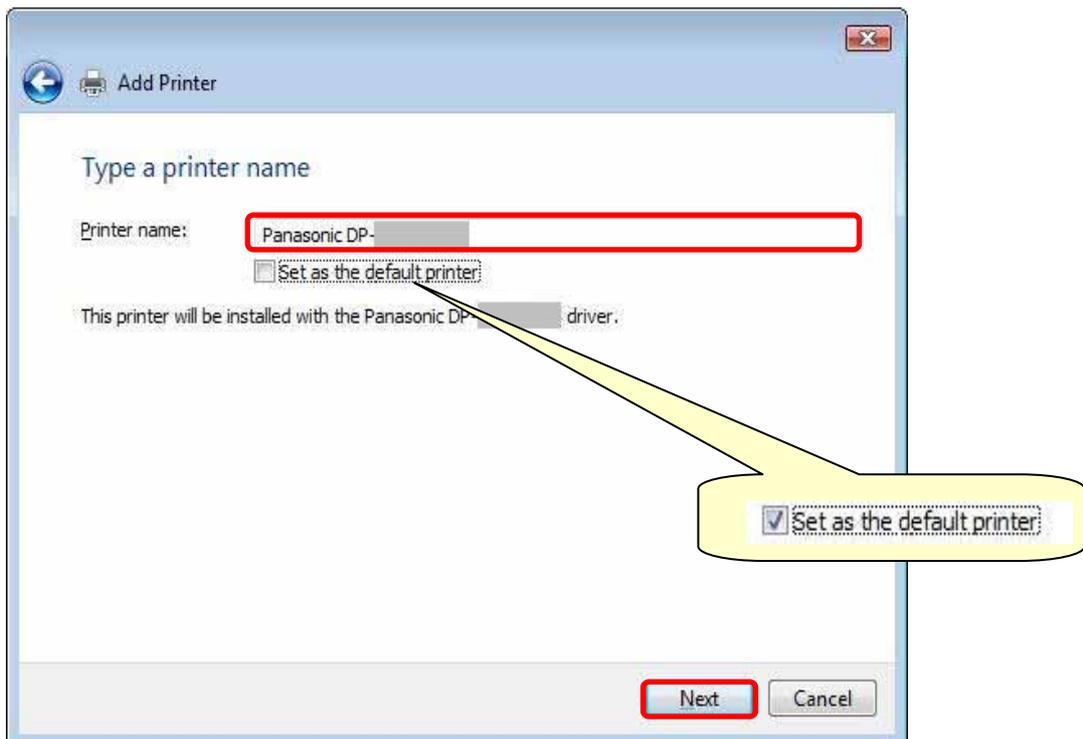

<< **For Windows Vista** >>

If this screen appears, click “ **Continue** ” .

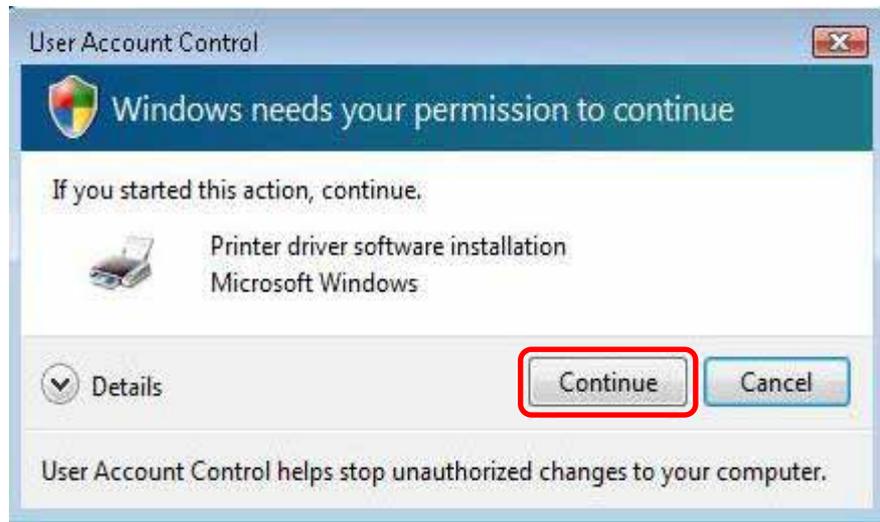

14

When the warning message appears click “**Install this driver software anyway**”.


For Windows Vista Skip to **Step 16**.

Note: Although the drivers are not digitally signed by Microsoft Corporation, we have verified proper operation within the Windows operating system environment.



15 << For Windows Server 2008 >>


Select whether to share this printer in the network, and click “Next”.

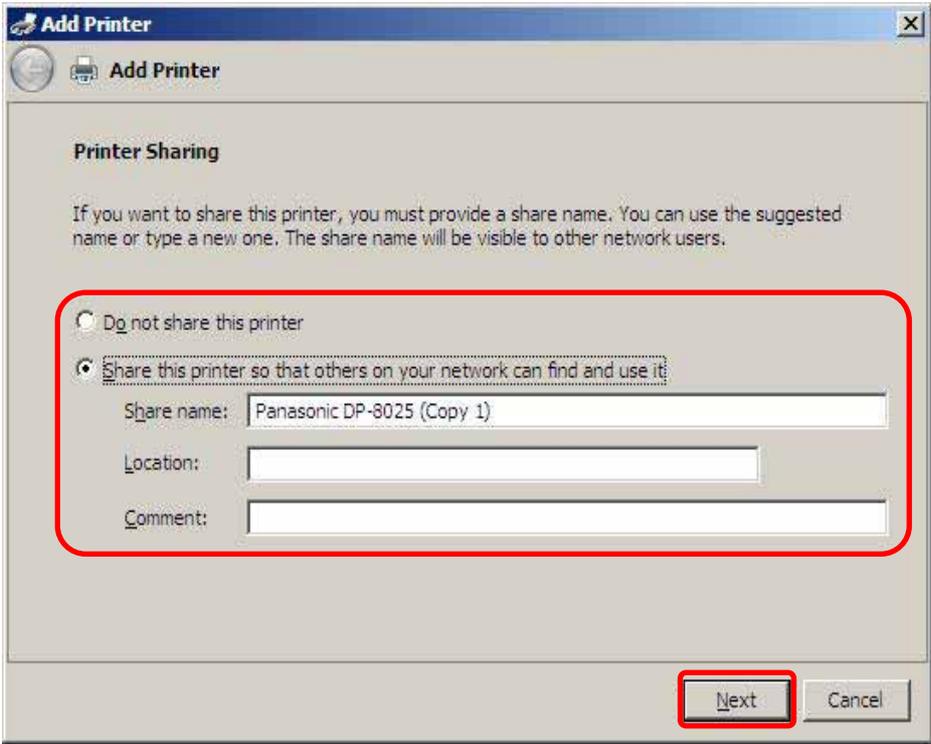

16 **Completing the Add Printer**

Click “Finish”.

- Click “Print a test page” to test the installed printer.

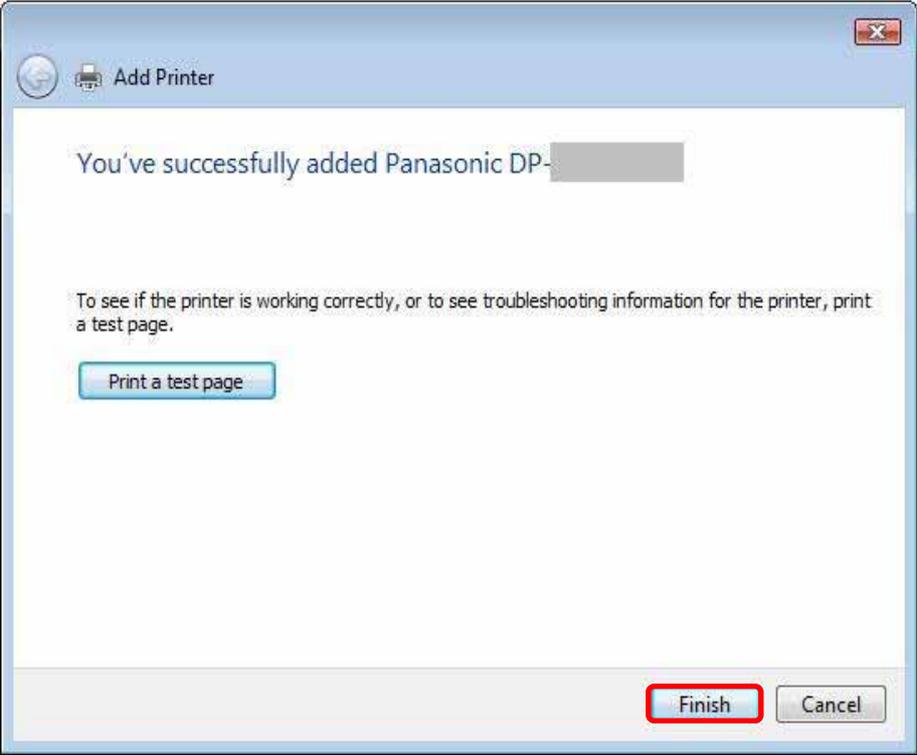

17

A new printer icon will appear in the <Printers> window.

